



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when using testing and measuring instruments during a road test	2
2.2 Safety measures when working on vehicles with a start/stop system	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 General repair instructions	4
3.2 Contact corrosion	7
<b>4 Technical data</b>	<b>8</b>
4.1 Allocation gearbox - engine	8
4.2 Capacities	8
4.3 Calculation of gear ratios	8
<b>5 Overview - power transmission</b>	<b>9</b>
5.1 Overview - power transmission - front-wheel drive	9
<b>6 Electrical components</b>	<b>11</b>
6.1 Overview of fitting locations - electrical components	11
<b>30 - Clutch</b>	<b>13</b>
<b>1 Clutch mechanism</b>	<b>13</b>
1.1 Overview of fitting locations – clutch mechanism	13
1.2 Assembly overview - pedal cluster	15
1.3 Assembly overview - clutch hydraulics	17
1.4 Assembly overview - clutch release mechanism	22
1.5 Removing and installing over-centre spring	23
1.6 Removing and installing clutch pedal	28
1.7 Removing and installing mounting bracket	34
1.8 Removing and installing clutch master cylinder	40
1.9 Removing and installing clutch slave cylinder together with release bearing	42
1.10 Removing and installing lines for clutch mechanism	43
1.11 Removing and installing bleeder	45
1.12 Checking clutch master cylinder and clutch slave cylinder	46
1.13 Removing and installing clutch position sender G476	46
1.14 Bleeding clutch mechanism	49
<b>2 Clutch</b>	<b>51</b>
2.1 Determining make of clutch	51
2.2 Assembly overview - clutch	52
2.3 Removing and installing clutch	56
<b>34 - Controls, housing</b>	<b>69</b>
<b>1 Selector mechanism</b>	<b>69</b>
1.1 Installation position - selector mechanism	69
1.2 Assembly overview - selector mechanism	71
1.3 Assembly overview – gear knob and cover	72
1.4 Assembly overview - Gear lever and selector housing	73
1.5 Assembly overview - Selector cables	75
1.6 Removing and installing gear knob	77
1.7 Dismantling and assembling selector mechanism	79
1.8 Removing and installing selector mechanism	84
1.9 Removing and installing gear selector cable and gate selector cable	90
1.10 Adjusting selector mechanism	92
1.11 Checking selector mechanism	94



1.12	Renewing selector shaft seal	94
<b>2</b>	<b>Removing and installing gearbox</b>	<b>96</b>
2.1	Removing gearbox	96
2.2	Installing gearbox	109
2.3	Specified torques for gearbox	116
<b>3</b>	<b>Assembly mountings</b>	<b>118</b>
3.1	Assembly overview – assembly mountings	118
<b>4</b>	<b>Transporting gearbox</b>	<b>121</b>
<b>5</b>	<b>Dismantling and assembling gearbox</b>	<b>122</b>
5.1	Schematic overview - gearbox	122
5.2	Assembly overview - gearbox	123
5.3	Assembly overview - gearbox housing and selector mechanism	124
5.4	Assembly overview - selector unit	126
5.5	Assembly overview - input shaft, output shafts, differential, selector rods	127
5.6	Assembly overview - selector forks	129
5.7	Dismantling and assembling gearbox	129
<b>6</b>	<b>Gearbox housing, clutch housing</b>	<b>144</b>
6.1	Assembly overview - gearbox housing	144
6.2	Assembly overview - clutch housing	146
6.3	Repairing gearbox housing	147
6.4	Repairing clutch housing	154
<b>7</b>	<b>Securing to engine and gearbox support</b>	<b>157</b>
<b>8</b>	<b>Gear oil</b>	<b>158</b>
8.1	Checking gear oil level	158
<b>35 - Gears, shafts</b>		<b>160</b>
<b>1</b>	<b>Input shaft</b>	<b>160</b>
1.1	Assembly overview - input shaft	160
1.2	Dismantling and assembling input shaft	161
1.3	Renewing input shaft seal	165
<b>2</b>	<b>Output shaft</b>	<b>167</b>
2.1	Assembly overview - output shaft	167
2.2	Dismantling and assembling output shaft	174
2.3	Adjusting output shaft	196
<b>39 - Final drive - differential</b>		<b>207</b>
<b>1</b>	<b>Oil seals</b>	<b>207</b>
1.1	Overview of fitting locations - seals	207
1.2	Renewing left seal	208
1.3	Renewing right oil seal	210
<b>2</b>	<b>Differential</b>	<b>214</b>
2.1	Assembly overview - differential	214
2.2	Dismantling and assembling differential	216
2.3	Adjusting differential	221
<b>3</b>	<b>Adjustment overview</b>	<b>225</b>