



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when tow-starting or towing	2
2 Identification	3
2.1 Gearbox identification	3
2.2 Identification of torque converter	3
3 Repair notes	4
3.1 General information	4
3.2 Rules for cleanliness	5
3.3 General repair instructions	5
3.4 Gaskets and seals	6
3.5 Nuts and bolts	7
4 Technical data	8
4.1 Capacities	8
4.2 Allocation gearbox - engine	8
5 Electrical components	9
5.1 Overview of fitting locations - electrical components	9
32 - Torque converter	16
1 Torque converter	16
1.1 Assembly overview - torque converter	16
1.2 Removing and installing torque converter	17
1.3 Checking torque converter	18
1.4 Draining torque converter	18
1.5 Removing and installing torque converter oil seal	19
37 - Controls, housing	21
1 Connecting vehicle diagnostic tester	21
2 Selector mechanism	22
2.1 Assembly overview - selector mechanism	22
2.2 Removing and installing selector mechanism	24
2.3 Checking and adjusting selector lever cable	33
2.4 Emergency release from position P	35
2.5 Removing and installing selector lever handle	36
2.6 Moving push-button in the handle to installation position	39
2.7 Checking selector mechanism	41
2.8 Removing and installing multifunction switch	42
2.9 Adjusting multifunction switch	46
2.10 Renewing selector shaft seal	48
3 Removing and installing gearbox	50
3.1 Removing gearbox	50
3.2 Installing gearbox	121
3.3 Specified torques for gearbox	124
4 Transporting gearbox	128
5 Securing to engine and gearbox support	130
6 ATF circuit	132
6.1 Assembly overview - ATF circuit	132
6.2 Removing and installing ATF cooler	134
7 ATF	140



7.1	Checking ATF level	140
7.2	Draining and filling ATF	144
38	- Gears, control	148
1	ATF system	148
1.1	Removing and installing oil pan	148
1.2	Removing and installing ATF strainer	150
2	Valve body	153
2.1	Assembly overview – valve body	153
2.2	Wire routing, connectors, connections and retainers on valve body, vehicles with 2nd generation gearbox	159
2.3	Removing and installing valve body	160
2.4	Removing and installing wiring harness for senders and solenoid valves	172
2.5	Removing and installing gearbox input speed sender G182 and gearbox output speed sender G195	176
39	- Final drive - differential	179
1	Oil seals	179
1.1	Overview of fitting locations - seals	179
1.2	Renewing left seal	179
1.3	Renewing right seal	182