



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when tow-starting or towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
2 Identification	3
2.1 Gearbox identification	3
3 Repair notes	5
3.1 General information	5
3.2 Safety functions of gearbox control unit	5
3.3 Rules for cleanliness	6
3.4 General repair instructions	6
4 Technical data	9
4.1 Capacities	9
4.2 Allocation gearbox - engine	9
5 Electrical components	10
5.1 Overview of fitting locations - electrical components	10
30 - Clutch	11
1 Clutch	11
1.1 Assembly overview - dual clutch	11
1.2 Removing and installing clutch end cover	13
1.3 Removing dual clutch	18
1.4 Installing dual clutch	20
34 - Controls, housing	27
1 Mechatronic unit	27
1.1 Removing and installing mechatronic unit	27
1.2 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509	48
2 Selector mechanism	50
2.1 Assembly overview - selector mechanism	50
2.2 Removing and installing selector mechanism	51
2.3 Checking and adjusting selector lever cable	57
2.4 Emergency release from position P	59
2.5 Removing and installing selector lever handle	60
2.6 Moving push button in the handle to installation position	62
2.7 Checking selector mechanism	64
2.8 Renewing oil seal for selector shaft	65
3 Removing and installing gearbox	68
3.1 Removing gearbox	68
3.2 Installing gearbox	90
3.3 Specified torques for gearbox	95
4 Assembly mounting	97
4.1 Assembly overview - assembly mountings	97
5 Transporting gearbox	99
6 Dismantling and assembling gearbox	100
6.1 Assembly overview - gearbox	100
7 Installing to engine and gearbox support	104
8 Gear oil circuit	105



8.1	Removing and installing gear oil cooler	105
8.2	Removing and installing gear oil pump	107
8.3	Removing and installing gear oil filter	110
9	Gear oil	113
9.1	Checking gear oil level	113
9.2	Draining and filling gear oil	116
35	Gears, shafts	120
1	Dismantling and assembling gears and shafts	120
39	Final drive - differential	121
1	Oil seals	121
1.1	Overview of fitting locations - seals	121
1.2	Renewing left oil seal	121
1.3	Renewing right oil seal	124