



Contents

1	Engine list	1
2	Service work	2
2.1	Information on fixed service	2
2.2	Service tables up to model year ►2020	4
2.3	Service tables as of model year 2021►	11
3	General information	19
3.1	Tow starting/towing for North American market	19
3.2	Raising vehicle with lifting platform or trolley jack	21
3.3	Entries in service schedule	23
3.4	Severe operating conditions	23
3.5	Vehicle data sticker	24
3.6	Connecting vehicle diagnostic tester	25
3.7	Vehicle identification number	26
3.8	Countries with hot climate	27
3.9	Country overview for petrol not compliant with EN 228	28
3.10	Engine code and engine number	29
3.11	Countries with high levels of dust	29
3.12	Identification plate	30
3.13	Shortened intervals for spark plug replacement	30
4	Descriptions of work	35
4.1	Swivel joints and suspension link mountings: inspecting	36
4.2	Automatic gearbox 09G: changing gear oil	37
4.3	Automatic gearbox 09S: changing gear oil	37
4.4	Automatic headlight control and static cornering light: checking function	38
4.5	Battery (12 V): checking battery terminal clamps for secure seating	39
4.6	Battery (12 V): checking with battery tester (always refer to workshop manual)	41
4.7	Status of battery (12 V): reading - sending diagnosis protocol via online connection	41
4.8	Front passenger front airbag: checking key switch and "ON/OFF function"	41
4.9	Tyres: checking condition, wear pattern, tyre pressure and tread depth	42
4.10	Brake and clutch system: change brake fluid	47
4.11	Brake system and shock absorbers: inspecting for leaks and damage	53
4.12	Brake fluid level: Check	54
4.13	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	55
4.14	Dual clutch gearbox (DSG) 0D9 - 6-speed: changing gear oil and filter	58
4.15	7-speed dual clutch gearbox (DSG) 0GC: changing gear oil	59
4.16	Electric windows: checking positioning (open and close functions)	59
4.17	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	59
4.18	Boots: inspecting	60
4.19	Interior and exterior body: inspecting for corrosion with doors and flaps open	60
4.20	Poly V-belt: renewing	61
4.21	Poly V-belt: checking condition	61
4.22	Cooling system: checking frost protection and coolant level	62
4.23	Air filter: cleaning housing and renewing filter element	65
4.24	Multi-purpose additive for petrol fuel: adding	70
4.25	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	71
4.26	Engine cover panel "top": removing and installing	72
4.27	Engine data plate with Certification Test Group code: checking if fitted and for condition, also checking CTG code against the code in the engine control unit	72
4.28	Motor compartment cover (noise insulation) "bottom": removing and installing	73
4.29	Engine oil level: checking	73
4.30	Engine oil: draining, renewing oil filter and replenishing engine oil	74
4.31	Engine oil: capacities and specifications up to model year ►2020	81



4.32	Engine oil: capacities and specifications as of model year 2021►	83
4.33	Panoramic sliding sunroof	83
4.34	Road test: performing (driving behaviour, noises, air conditioner etc.)	86
4.35	Wheel securing bolts: tightening to specified torque	86
4.36	Tyre Pressure Loss Indicator: calibrating	88
4.37	Tyre repair set: Checking	89
4.38	Window wash/wipe system and headlight washer system: checking function	89
4.39	Headlight adjustment: checking LED headlights	93
4.40	Headlight adjustment: checking fog lights	97
4.41	Service interval display: Reset	98
4.42	Service interval display: recoding	101
4.43	Track rods: checking clearance, attachment and boots	102
4.44	Dust and pollen filter: cleaning housing and renewing filter element	103
4.45	Transportation mode: switching off	103
4.46	Transportation devices: removing blocking pieces	103
4.47	Clock and date: setting	105
4.48	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	106
4.49	Front differential lock: changing oil	106
4.50	Toothed belt (petrol engines): renewing	106
4.51	Spark plugs: renewing	106
5	Exhaust emissions test	116
5.1	Exhaust emissions test for petrol engines	116
6	Glossary	119
7	---Change history---	121