



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on subframe	1
<b>2 Repair notes</b>	<b>2</b>
2.1 Leaks at shock absorbers	2
2.2 Noises from shock absorbers	2
2.3 Checking shock absorbers when removed	3
2.4 Steering rack	3
2.5 Gaskets and seals	4
2.6 Nuts and bolts	4
2.7 Electrical components	4
2.8 Raising suspension to unladen position (vehicles with coil springs)	5
<b>3 Evaluating accident vehicles</b>	<b>10</b>
3.1 Check list for evaluating running gear on accident vehicles	10
<b>4 Disposal</b>	<b>12</b>
4.1 Releasing gas and draining front gas-filled shock absorbers	12
4.2 Releasing gas and draining rear gas-filled shock absorbers	14
<b>40 - Front suspension</b>	<b>16</b>
<b>1 Front axle</b>	<b>16</b>
1.1 Overview of fitting locations – front axle	16
<b>2 Subframe</b>	<b>19</b>
2.1 Assembly overview – subframe	19
2.2 Removing and installing subframe without steering rack	19
2.3 Removing and installing subframe with steering rack	25
2.4 Repairing subframe	33
2.5 Repairing thread in longitudinal member	44
2.6 Fixing subframe in position	44
2.7 Lowering subframe	48
<b>3 Anti-roll bar</b>	<b>54</b>
3.1 Assembly overview – anti-roll bar	54
3.2 Removing and installing anti-roll bar	54
3.3 Removing and installing coupling rod	60
<b>4 Suspension strut, upper suspension link</b>	<b>62</b>
4.1 Assembly overview - suspension strut, upper suspension link	62
4.2 Removing and installing suspension strut	63
4.3 Repairing suspension strut	74
<b>5 Lower suspension link, swivel joint</b>	<b>79</b>
5.1 Assembly overview - lower suspension link, swivel joint	79
5.2 Removing and installing lower suspension link	80
5.3 Checking swivel joint	87
5.4 Removing and installing swivel joint	88
5.5 Renewing bonded rubber bush for lower suspension link	94
<b>6 Wheel bearing</b>	<b>102</b>
6.1 Assembly overview – wheel bearing assembly	102
6.2 Removing and installing wheel bearing housing	102
6.3 Removing and installing wheel bearing unit	108
<b>7 Drive shaft</b>	<b>113</b>
7.1 Overview - drive shaft	113
7.2 Assembly overview – drive shaft	114



7.3	Removing and installing drive shaft	122
7.4	Loosening and tightening threaded connections of drive shaft	137
7.5	Removing and installing drive shaft heat shield	138
7.6	Dismantling and assembling drive shaft	138
7.7	Checking outer constant velocity joint	159
7.8	Checking inner constant velocity joint	161
<b>42</b>	<b>- Rear suspension</b>	<b>164</b>
<b>1</b>	<b>Rear axle</b>	<b>164</b>
1.1	Overview – rear axle	164
1.2	Lowering rear axle	167
1.3	Removing and installing rear axle	171
<b>2</b>	<b>Axle beam</b>	<b>180</b>
2.1	Assembly overview – axle beam	180
2.2	Renewing bonded rubber bush for axle beam	180
<b>3</b>	<b>Subframe</b>	<b>189</b>
3.1	Assembly overview – subframe	189
3.2	Fixing subframe in position	189
<b>4</b>	<b>Anti-roll bar</b>	<b>195</b>
4.1	Assembly overview – anti-roll bar	195
4.2	Removing and installing anti-roll bar	195
4.3	Removing and installing coupling rod	197
<b>5</b>	<b>Suspension link, track rod</b>	<b>200</b>
5.1	Assembly overview - transverse link	200
5.2	Assembly overview – track rod	202
5.3	Removing and installing upper transverse link	202
5.4	Removing and installing lower transverse link	204
5.5	Removing and installing track rod	206
<b>6</b>	<b>Suspension strut, shock absorber, spring</b>	<b>208</b>
6.1	Assembly overview - suspension strut, shock absorber, spring	208
6.2	Removing and installing shock absorber	210
6.3	Repairing shock absorber	217
6.4	Removing and installing spring	220
<b>7</b>	<b>Wheel bearing assembly, trailing arm</b>	<b>230</b>
7.1	Assembly overview – wheel bearing assembly	230
7.2	Assembly overview - trailing arm	232
7.3	Removing and installing wheel bearing housing	233
7.4	Removing and installing wheel bearing unit	239
7.5	Renewing bonded rubber bush for wheel bearing housing	244
7.6	Removing and installing trailing arm with mounting bracket	248
7.7	Repairing trailing arm	252
<b>43</b>	<b>- Self-levelling suspension</b>	<b>257</b>
<b>1</b>	<b>Electronic damping control</b>	<b>257</b>
1.1	Overview of fitting locations - electronically controlled damping system	257
1.2	Removing and installing electronically controlled damping control unit J250	259
1.3	Removing and installing front body acceleration senders G341/G342	260
1.4	Removing and installing rear left body acceleration sender G699	263
<b>2</b>	<b>Vehicle level sender</b>	<b>265</b>
2.1	Assembly overview – front vehicle level senders	265
2.2	Assembly overview – rear vehicle level senders	266
2.3	Removing and installing front vehicle level senders G78/G289	267
2.4	Removing and installing rear vehicle level senders G76/G77	269
<b>44</b>	<b>- Wheels, tyres, vehicle geometry</b>	<b>272</b>



<b>1</b>	<b>Wheel alignment</b>	<b>272</b>
1.1	Notes for wheel alignment	272
1.2	Prerequisites for wheel alignment	273
1.3	Test preparations	273
1.4	Specifications for wheel alignment	275
1.5	Wheel alignment procedure	277
1.6	Necessity of wheel alignment	279
1.7	Vehicle data sticker	281
1.8	Adjusting camber at front wheels	282
1.9	Adjusting camber on rear axle	283
1.10	Adjusting toe at rear axle	285
1.11	Adjusting front axle toe	286
1.12	Wheel runout compensation	288
1.13	Checking maximum steering wheel angle	288
<b>2</b>	<b>Adaptive cruise control</b>	<b>290</b>
2.1	Calibrating adaptive cruise control	290
<b>3</b>	<b>Front camera for driver assist systems</b>	<b>296</b>
3.1	Calibrating front camera for assist systems	296
<b>48 - Steering</b>		<b>304</b>
<b>1</b>	<b>Steering wheel</b>	<b>304</b>
1.1	Assembly overview – steering wheel	304
1.2	Removing and installing steering wheel	304
<b>2</b>	<b>Steering column</b>	<b>307</b>
2.1	Assembly overview – steering column	307
2.2	Checking steering column for damage	308
2.3	Handling and transporting steering column	309
2.4	Removing and installing steering column	310
2.5	Removing and installing control unit for electronic steering column lock J764	321
<b>3</b>	<b>Steering rack</b>	<b>323</b>
3.1	Assembly overview – steering rack	323
3.2	Removing and installing steering rack	325
3.3	Removing and installing bellows	335
3.4	Removing and installing track rod	338
3.5	Removing and installing track rod ball joint	343
3.6	Repairing steering rack	345
<b>4</b>	<b>Sensors</b>	<b>350</b>
4.1	Removing and installing steering angle sender G85	350