



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using testing and measuring instruments during a road test	1
<b>2 Repair notes</b>	<b>2</b>
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
<b>98 - Assist systems</b>	<b>4</b>
<b>1 Fitting locations</b>	<b>4</b>
1.1 Overview of fitting locations – senders, sensors and control units in front section of vehicle	4
1.2 Overview of fitting locations – senders, sensors and control units in centre section of vehicle	5
1.3 Overview of fitting locations – senders, sensors and control units in rear section of vehicle	5
<b>2 Senders/sensors/control units</b>	<b>7</b>
2.1 Removing and installing adaptive cruise control unit J428	7
2.2 Removing and installing parking aid control unit J446	8
2.3 Removing and installing front parking aid warning buzzer H22	9
2.4 Removing and installing rear parking aid warning buzzer H15	10
2.5 Removing and installing front parking aid senders G252/G253/G254/G255	10
2.6 Removing and installing rear parking aid senders G203/G204/G205/G206	11
2.7 Removing and installing Blind Spot Monitor control unit J1086/J1087 without GLI equipment	12
2.8 Removing and installing Blind Spot Monitor control unit J1086/J1087 with GLI equipment	13
2.9 Removing and installing Blind Spot Monitor warning lamp in left exterior mirror K303/K304	15
2.10 Removing and installing front camera for driver assist systems R242	15
2.11 Removing and installing reversing camera R189	16
<b>3 Adaptive cruise control</b>	<b>17</b>
3.1 Components of adaptive cruise control	17
3.2 Assembly overview - Automatic adaptive cruise control	17
3.3 Adjusting/calibrating adaptive cruise control unit	18
<b>4 Parking aid / park assist steering / autonomous parking system</b>	<b>24</b>
4.1 Components of parking aid / park assist steering / autonomous parking system	24
<b>5 Blind Spot Monitor</b>	<b>25</b>
5.1 Assembly overview - Blind Spot Monitor	25
<b>6 Front camera for driver assist systems</b>	<b>26</b>
6.1 Components of front camera for assist systems	26
6.2 Calibrating front camera for assist systems	26
<b>7 Reversing camera system</b>	<b>35</b>
7.1 Overview of reversing camera system	35