



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
50 - Body - front	2
1 Lock carrier	2
1.1 Assembly overview – lock carrier	2
1.2 Removing and installing lock carrier	2
1.3 Moving to and back from service position	5
2 Wings	10
2.1 Assembly overview – wing	10
2.2 Removing and installing wing	10
3 Bulkhead	14
3.1 Assembly overview – bulkhead	14
3.2 Assembly overview – plenum chamber cover	14
3.3 Removing and installing bulkhead	15
3.4 Removing and installing plenum chamber cover	16
55 - Bonnet, rear lid	19
1 Bonnet	19
1.1 Assembly overview – bonnet	19
1.2 Assembly overview – Bowden cable	20
1.3 Removing and installing bonnet	21
1.4 Adjusting bonnet	22
1.5 Removing and installing bonnet lock	28
1.6 Removing and installing bonnet lock operating lever	31
1.7 Removing and installing striker pin	32
1.8 Removing and installing hinges	33
1.9 Removing and installing insulation	35
1.10 Removing and installing Bowden cable	36
1.11 Removing and installing bonnet stay	39
2 Rear lid	40
2.1 Assembly overview – rear lid	40
2.2 Removing and installing rear lid	41
2.3 Adjusting rear lid	42
2.4 Removing and installing bonnet lock	45
2.5 Removing and installing operating mechanism	47
2.6 Removing and installing hinges	48
2.7 Removing and installing striker pin	49
2.8 Removing and installing rear lid seal	50
3 Tank flap unit	51
3.1 Assembly overview – tank flap unit	51
3.2 Removing and installing tank flap unit	52
3.3 Removing and installing fuel tank flap	53
3.4 Removing and installing sealing collar	53
57 - Front doors, door components, central locking	55
1 Door	55
1.1 Assembly overview – door	55
1.2 Removing and installing inner door seal	58
1.3 Removing and installing outer door seal	60
1.4 Removing and installing door	63



1.5	Adjusting door	66
1.6	Adjusting striker pin	69
1.7	Removing and installing door arrester	70
2	Door components	73
2.1	Assembly overview – door components	73
2.2	Assembly overview – window regulator	74
2.3	Assembly overview – door handle and door lock	75
2.4	Removing and installing window regulator motor	76
2.5	Removing and installing window regulator	79
2.6	Removing and installing inner door cover	80
2.7	Removing and installing striker pin	82
2.8	Removing and installing door handle	84
2.9	Removing and installing mounting bracket	88
2.10	Removing and installing door lock	91
2.11	Removing and installing window channel	95
2.12	Removing and installing window slot inner seal	97
2.13	Removing and installing window slot outer seal	98
2.14	Removing and installing lock cylinder	100
2.15	Removing and installing cap on door handle	103
3	Central locking	109
3.1	Overview of fitting locations – central locking system	109
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	111
3.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	113
3.4	Removing and installing bonnet contact switch F266	114
3.5	Removing and installing tank filler flap locking motor V155	115
3.6	Removing and installing ignition key battery	117
3.7	Removing and installing cap on ignition key	121
58	Rear doors, door components	123
1	Door	123
1.1	Assembly overview – door	123
1.2	Removing and installing door	126
1.3	Adjusting door	129
1.4	Adjusting striker pin	132
1.5	Removing and installing door arrester	133
1.6	Removing and installing outer door seal	135
1.7	Removing and installing inner door seal	137
2	Door components	140
2.1	Assembly overview – door components	140
2.2	Assembly overview – window regulator	141
2.3	Assembly overview – door handle and door lock	142
2.4	Removing and installing window regulator motor	143
2.5	Removing and installing window regulator	146
2.6	Removing and installing inner door cover	148
2.7	Removing and installing striker pin	149
2.8	Removing and installing door handle	150
2.9	Removing and installing mounting bracket	152
2.10	Removing and installing door lock	154
2.11	Removing and installing window channel	158
2.12	Removing and installing window slot outer seal	160
2.13	Removing and installing window slot inner seal	161
2.14	Removing and installing cap on door handle	162
60	Sunroof	167



1	Repair instructions	167
1.1	Minimum drying time for adhesives	167
1.2	Tools and materials required for removal and installation	167
1.3	Preparing new sliding sunroof frame for installation	170
1.4	Preparing body flange for installing	172
1.5	Cleaning off excess adhesive	173
2	Sliding sunroof	174
2.1	Assembly overview – sliding sunroof	174
2.2	Assembly overview – sunroof roller blind	176
2.3	Assembly overview – wind deflector	176
2.4	Assembly overview - adhesive beads on sliding sunroof	177
2.5	Removing and installing sliding sunroof frame	179
2.6	Removing and installing wind deflector	183
2.7	Removing and installing glass panel	184
2.8	Removing and installing front trim for sliding sunroof	186
2.9	Removing and installing sliding sunroof adjustment control unit J245	189
2.10	Removing and installing sliding sunroof seals	190
2.11	Removing and installing sunroof roller blind	192
2.12	Removing and installing side trim	200
2.13	Removing and installing sunroof motor V1	200
2.14	Removing and installing tilt mechanism for sliding sunroof	201
2.15	Manual operation	206
63	- Bumpers	207
1	Bumper, front	207
1.1	Assembly overview – bumper cover	207
1.2	Assembly overview – bumper carrier	209
1.3	Removing and installing bumper cover	210
1.4	Repairing bumper cover	212
1.5	Installing holder for parking aid sender	212
1.6	Installing retainer for parking aid sender	217
2	Bumper, rear	222
2.1	Assembly overview – bumper cover	222
2.2	Assembly overview – bumper carrier	226
2.3	Removing and installing bumper cover	226
2.4	Removing and installing add-on parts	228
2.5	Repairing bumper cover	232
2.6	Removing and installing bumper carrier	232
2.7	Installing holder for parking aid sender	232
2.8	Installing retainer for parking aid sender	237
64	- Glazing	242
1	Repair instructions	242
1.1	Minimum drying times for bonded windows	242
1.2	Window repair	242
1.3	Installation instructions for bonded windows	243
1.4	Tools and materials required for removal and installation	244
1.5	Preparing old undamaged windows for installing	248
1.6	Preparing new windows for installing	249
1.7	Preparing body flange for installing	250
1.8	Cleaning off excess adhesive	251
2	Windscreen	252
2.1	Assembly overview – windscreen	252
2.2	Removing and installing windscreen	253
3	Rear windscreen	256



3.1	Assembly overview – rear window	256
3.2	Removing and installing rear window	257
4	Side windows	261
4.1	Assembly overview - rear side windows	261
4.2	Removing and installing rear side window	262
5	Door windows	265
5.1	Assembly overview - front door window	265
5.2	Assembly overview - rear door window	265
5.3	Removing and installing front door window	266
5.4	Removing and installing rear door window	268
66	- Exterior equipment	272
1	Radiator grille and front trim	272
1.1	Assembly overview – radiator grille	272
1.2	Removing and installing radiator grille	273
2	Spoiler	274
2.1	Assembly overview – spoiler	274
2.2	Removing and installing spoiler	274
3	Mouldings, trims, extensions	278
3.1	Assembly overview – side member trim	278
3.2	Assembly overview – water deflector	279
3.3	Assembly overview - B-pillar trim	279
3.4	Assembly overview – C-pillar trim	280
3.5	Assembly overview - heat shield	281
3.6	Removing and installing side member trim	282
3.7	Removing and installing water deflector	288
3.8	Removing and installing B-pillar trim on door	289
3.9	Removing and installing C-pillar trim on door	292
3.10	Removing and installing heat shield	294
4	Noise insulation	298
4.1	Assembly overview - noise insulation	298
4.2	Assembly overview – skid plate	299
5	Underbody cladding	301
5.1	Overview of fitting locations - underbody cladding	301
5.2	Assembly overview - bracing on underbody	301
5.3	Removing and installing tunnel cross-piece	302
6	Decorative film / protective film	306
6.1	Renewing protective films	306
7	Exterior mirror	309
7.1	Assembly overview – exterior mirror	309
7.2	Removing and installing exterior mirror	310
7.3	Removing and installing mirror glass	313
7.4	Removing and installing mirror adjustment unit	315
7.5	Removing and installing mirror cover	317
7.6	Removing and installing mirror frame	317
8	Wheel housing liner	319
8.1	Assembly overview – front wheel housing liner	319
8.2	Assembly overview – rear wheel housing liner	320
8.3	Assembly overview - sill panel cover	320
8.4	Removing and installing front wheel housing liner	321
8.5	Removing and installing rear wheel housing liner	322
8.6	Removing and installing side member cover	324
9	Lettering and badges	326
9.1	Dimensions - lettering and badges on rear	326



9.2	Dimensions – lettering and badges on sides	327
9.3	Removing and installing badges at front	328
9.4	Removing and installing lettering	330
9.5	Renewing lettering and badges at rear	331