



Contents

00 - Technical data	1
1 Basic instructions	1
1.1 Original joint	1
1.2 Used joining techniques	1
2 Vehicle identification data	3
2.1 Vehicle identification number	3
2.2 Type plate	4
2.3 Vehicle data sticker	5
3 Safety information	7
4 Moulded foam inserts	8
5 Galvanized body parts, high- and higher-strength and hot-formed body panels	10
6 Laser welding	13
7 Gaps/shut lines	14
7.1 Body - front	14
7.2 Body, centre	16
7.3 Body, rear	19
8 Body dimensions	22
8.1 Body - front	22
8.2 Body, centre	24
8.3 Body, rear	27
8.4 Body dimension for floor panel	29
9 Straightening bracket set	34
10 Portal gauge	35
50 - Body - front	36
1 Overview of parts	36
2 Renewing right bracket	37
2.1 Tools	38
2.2 Removing	38
2.3 Installing	39
3 Repairing threads for securing subframe	43
3.1 Contents of thread repair kit	44
3.2 Repairing threads	45
4 Renewing mounting bracket for subframe	49
4.1 Tools	50
4.2 Removing	50
4.3 Installing	51
5 Renewing front longitudinal member cross panel	55
5.1 Tools	56
5.2 Removing	56
5.3 Installing	57
6 Renewing upper wheel housing longitudinal member	60
6.1 Tools	61
6.2 Removing	61
6.3 Installing	62
7 Renewing hinge reinforcement for bonnet	67
7.1 Tools	68
7.2 Removing	68
7.3 Installing	69
8 Renewing upper inner wheel housing longitudinal member	72



8.1	Tools	73
8.2	Removing	73
8.3	Installing	74
9	Renewing front wheel housing	79
9.1	Tools	80
9.2	Removing	80
9.3	Installing	81
10	Renewing front wheel housing (part section)	86
10.1	Tools	87
10.2	Removing	87
10.3	Installing	88
11	Renewing front longitudinal member	92
11.1	Tools	93
11.2	Removing	93
11.3	Installing	94
12	Renewing front longitudinal member (left part section)	99
12.1	Tools	100
12.2	Removing	100
12.3	Installing	102
13	Renewing front longitudinal member (right part section)	106
13.1	Tools	107
13.2	Removing	107
13.3	Installing	109
14	Renewing studs	113
51 - Body - centre		115
1	Overview of parts	115
2	Renewing roof - vehicles without tilting sunroof	116
2.1	Tools	117
2.2	Removing	117
2.3	Installing	119
3	Renewing roof - vehicles with tilting sunroof	130
3.1	Tools	131
3.2	Removing	131
3.3	Installing	133
4	Renewing front cross member for roof	145
4.1	Tools	146
4.2	Removing	146
4.3	Installing	147
5	Renewing rear roof cross member	151
5.1	Tools	152
5.2	Removing	152
5.3	Installing	153
6	Renewing roof side member	156
6.1	Tools	157
6.2	Removing	158
6.3	Installing	159
7	Renewing A-pillar	165
7.1	Tools	166
7.2	Moulded foam inserts	167
7.3	Removing	167
7.4	Installing	169
8	Renewing upper A-pillar reinforcement (part section)	174



8.1	Tools	175
8.2	Moulded foam inserts	175
8.3	Removing	175
8.4	Installing	178
9	Renewing A-pillar reinforcement	186
9.1	Tools	187
9.2	Moulded foam inserts	187
9.3	Removing	187
9.4	Installing	188
10	Renewing B-pillar	194
10.1	Tools	196
10.2	Type plate	196
10.3	Moulded foam inserts	197
10.4	Removing	197
10.5	Installing	199
11	Renewing B-pillar reinforcement	205
11.1	Tools	206
11.2	Type plate	206
11.3	Moulded foam inserts	207
11.4	Removing	207
11.5	Installing	209
12	Renewing outer side member	217
12.1	Tools	218
12.2	Type plate	218
12.3	Moulded foam inserts	219
12.4	Removing	219
12.5	Installing	221
13	Renewing side member reinforcement	227
13.1	Tools	228
13.2	Moulded foam inserts	228
13.3	Removing	228
13.4	Installing	230
14	Renewing inner mounting for seat inner cross member	235
14.1	Tools	236
14.2	Removing	236
14.3	Installing	237
15	Renewing seat cross member	240
15.1	Tools	241
15.2	Removing	241
15.3	Installing	242
16	Renewing outer mounting for seat outer cross member	245
16.1	Tools	246
16.2	Removing	246
16.3	Installing	248
17	Renewing tunnel reinforcement	253
17.1	Tools	254
17.2	Removing	254
17.3	Installing	256
53 - Body - rear		260
1	Overview of parts	260
2	Renewing rear cross panel	261
2.1	Tools	262
2.2	Removing	262



2.3	Installing	264
3	Renewing rear cross member	268
3.1	Tools	269
3.2	Removing	269
3.3	Installing	270
4	Renewing tail light mounting	275
4.1	Tools	276
4.2	Removing	276
4.3	Installing	277
5	Renewing luggage compartment floor	280
5.1	Tools	281
5.2	Moulded foam inserts	281
5.3	Removing	281
5.4	Installing	282
6	Renewing floor panel	288
6.1	Tools	289
6.2	Removing	289
6.3	Installing	290
7	Renewing rear longitudinal member cross panel	294
7.1	Tools	295
7.2	Removing	295
7.3	Installing	296
8	Renewing rear longitudinal member (part section)	299
8.1	Tools	300
8.2	Removing	300
8.3	Installing	301
9	Renewing rear longitudinal member (part section - second part section of torsion beam axle)	304
9.1	Tools	305
9.2	Moulded foam inserts	305
9.3	Removing	305
9.4	Installing	307
10	Renewing rear longitudinal member (part section - second part section of multi-link suspension)	317
10.1	Tools	318
10.2	Moulded foam inserts	318
10.3	Removing	318
10.4	Installing	320
11	Permitted parting cuts on side panel	331
12	Renewing side panel (part section)	332
12.1	Tools	333
12.2	Moulded foam inserts	334
12.3	Removing	334
12.4	Installing	336
13	Renewing outer wheel housing liner	342
13.1	Tools	343
13.2	Moulded foam inserts	343
13.3	Removing	343
13.4	Installing	345
14	Renewing C-pillar reinforcement	351
14.1	Tools	352
14.2	Removing	352
14.3	Installing	353
15	Renewing rear shock absorber mounting	356



15.1	Tools	357
15.2	Removing	357
15.3	Installing	358
16	Renewing lock reinforcement	362
16.1	Tools	363
16.2	Removing	363
16.3	Installing	365