



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	2
2.1 Gearbox identification	2
3 Repair instructions	3
3.1 General repair instructions	3
4 Technical data	6
4.1 Capacities	6
4.2 Allocation gearbox - engine	6
4.3 Calculation of gear ratios	6
5 Overview - power transmission	7
5.1 Overview - power transmission - front-wheel drive	7
6 Electrical components	9
6.1 Overview of fitting locations - electrical components	9
30 - Clutch	10
1 Clutch operation	10
1.1 Assembly overview - pedal cluster	10
1.2 Assembly overview - clutch hydraulics	13
1.3 Assembly overview - clutch release mechanism	16
1.4 Removing and installing clutch pedal	17
1.5 Removing and installing over-centre spring	18
1.6 Removing and installing return spring	20
1.7 Removing and installing mounting bracket	23
1.8 Removing and installing bearing bush	27
1.9 Removing and installing clutch master cylinder	28
1.10 Removing and installing clutch slave cylinder	28
1.11 Removing and installing lines for clutch mechanism	30
1.12 Bleeding clutch mechanism	32
1.13 Checking clutch master cylinder and clutch slave cylinder	33
1.14 Removing and installing clutch position sender G476	33
1.15 Repairing clutch release mechanism	34
2 Clutch	36
2.1 Assembly overview - clutch	36
2.2 Removing and installing clutch	39
34 - Controls, housing	51
1 Selector mechanism	51
1.1 Installation position - selector mechanism	51
1.2 Assembly overview - gear knob and cover	52
1.3 Assembly overview - selector mechanism	53
1.4 Removing and installing gear knob	54
1.5 Removing and installing selector mechanism	56
1.6 Adjusting selector mechanism	62
1.7 Checking selector mechanism	65
1.8 Renewing oil seal for selector shaft	65
2 Removing and installing gearbox	67
2.1 Specified torques for gearbox	67
2.2 Removing gearbox	67
2.3 Install gearbox	83



3	Assembly mountings	92
3.1	Assembly overview - assembly mountings	92
4	Transporting gearbox	94
5	Dismantling and assembling gearbox	95
5.1	Schematic overview - gearbox	95
5.2	Assembly overview - cover for gearbox housing and 5th gear	97
5.3	Assembly overview - gearbox housing and selector mechanism	98
5.4	Assembly overview - selector unit	99
5.5	Assembly overview - input shaft, output shafts, differential, selector rods	100
5.6	Assembly overview - selector forks	101
5.7	Repairing selector unit	102
5.8	Repairing selector forks	103
5.9	Removing cover for gearbox housing and 5th gear	107
5.10	Dismantling and assembling gearbox	113
5.11	Installing cover for gearbox housing and 5th gear	125
6	Gearbox housing, clutch housing	129
6.1	Assembly overview - gearbox housing	129
6.2	Assembly overview - clutch housing	131
6.3	Repairing gearbox housing	132
6.4	Repairing clutch housing	139
7	Installing to engine and gearbox support	145
8	Gear oil	146
8.1	Checking gear oil level	146
8.2	Draining and filling gear oil	146
35 - Gears, shafts		149
1	Input shaft	149
1.1	Assembly overview - input shaft	149
1.2	Dismantling and assembling input shaft	152
1.3	Adjusting input shaft	158
2	Output shaft	163
2.1	Assembly overview - output shaft	163
2.2	Dismantling and assembling output shaft	166
2.3	Adjusting output shaft	176
3	Reverse shaft	183
3.1	Assembly overview - reverse shaft	183
3.2	Dismantling and assembling reverse shaft	184
39 - Final drive - differential		187
1	Oil seals	187
1.1	Overview of fitting locations - seals	187
1.2	Renewing left oil seal	188
1.3	Renewing right oil seal	190
1.4	Renewing input shaft seal	194
2	Differential	196
2.1	Assembly overview - differential	196
2.2	Dismantling and assembling differential	197
2.3	Adjusting differential	202
3	Adjustment overview	206