



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
<b>2 Identification</b>	<b>2</b>
2.1 Gearbox identification	2
<b>3 Repair instructions</b>	<b>4</b>
3.1 General repair instructions	4
<b>4 Technical data</b>	<b>8</b>
4.1 Capacities	8
4.2 Allocation gearbox - engine	8
4.3 Calculation of gear ratios	8
<b>5 Overview - power transmission</b>	<b>9</b>
5.1 Overview - power transmission - front-wheel drive	9
<b>6 Electrical components</b>	<b>11</b>
6.1 Overview of fitting locations - electrical components	11
<b>30 - Clutch</b>	<b>13</b>
<b>1 Clutch mechanism</b>	<b>13</b>
1.1 Assembly overview - pedal cluster	13
1.2 Assembly overview - clutch hydraulics	15
1.3 Assembly overview - clutch release mechanism	18
1.4 Removing and installing clutch pedal	19
1.5 Removing and installing bearing bush	20
1.6 Removing and installing over-centre spring	22
1.7 Removing and installing return spring	25
1.8 Removing and installing mounting bracket	28
1.9 Checking clutch master cylinder and clutch slave cylinder	33
1.10 Removing and installing clutch master cylinder	35
1.11 Removing and installing clutch slave cylinder	36
1.12 Removing and installing lines for clutch mechanism	38
1.13 Bleeding clutch mechanism	40
1.14 Removing and installing clutch position sender G476	42
1.15 Repairing clutch release mechanism	43
<b>2 Clutch</b>	<b>45</b>
2.1 Assembly overview - clutch	45
2.2 Removing and installing clutch	45
<b>34 - Controls, housing</b>	<b>51</b>
<b>1 Selector mechanism</b>	<b>51</b>
1.1 Installation position - selector mechanism	51
1.2 Assembly overview - gear knob and cover	52
1.3 Assembly overview - selector mechanism	53
1.4 Removing and installing gear knob	59
1.5 Removing and installing selector mechanism	60
1.6 Adjusting selector mechanism	64
1.7 Checking selector mechanism	67
1.8 Renewing selector shaft seal	67
<b>2 Removing and installing gearbox</b>	<b>69</b>
2.1 Specified torques for gearbox	69
2.2 Removing gearbox	69
2.3 Installing gearbox	84
<b>3 Assembly mountings</b>	<b>93</b>



3.1	Assembly overview - assembly mountings	93
<b>4</b>	<b>Transporting gearbox</b>	<b>97</b>
<b>5</b>	<b>Dismantling and assembling gearbox</b>	<b>99</b>
5.1	Schematic overview - gearbox	99
5.2	Assembly overview - gearbox	99
5.3	Assembly overview - cover for gearbox housing and 5th gear	100
5.4	Assembly overview - selector unit	102
5.5	Assembly overview - input shaft, output shafts, differential, selector rods	103
5.6	Assembly overview - selector forks	105
5.7	Repairing selector forks	106
5.8	Repairing selector unit	111
5.9	Dismantling and assembling gearbox	113
<b>6</b>	<b>Gearbox housing, clutch housing</b>	<b>126</b>
6.1	Assembly overview - clutch housing	126
6.2	Assembly overview - gearbox housing and clutch housing	126
6.3	Repairing clutch housing	128
<b>7</b>	<b>Securing to engine and gearbox support</b>	<b>131</b>
<b>8</b>	<b>Gear oil</b>	<b>133</b>
8.1	Checking gear oil level	133
<b>35 - Gears, shafts</b>		<b>135</b>
<b>1</b>	<b>Input shaft</b>	<b>135</b>
1.1	Assembly overview - input shaft	135
1.2	Dismantling and assembling input shaft	137
1.3	Renewing input shaft seal	149
<b>2</b>	<b>Output shaft</b>	<b>152</b>
2.1	Assembly overview - output shaft	152
2.2	Dismantling and assembling output shaft	154
<b>39 - Final drive - differential</b>		<b>163</b>
<b>1</b>	<b>Oil seals</b>	<b>163</b>
1.1	Overview of fitting locations - oil seals	163
1.2	Renewing left seal	163
1.3	Renewing right seal	166
<b>2</b>	<b>Differential</b>	<b>171</b>
2.1	Assembly overview - differential	171
2.2	Dismantling and assembling differential	173
2.3	Adjusting differential	181