



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety measures when working on vehicles with a start/stop system	2
2 Identification	3
2.1 Gearbox identification	3
3 Repair notes	6
3.1 General repair instructions	6
4 Technical data	10
4.1 Capacities	10
4.2 Allocation gearbox - engine	10
4.3 Calculation of gear ratios	11
5 Overview - power transmission	12
5.1 Overview - power transmission - front-wheel drive	12
6 Electrical components	14
6.1 Overview of fitting locations - electrical components	14
30 - Clutch	16
1 Clutch mechanism	16
1.1 Assembly overview - pedal cluster	16
1.2 Assembly overview - clutch hydraulics	18
1.3 Assembly overview - clutch release mechanism	23
1.4 Removing and installing clutch pedal	24
1.5 Removing and installing over-centre spring	26
1.6 Removing and installing return spring	30
1.7 Removing and installing mounting bracket	33
1.8 Removing and installing bearing bush	39
1.9 Removing and installing clutch master cylinder	40
1.10 Removing and installing clutch slave cylinder together with release bearing	41
1.11 Removing and installing lines for clutch mechanism	42
1.12 Removing and installing bleeder	46
1.13 Bleeding clutch mechanism	48
1.14 Checking clutch master cylinder and clutch slave cylinder	49
1.15 Removing and installing clutch position sender G476	49
1.16 Repairing clutch release mechanism	50
2 Clutch	53
2.1 Determining make of clutch	53
2.2 Assembly overview - clutch	54
2.3 Removing and installing clutch	57
34 - Controls, housing	74
1 Bevel box	74
1.1 Assembly overview - bevel box	74
1.2 Removing bevel box	76
1.3 Installing bevel box	85
2 Selector mechanism	91
2.1 Installation position - selector mechanism	91
2.2 Assembly overview - gear knob and cover	91
2.3 Assembly overview - selector mechanism	92
2.4 Removing and installing gear knob	94
2.5 Removing and installing selector mechanism	96
2.6 Adjusting selector mechanism	106



2.7	Checking selector mechanism	110
2.8	Renewing selector shaft seal	110
3	Removing and installing gearbox	113
3.1	Specified torques for gearbox	113
3.2	Removing gearbox	113
3.3	Installing gearbox	143
4	Assembly mountings	159
4.1	Assembly overview - assembly mountings	159
5	Front differential lock	163
5.1	Assembly overview - front differential lock	163
5.2	Allocation of front differential lock	163
5.3	Removing front differential lock	163
5.4	Installing front differential lock	167
6	Transporting gearbox	171
6.1	Transporting gearbox	171
6.2	Transporting front differential lock	172
7	Dismantling and assembling gearbox	173
7.1	Schematic overview - gearbox	173
7.2	Assembly overview - gearbox	175
7.3	Assembly overview - gearbox housing and selector mechanism	177
7.4	Assembly overview - selector unit	179
7.5	Assembly overview - input shaft, output shafts, differential, selector rods	180
7.6	Assembly overview - selector forks	184
7.7	Renewing selector shaft seal	185
7.8	Dismantling and assembling gearbox	187
8	Gearbox housing, clutch housing	208
8.1	Assembly overview - gearbox housing	208
8.2	Assembly overview - clutch housing	210
8.3	Repairing gearbox housing	212
8.4	Repairing clutch housing	221
9	Securing to engine and gearbox support	224
9.1	Installing manual gearbox to engine and gearbox support	224
9.2	Installing bevel box or front differential lock to engine and gearbox support	225
10	Gear oil	227
10.1	Distinguishing between different manual gearbox types when filling oil	227
10.2	Checking gear oil level	227
35 - Gears, shafts		232
1	Input shaft	232
1.1	Assembly overview - input shaft	232
1.2	Dismantling and assembling input shaft	233
1.3	Renewing input shaft seal	239
2	Output shaft	241
2.1	Assembly overview - output shaft	241
2.2	Dismantling and assembling output shaft	248
2.3	Adjusting output shaft	277
39 - Final drive - differential		289
1	Gear oil	289
1.1	Checking gear oil level	289
2	Oil seals	296
2.1	Overview of fitting locations - oil seals	296
2.2	Renewing left seal	298
2.3	Renewing right seal	301



3	Differential	316
3.1	Assembly overview - differential	316
3.2	Dismantling and assembling differential	321
3.3	Adjusting differential	335
4	Adjustment overview	340
5	Components of bevel box	341
5.1	Assembly overview - components of bevel box	341
5.2	Renewing output flange and redetermining thickness of shim	343
5.3	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft	344
5.4	Renewing bevel box seals	348
6	Components of front differential lock	361
6.1	Assembly overview - components of front differential lock	361
6.2	Checking function	363
6.3	Removing and installing pump V181	363
6.4	Removing and installing coupling for front differential lock	365
6.5	Removing and installing differential lock control unit J647	365
6.6	Renewing seals for front differential lock	366
6.7	Renewing ball bearing for flange shaft	370
7	Oil for front differential lock	373
7.1	Checking oil level for front differential lock	373
7.2	Draining and filling oil for front differential lock	374