



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions when tow-starting or towing	2
2 Identification	3
2.1 Gearbox identification	3
2.2 Identification of torque converter	3
3 Repair instructions	5
3.1 General information	5
3.2 Rules for cleanliness	6
3.3 General repair instructions	6
3.4 Gaskets and seals	7
3.5 Nuts and bolts	8
4 Technical data	9
4.1 Capacities	9
4.2 Allocation gearbox - engine	9
32 - Torque converter	10
1 Torque converter	10
1.1 Assembly overview - torque converter	10
1.2 Removing and installing torque converter	11
1.3 Draining torque converter	12
1.4 Checking torque converter	13
1.5 Removing and installing torque converter oil seal	13
37 - Controls, housing	15
1 ATF circuit	15
1.1 Assembly overview - ATF circuit	15
1.2 Removing and installing ATF cooler	15
2 ATF	20
2.1 Checking ATF level	20
2.2 Draining and filling ATF	24
3 Removing and installing gearbox	28
3.1 Specified torques for gearbox	28
3.2 Removing gearbox	29
3.3 Installing gearbox	54
4 Transporting gearbox	58
5 Securing to engine and gearbox support	60
6 Selector mechanism	62
6.1 Assembly overview - selector mechanism	62
6.2 Checking selector mechanism	64
6.3 Manual release from position P	65
6.4 Removing and installing selector mechanism	66
6.5 Removing and installing selector lever handle	74
6.6 Moving push-button in the handle to installation position	77
6.7 Removing and installing gear selector cable	79
6.8 Checking and adjusting selector lever cable	83
6.9 Removing and installing multifunction switch	85
6.10 Adjusting multifunction switch	89
6.11 Renewing selector shaft seal	90



38 - Gears, control	92
1 ATF system	92
1.1 Removing and installing sump	92
1.2 Removing and installing ATF strainer	94
2 Valve body	96
2.1 Assembly overview – valve body	96
2.2 Removing and installing valve body	99
2.3 Removing and installing wiring harness for senders and solenoid valves	101
2.4 Removing and installing gearbox input speed sender G182 and gearbox output speed sender G195	105
39 - Final drive - differential	106
1 Seals	106
1.1 Overview of fitting locations - oil seals	106
1.2 Renewing left seal	106
1.3 Renewing right seal	109
2 Gearbox control system	113
2.1 Removing and installing gearbox control unit	113