



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Notes on tow-starting/towing	2
1.4 Safety measures when using testers and measuring instruments during a road test	2
2 Identification	4
2.1 Gearbox identification	4
3 Repair instructions	7
3.1 General repair instructions	7
3.2 Gaskets and seals	8
3.3 Nuts and bolts	9
4 Technical data	10
4.1 Allocation gearbox - engine	10
4.2 Capacities	10
5 Electrical components	11
5.1 Overview of fitting locations - electrical components	11
30 - Clutch	13
1 Clutch	13
1.1 Assembly overview - dual clutch	13
1.2 Removing and installing clutch end cover	15
1.3 Removing dual clutch	20
1.4 Installing dual clutch	22
34 - Controls, housing	30
1 Mechatronic unit	30
1.1 Assembly overview - mechatronic unit	30
1.2 Removing and installing sump	35
1.3 Removing and installing mechatronic unit for dual clutch gearbox J743	42
2 Selector mechanism	65
2.1 Assembly overview - selector mechanism	65
2.2 Manual release from position P	68
2.3 Removing and installing selector lever handle	68
2.4 Moving push-button in the handle to installation position	72
2.5 Removing and installing selector mechanism	74
2.6 Checking selector mechanism	77
2.7 Checking and adjusting selector lever cable	78
2.8 Renewing selector shaft seal	80
3 Removing and installing gearbox	83
3.1 Removing gearbox	83
3.2 Installing gearbox	94
3.3 Specified torques for gearbox	99
4 Assembly mountings	100
4.1 Assembly overview - assembly mountings	100
5 Transporting gearbox	104
5.1 Transporting gearbox	104
5.2 Transporting front differential lock	104
6 Dismantling and assembling gearbox	106
6.1 Assembly overview - gearbox	106
7 Securing to engine and gearbox support	110



7.1	Installing gearbox to engine and gearbox support	110
7.2	Securing front differential lock to engine and gearbox support	111
8	Gear oil circuit	113
8.1	Removing and installing gear oil cooler	113
8.2	Removing and installing cover for gear oil pump	116
8.3	Removing and installing gear oil pump	118
8.4	Removing and installing gear oil filter	120
9	Gear oil	123
9.1	Checking gear oil level	123
9.2	Draining and filling gear oil	127
10	Front differential lock	131
10.1	Assembly overview - front differential lock	131
10.2	Removing front differential lock	131
10.3	Installing front differential lock	135
10.4	Removing and installing differential lock control unit J647	137
35 - Gears, shafts		139
1	Currently, no repairs can be made to gears and shafts	139
39 - Final drive - differential		140
1	Oil for front differential lock	140
1.1	Checking oil level for front differential lock	140
1.2	Draining and filling oil for front differential lock	141
2	Oil seals	146
2.1	Overview of fitting locations - seals	146
2.2	Renewing left seal	148
2.3	Renewing right seal	152
3	Components of front differential lock	162
3.1	Assembly overview - components of front differential lock	162
3.2	Checking function	164
3.3	Removing and installing pump for front differential lock V181	164
3.4	Removing and installing coupling for front differential lock	166
3.5	Renewing seals for front differential lock	166
3.6	Renewing ball bearing for flange shaft	175