



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when tow-starting or towing	2
2 Identification	3
2.1 Gearbox identification	3
3 Repair instructions	4
3.1 General information	4
3.2 Rules for cleanliness	4
3.3 General repair instructions	4
3.4 Gaskets and seals	5
3.5 Nuts and bolts	6
4 Technical data	7
4.1 Capacities	7
4.2 Allocation gearbox - engine	7
5 Electrical components	8
5.1 Overview of fitting locations - electrical components	8
30 - Clutch	11
1 Clutch	11
1.1 Assembly overview - dual clutch	11
1.2 Removing and installing clutch end cover	11
1.3 Removing dual clutch	16
1.4 Installing dual clutch	20
34 - Controls, housing	30
1 Mechatronic unit	30
1.1 Assembly overview - mechatronic unit	30
1.2 Removing and installing oil sump	31
1.3 Removing and installing mechatronic unit	34
2 Selector mechanism	38
2.1 Assembly overview - selector lever handle	38
2.2 Assembly overview - selector mechanism	38
2.3 Manual release from position P	40
2.4 Removing and installing selector lever handle	41
2.5 Moving push-button in the handle to installation position	45
2.6 Removing and installing selector mechanism	46
2.7 Checking selector mechanism	48
2.8 Checking and adjusting selector lever cable	49
2.9 Renewing selector shaft seal	51
3 Removing and installing gearbox	54
3.1 Specified torques for gearbox	54
3.2 Removing gearbox	54
3.3 Installing gearbox	65
4 Assembly mountings	70
4.1 Assembly overview - assembly mountings	70
5 Transporting gearbox	71
5.1 Transporting gearbox	71
5.2 Transporting front differential lock	72



6	Securing to engine and gearbox support	74
6.1	Securing to engine and gearbox support	74
6.2	Securing front differential lock to engine and gearbox support	75
7	Gear oil circuit	77
7.1	Assembly overview - gear oil circuit	77
7.2	Removing and installing gear oil cooler	77
7.3	Removing and installing gear oil filter	80
7.4	Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475	82
8	Gear oil	85
8.1	Overview of oil drain and inspection plugs	85
8.2	Tools for gear oil change	85
8.3	Checking gear oil level	87
8.4	Draining and filling gear oil	90
9	Front differential lock	93
9.1	Assembly overview - front differential lock	93
9.2	Removing front differential lock	93
9.3	Installing front differential lock	97
9.4	Removing and installing differential lock control unit J647	100
35	Gears, shafts	101
1	Currently, no repairs can be made to gears and shafts	101
39	Final drive - differential	102
1	Gear oil	102
1.1	Checking gear oil level	102
1.2	Draining and filling gear oil	103
2	Seals	108
2.1	Overview of fitting locations - oil seals	108
2.2	Renewing left seal	108
2.3	Renewing right seal	111
3	Components of front differential lock	114
3.1	Assembly overview - components of front differential lock	114
3.2	Removing and installing coupling for front differential lock	116
3.3	Removing and installing pump for front differential lock	116
3.4	Checking function	117
3.5	Renewing seals for front differential lock	118
3.6	Renewing ball bearing for flange shaft	127
3.7	Checking oil level	129
3.8	Draining and filling oil for front differential lock	131