



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on ignition system	2
1.5 Safety precautions when working on the cooling system	2
2 Identification	3
2.1 Engine number/engine data	3
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of lines	5
3.5 Fitting radiator and condensers	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	7
1.2 Separating engine and gearbox	19
1.3 Securing engine on engine and gearbox support	23
1.4 Installing engine	25
2 Assembly mountings	29
2.1 Assembly overview – assembly mountings	29
2.2 Supporting engine in installation position	32
2.3 Removing and installing engine mounting	36
2.4 Removing and installing gearbox mounting	37
2.5 Removing and installing pendulum support	38
2.6 Checking adjustment of assembly mountings	39
2.7 Adjusting assembly mountings	40
13 - Crankshaft group	43
1 Cylinder block (pulley end)	43
1.1 Assembly overview - poly V-belt drive	43
1.2 Removing and installing poly-V belt	47
1.3 Removing and installing tensioner for poly V-belt	52
1.4 Removing and installing vibration damper	53
1.5 Removing and installing engine support	54
1.6 Renewing crankshaft oil seal - pulley end	58
2 Cylinder block, gearbox end	62
2.1 Assembly overview - cylinder block, gearbox end	62
2.2 Removing and installing flywheel	66
2.3 Removing and installing drive plate	67
2.4 Removing and installing sealing flange on gearbox side	70
3 Crankshaft	83
3.1 Renewing needle bearing in crankshaft	83
3.2 Measuring axial clearance of crankshaft	85
4 Pistons and conrods	87
4.1 Assembly overview - pistons and conrods	87
4.2 Removing and installing pistons	91
4.3 Checking pistons and cylinder bores	92
4.4 Separating new conrod	94



4.5	Checking radial clearance of conrods	95
4.6	Removing and installing oil spray jets	96
15	- Cylinder head, valve gear	98
1	Cylinder head	98
1.1	Assembly overview - cylinder head	98
1.2	Assembly overview - camshaft housing	100
1.3	Removing and installing cylinder head	102
1.4	Removing and installing camshaft housing	106
1.5	Checking compression	109
2	Toothed belt drive	112
2.1	Assembly overview - toothed belt cover	112
2.2	Assembly overview - toothed belt	112
2.3	Checking valve timing	114
2.4	Removing toothed belt from camshaft	120
2.5	Removing and installing toothed belt	134
3	Valve gear	154
3.1	Assembly overview - valve gear	154
3.2	Removing and installing camshaft adjuster	156
3.3	Measuring axial play of camshaft	163
3.4	Removing and installing camshaft oil seal	164
3.5	Removing and installing camshaft control valve 1 N205	170
3.6	Removing and installing valve stem oil seals	171
4	Inlet and exhaust valves	181
4.1	Checking valve guides	181
4.2	Checking valves	182
4.3	Valve dimensions	182
17	- Lubrication	183
1	Sump, oil pump	183
1.1	Assembly overview - sump/oil pump	183
1.2	Removing and installing lower part of sump	187
1.3	Removing and installing oil pump	190
1.4	Removing and installing upper part of sump	192
1.5	Engine oil:	198
2	Engine oil cooler	199
2.1	Assembly overview - engine oil cooler	199
2.2	Removing and installing engine oil cooler	199
3	Crankcase ventilation	201
3.1	Assembly overview - crankcase breather system	201
3.2	Removing and installing oil separator	202
4	Oil filter, oil pressure switch	205
4.1	Assembly overview - oil filter/oil pressure switch	205
4.2	Removing and installing oil pressure switch F1	205
4.3	Checking oil pressure	206
4.4	Removing and installing oil filter housing	209
19	- Cooling	210
1	Cooling system/coolant	210
1.1	Connection diagram - coolant hoses	210
1.2	Draining and adding coolant	211
1.3	Checking cooling system for leaks	218
2	Coolant pump, regulation of cooling system	221
2.1	Assembly overview - coolant pump, thermostat	221
2.2	Assembly overview - coolant temperature sender	224



2.3	Removing and installing coolant pump	225
2.4	Removing and installing toothed belt pulley for coolant pump	229
2.5	Removing and installing thermostat	231
2.6	Removing and installing coolant temperature sender G62	234
2.7	Removing and installing radiator outlet coolant temperature sender G83	235
3	Coolant pipes	237
3.1	Assembly overview - coolant pipes	237
3.2	Removing and installing coolant pipes	237
4	Radiator, radiator fan	240
4.1	Assembly overview - radiator/radiator fan	240
4.2	Assembly overview – radiator cowl and radiator fan	241
4.3	Removing and installing radiator	242
4.4	Removing and installing radiator cowl	245
4.5	Removing and installing radiator fan	245
24	Mixture preparation - injection	247
1	Injection system	247
1.1	Overview of fitting locations - injection system	247
1.2	Assembly overview - fuel system	251
2	Injectors	254
2.1	Assembly overview - fuel rail with injectors	254
2.2	Removing and installing fuel rail	254
2.3	Removing and installing injectors	257
2.4	Checking injectors	258
2.5	Cleaning injectors	262
3	Air filter	264
3.1	Assembly overview - air filter housing	264
3.2	Removing and installing air filter housing	265
4	Intake manifold	267
4.1	Assembly overview – intake manifold	267
4.2	Removing and installing intake manifold	269
4.3	Removing and installing throttle valve module GX3	272
4.4	Cleaning throttle valve module GX3	272
5	Senders and sensors	274
5.1	Removing and installing intake manifold sender GX9	274
6	Engine/motor control unit	275
6.1	Removing and installing engine control unit J623	275
7	Lambda probe	283
7.1	Assembly overview - Lambda probe	283
7.2	Removing and installing lambda probe	284
26	Exhaust system	287
1	Exhaust pipes and silencers	287
1.1	Assembly overview – silencers	287
1.2	Separating exhaust pipes from silencers	294
1.3	Removing and installing silencer	296
1.4	Aligning exhaust system free of stress	300
1.5	Checking exhaust system for leaks	301
2	Emission control	302
2.1	Assembly overview – emission control	302
2.2	Removing and installing catalytic converter	305
28	Ignition system	308
1	Ignition system	308



1.1	Assembly overview - ignition system	308
1.2	Test data, spark plugs	310
1.3	Removing and installing ignition coils with output stage	310
1.4	Removing and installing knock sensor	312
1.5	Removing and installing Hall sender	313
1.6	Removing and installing engine speed sender G28	314