



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair notes	5
3.4 Foreign objects in engine	6
3.5 Contact corrosion	6
3.6 Routing and attachment of lines	6
3.7 Fitting radiator and condensers	6
3.8 Checking vacuum system	6
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Removing and installing engine</b>	<b>8</b>
1.1 Removing engine	8
1.2 Separating engine and gearbox	23
1.3 Securing engine on engine and gearbox support	29
1.4 Installing engine	32
<b>2 Assembly mountings</b>	<b>36</b>
2.1 Assembly overview - assembly mountings	36
2.2 Removing and installing engine mounting	38
2.3 Removing and installing gearbox mounting	38
2.4 Removing and installing pendulum support	40
2.5 Supporting engine in installation position	41
2.6 Adjusting assembly mountings	45
2.7 Checking adjustment of assembly mountings	46
<b>3 Engine cover panel</b>	<b>48</b>
3.1 Removing and installing engine cover	48
<b>13 - Crankshaft group</b>	<b>49</b>
<b>1 Cylinder block (pulley end)</b>	<b>49</b>
1.1 Assembly overview - cylinder block (pulley end)	49
1.2 Removing and installing poly-V belt	52
1.3 Removing and installing tensioner for poly V-belt	54
1.4 Removing and installing vibration damper	54
1.5 Removing and installing bracket for ancillaries	61
1.6 Removing and installing engine support	64
<b>2 Cylinder block, gearbox end</b>	<b>66</b>
2.1 Assembly overview - cylinder block, gearbox end	66
2.2 Removing and installing flywheel	67
2.3 Removing and installing sealing flange on gearbox side	68
<b>3 Crankshaft</b>	<b>74</b>
3.1 Assembly overview - crankshaft	74
3.2 Crankshaft dimensions	76
3.3 Allocation of main bearing shells	76



3.4	Renewing needle bearing in crankshaft	78
3.5	Measuring axial clearance of crankshaft	81
3.6	Measuring radial clearance of crankshaft	82
3.7	Removing and installing sender wheel	83
<b>4</b>	<b>Balancer shaft</b>	<b>85</b>
4.1	Assembly overview - balance shaft	85
4.2	Removing and installing balance shaft	86
<b>5</b>	<b>Pistons and conrods</b>	<b>93</b>
5.1	Assembly overview - pistons and conrods	93
5.2	Removing and installing pistons	95
5.3	Checking pistons and cylinder bores	96
5.4	Separating new conrod	99
5.5	Checking radial clearance of conrods	100
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>101</b>
<b>1</b>	<b>Cylinder head</b>	<b>101</b>
1.1	Assembly overview - cylinder head	101
1.2	Assembly overview - camshaft housing	104
1.3	Removing and installing cylinder head	106
1.4	Removing and installing vacuum pump	113
1.5	Checking compression	115
<b>2</b>	<b>Cover for timing chain</b>	<b>118</b>
2.1	Assembly overview - cover for timing chain	118
2.2	Removing and installing timing chain cover	121
2.3	Renewing seal for vibration damper	129
<b>3</b>	<b>Chain drive</b>	<b>132</b>
3.1	Assembly overview - camshaft timing chains	132
3.2	Assembly overview - drive chain for balance shaft	136
3.3	Removing and installing camshaft timing chain	139
3.4	Removing and installing drive chain for balance shaft	155
3.5	Checking chain elongation	155
3.6	Checking valve timing	156
<b>4</b>	<b>Valve gear</b>	<b>159</b>
4.1	Assembly overview - valve gear	159
4.2	Removing and installing camshaft	162
4.3	Removing and installing camshaft control valve 1 N205	181
4.4	Removing and installing exhaust camshaft control valve 1 N318	181
4.5	Removing and installing valve stem oil seals	181
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>192</b>
5.1	Checking valve guides	192
5.2	Checking valves	193
5.3	Valve dimensions	193
<b>17</b>	<b>Lubrication</b>	<b>194</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>194</b>
1.1	Assembly overview - sump/oil pump	194
1.2	Engine oil:	197
1.3	Removing and installing lower part of sump	198
1.4	Removing and installing upper part of sump	202
1.5	Removing and installing oil pump	207
1.6	Removing and installing oil level and oil temperature sender G266	210
<b>2</b>	<b>Engine oil cooler</b>	<b>212</b>
2.1	Assembly overview - engine oil cooler	212
2.2	Removing and installing engine oil cooler	212
2.3	Removing and installing mechanical switching valve	214



<b>3</b>	<b>Crankcase ventilation</b>	<b>215</b>
3.1	Assembly overview - crankcase breather system	215
3.2	Removing and installing oil separator	216
<b>4</b>	<b>Oil filter, oil pressure switch</b>	<b>217</b>
4.1	Assembly overview - oil filter	217
4.2	Assembly overview - oil pressure switches/oil pressure control	217
4.3	Removing and installing oil pressure switch F1	219
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	220
4.5	Removing and installing stage 3 oil pressure switch F447	221
4.6	Checking oil pressure	223
4.7	Removing and installing piston cooling jet control valve N522	227
4.8	Removing and installing oil pressure regulating valve N428	227
<b>19</b>	<b>Cooling</b>	<b>229</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>229</b>
1.1	Connection diagram - coolant hoses	229
1.2	Checking cooling system for leaks	236
1.3	Draining and adding coolant	239
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>247</b>
2.1	Assembly overview - coolant pump, thermostat	247
2.2	Assembly overview - electric coolant pump	250
2.3	Assembly overview - coolant temperature sender	253
2.4	Removing and installing electric coolant pump	254
2.5	Removing and installing coolant valves	257
2.6	Removing and installing coolant pump	264
2.7	Removing and installing toothed belt for coolant pump	267
2.8	Removing and installing actuator for engine temperature regulation N493	270
2.9	Removing and installing coolant temperature sender G62	272
2.10	Removing and installing radiator outlet coolant temperature sender G83	273
<b>3</b>	<b>Coolant pipes</b>	<b>275</b>
3.1	Assembly overview - coolant pipes	275
3.2	Removing and installing coolant pipes	275
3.3	Removing and installing upper coolant pipes	277
3.4	Removing and installing coolant pipes for gearbox	278
<b>4</b>	<b>Radiator, radiator fan</b>	<b>281</b>
4.1	Assembly overview - radiator, radiator fan	281
4.2	Assembly overview - auxiliary radiator	283
4.3	Assembly overview - radiator cowl and radiator fan	284
4.4	Removing and installing radiator	285
4.5	Removing and installing radiator cowl	287
4.6	Removing and installing radiator fan	289
4.7	Removing and installing auxiliary radiator	290
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>293</b>
<b>1</b>	<b>Turbocharger</b>	<b>293</b>
1.1	Assembly overview - turbocharger	293
1.2	Removing and installing turbocharger	296
1.3	Adjusting charge pressure positioner V465	302
1.4	Removing and installing turbocharger air recirculation valve N249	304
<b>2</b>	<b>Charge air system</b>	<b>305</b>
2.1	Assembly overview - charge air system	305
2.2	Assembly overview - charge-air hose connections	307
2.3	Removing and installing charge air cooler	307
2.4	Removing and installing charge pressure sender G31	310
2.5	Checking charge air system for leaks	311



2.6	Removing and installing air intake pipe	313
<b>24</b>	<b>Mixture preparation - injection</b>	<b>316</b>
<b>1</b>	<b>Injection system</b>	<b>316</b>
1.1	Overview of fitting locations - injection system	316
1.2	Releasing high pressure in fuel system	331
<b>2</b>	<b>Injectors</b>	<b>333</b>
2.1	Assembly overview - fuel rail with injectors	333
2.2	Removing and installing fuel rail	335
2.3	Removing and installing injectors	336
2.4	Renewing seals on injectors	344
2.5	Cleaning injectors	347
<b>3</b>	<b>Air filter</b>	<b>349</b>
3.1	Assembly overview - air filter housing	349
3.2	Removing and installing air filter housing	351
3.3	Removing and installing air guide on lock carrier	353
<b>4</b>	<b>Intake manifold</b>	<b>355</b>
4.1	Assembly overview - intake manifold	355
4.2	Assembly overview - lower part of intake manifold with fuel rail	357
4.3	Removing and installing intake manifold	359
4.4	Removing and installing throttle valve module GX3	366
4.5	Cleaning throttle valve module	368
4.6	Checking intake manifold change-over	369
<b>5</b>	<b>Senders and sensors</b>	<b>372</b>
5.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	372
5.2	Removing and installing fuel pressure sender G247	374
5.3	Checking fuel pressure sender G247	376
5.4	Removing and installing fuel pressure sender for low-pressure G410	379
5.5	Removing and installing intake manifold sender GX9	381
<b>6</b>	<b>Engine/motor control unit</b>	<b>383</b>
6.1	Assembly overview - engine/motor control unit	383
6.2	Removing and installing engine control unit J623	383
<b>7</b>	<b>High-pressure pump</b>	<b>389</b>
7.1	Assembly overview - high-pressure pump	389
7.2	Removing and installing high-pressure pump	391
7.3	Removing and installing high-pressure pipe	396
<b>8</b>	<b>Lambda probe</b>	<b>400</b>
8.1	Assembly overview - Lambda probe	400
8.2	Removing and installing lambda probe	401
<b>26</b>	<b>Exhaust system</b>	<b>405</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>405</b>
1.1	Assembly overview - silencers	405
1.2	Separating exhaust pipes from silencers	407
1.3	Removing and installing silencer	410
1.4	Aligning exhaust system free of stress	411
1.5	Checking exhaust system for leaks	412
1.6	Installation position of clamp	413
<b>2</b>	<b>Emission control</b>	<b>415</b>
2.1	Assembly overview - emission control	415
2.2	Removing and installing catalytic converter	420
2.3	Removing and installing particulate filter	426
<b>28</b>	<b>Ignition system</b>	<b>427</b>



---

<b>1</b>	<b>Ignition system</b> .....	<b>427</b>
1.1	Assembly overview - ignition system .....	427
1.2	Test data, spark plugs .....	429
1.3	Removing and installing ignition coils with output stage .....	429
1.4	Removing and installing knock sensor 1 G61 .....	431
1.5	Removing and installing Hall sender .....	432
1.6	Removing and installing engine speed sender G28 .....	433