

001 - Anti-lock brake system (ABS) , (1AS),(1AT)	1-7
1. Anti-lock brake system (ABS) , (1AS),(1AT)	1
2. Rear right speed sensor, Rear left speed sensor, ABS control unit, Front right ABS inlet valve, Front right ABS outlet valve, Vehicle stabilization program switch valve 1, Fuse holder C, ABS hydraulic pump, Right parking brake motor	2
3. Front right speed sensor, Front left speed sensor, Clutch position sender, Vacuum sender, ABS control unit, Rear left ABS outlet valve, Vehicle stabilization program switch valve 1, ABS hydraulic pump	3
4. Lateral acceleration sender, Brake pressure sender 1, Yaw rate sender, Longitudinal acceleration sender, ABS control unit, Left parking brake motor	4
5. Parking brake button	5
6. Switch module 2 in centre console, Front right brake pad wear sender, Onboard supply control unit, Data bus diagnostic interface	6
7. Data bus diagnostic interface, Dash panel insert	7
002 - Electromechanical steering , (1N3),(1N7)	8-10
1. Electromechanical steering , (1N3),(1N7)	8
2. Steering angle sender, ABS control unit, Power steering control unit, Data bus diagnostic interface, Fuse holder A, Electromechanical power steering motor	9
3. Steering moment sender, Power steering control unit	10
003 - Front passenger door	11-16
1. Front passenger door	11
2. Front right bass loudspeaker, Coupling point for front right door	12
3. Front passenger exterior door handle, Side airbag crash sensor on front passenger side, Front passenger door control unit, Data bus diagnostic interface, Coupling point for front right door, Passenger side entry light	13
4. Front passenger door control unit, Coupling point for front right door, Front passenger door lock unit, Light for passenger door background lighting	14
5. Front passenger side window regulator button, Front passenger door control unit, Light for passenger side interior door handle illumination, Passenger side exterior mirror, Light 2 for passenger door background lighting	15
6. Front passenger door control unit, Onboard supply control unit, Blind Spot Monitor warning lamp in right exterior mirror, Lane change assist warning lamp in right exterior mirror, Passenger side exterior mirror, Right window regulator motor	16
004 - Earthing concept	17-33
1. Earthing concept	17
2. Battery, Battery monitor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	18
3. Oil pressure switch, Treble horn, Air conditioner compressor regulating valve, Coupling point in engine compartment, left, Exterior socket, 230 V, 110 V, Charge air cooling pump, Earth connection 4, in engine compartment wiring harness	19
4. Oil level and oil temperature sender, Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox, Left fog light bulb, Front left headlight, Gearbox, Relay and fuse carrier 3, Coupling point in engine compartment, left, Windscreen wiper motor	20
5. Brake light switch, Brake fluid level warning contact, Automatic glow period control unit, Axle differential lock control unit, Coupling point in engine compartment, left, Coupling point on engine, top centre	21
6. Clutch position sender, Radiator fan control unit, Adaptive cruise control unit, Right fog light bulb, Coupling point in engine compartment, left, Gearbox oil cooling pump, Heated windscreen, Left washer jet heater element, Right washer jet heater element	22
7. Bonnet contact switch, Front right brake pad wear sender, Air quality sensor, Ethanol concentration sender, Pressure sender for refrigerant circuit, Bass horn, Anti-theft alarm system horn, Alarm horn, Control unit for structure-borne sound, Front right headlight, Relay and fuse carrier 5, Vacuum pump for brakes	23
8. Hazard warning light switch, Parking brake button, Heater and air conditioning controls, Switch module 1 in centre console, Switch module 2 in centre console, Selector lever, ABS control unit, 12 V socket 2, Radiator fan, Auxiliary air heater element	24
9. Driver exterior door handle, Starter button, Driver door control unit, Remote starting system relay, Storage compartment illumination bulb, Light 1 for dash panel contour lighting, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Fuse holder C, Coupling point for rear left door, Coupling point in front left door, Coupling point for front left door, USB charging socket 1, Rear left window regulator motor, Light for passenger door background lighting	25
10. Operating unit for front left seat adjustment, Driver seat lumbar support adjustment switch, Onboard supply control unit, Digital sound package control unit, Data bus diagnostic interface, Seat occupied recognition control unit, Coupling point for front left seat, Driver door lock unit, Seat heating (driver side)	26
11. Rotarv liiht switch. Interior mirror. Air humiditv. rain and liiht sensor. Terminal 15 voltae	27

supply relay, Parking aid control unit, Steering column electronics control unit, Control unit for electronic steering column lock, Relay for power sockets, Dash panel insert, Front left footwell light, Front camera for driver assist systems, Fuse holder C, Front interior light	
12. Front passenger exterior door handle, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Anti-theft alarm sensor, Fresh air blower control unit, Sliding sunroof adjustment control unit, Front passenger door control unit, Coupling point for roof, centre, Coupling point in front right seat, Coupling point for front right seat, Coupling point in front right door, Coupling point for front right door, Diagnostic connection, Rear interior light, Rear interior light, Heated backrest for front passenger seat	28
13. Operating unit for preparation for mobile telephone, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Interface for entry and start system, Front right footwell light, Roof aerial, Storage compartment with interface for mobile telephone, Coupling point for rear right door, Front passenger door lock unit, Rear right window regulator motor	29
14. Rear lid handle, Rear lid handle release button, Electronically controlled damping control unit, Left tail light cluster, Left tail light cluster 2, Right tail light cluster 2, Left number plate light	30
15. Rear lid lock unit, Fuel delivery unit, Fuel pump control unit, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Right tail light cluster, High-level brake light bulb, Frequency modulation (FM) frequency filter in negative wire, Right number plate light	31
16. Rear left seat heating switch, Rear right seat heating switch, Heated rear seats control unit, 2-pin connector, 2-pin connector, Coupling point for front left door, Coupling point for front right door, Left exterior mirror, Right exterior mirror, Rear left seat heating, Heated backrest for rear left seat	32
17. Engine/motor control unit, Coupling point in engine compartment, left, Secondary air pump motor, Rear right seat heating, Heated backrest for rear right seat	33
005 - Fuses in engine compartment	34-48
1. Fuses in engine compartment	34
2. Fuse holder A	35
3.	36
4. Starter relay 1, Starter relay 2	37
5. Left horn, Horn relay	38
6. Secondary air pump relay, Coupling point in engine compartment, left	39
7. Main relay, Terminal 30 voltage supply relay	40
8.	41
9. Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Heater element for crankcase breather	42
10.	43
11.	44
12. Lambda probe 1 before catalytic converter	45
13. Automatic gearbox control unit, Remote starting system relay, Fuse carrier 1, Coupling point in engine compartment, left, Auxiliary hydraulic pump 1 for gearbox oil	46
14.	47
15.	48
006 - Driver door	49-56
1. Driver door	49
2. Driver door contact switch, Front left central locking actuator, Driver side contact switch in lock cylinder, Driver door control unit, Blind Spot Monitor warning lamp in left exterior mirror, Lane change assist warning lamp in left exterior mirror, Driver side exterior mirror, Driver door lock unit	50
3. Driver side interior locking button for central locking system, Driver door control unit, Driver door lock unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	51
4. Exterior mirror adjuster, Rear lid remote release button, Operating unit for window regulator in driver door, Driver door control unit	52
5. Driver door control unit, Central locking SAFELOCK function warning lamp, Left window regulator motor, Light for driver door background lighting	53
6. Driver door control unit, Onboard supply control unit, Data bus diagnostic interface, Coupling point for front left door, Driver side entry light	54
7. Driver door control unit, Digital sound package control unit, Control unit 1 for information electronics, Coupling point for front left door	55
8. Driver exterior door handle, Side airbag crash sensor on driver side, Airbag control unit, Interface for entry and start system, Coupling point for front left door	56
007 - CAN bus network	57-70
1. CAN bus network	57
2. Remote starting system relay. Data bus diagnostic interface. Fuse holder C. Diagnostic connection	58

3. Automatic gearbox control unit, Data bus diagnostic interface	59
4. Interior mirror, Electronically controlled damping control unit, Parking aid control unit, Data bus diagnostic interface, Main beam assist control unit	60
5. Digital sound package control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Front camera for driver assist systems	61
6. Selector lever, Airbag control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Control unit for structure-borne sound	62
7. ABS control unit, Adaptive cruise control unit, Data bus diagnostic interface, Engine/motor control unit, Axle differential lock control unit	63
8. Power steering control unit, Steering column electronics control unit, Data bus diagnostic interface, Axle differential lock control unit	64
9. Heater and air conditioning controls, Data bus diagnostic interface, Control unit for electronic steering column lock, Emergency call module control unit and communication unit, Interface for entry and start system	65
10. Onboard supply control unit, Seat occupied recognition control unit, Driver seat adjustment control unit, Dash panel insert	66
11. Anti-theft alarm sensor, Air humidity, rain and light sensor, Alarm horn, Onboard supply control unit, Storage compartment illumination bulb, Light 1 for dash panel contour lighting, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Light for passenger door background lighting	67
12. Driver door control unit, Front passenger door control unit, Rear left window regulator motor, Rear right window regulator motor, Light for driver door background lighting, Light for passenger door background lighting	68
13. Air quality sensor, Pressure sender for refrigerant circuit, Fresh air blower control unit, Sliding sunroof adjustment control unit, Gearbox oil cooling pump	69
14. Alternator with voltage regulator, Battery monitor control unit	70
008 - Radio systems/navigation systems , (I8C),(I8F)	71-76
1. Radio systems/navigation systems , (I8C),(I8F)	71
2. Multimedia system operating unit, Heated rear window relay, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	72
3. Control unit 1 for information electronics, Telephone microphone, USB charging socket 1, USB connection 1	73
4. Control unit 1 for information electronics, Front left loudspeaker, Rear left bass loudspeaker, Rear right bass loudspeaker, Front left treble loudspeaker	74
5. Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert, Front right loudspeaker, Front right treble loudspeaker, Radio aerial	75
6. Control unit 1 for information electronics, Roof aerial, Satellite aerial, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, GSM aerial, Radio aerial, Heated rear window	76
009 - Airbag systems , (4UF)	77-84
1. Airbag systems , (4UF)	77
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Fuse holder C	78
3. Airbag coil connector and return ring with slip ring, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	79
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	80
5. Driver side belt switch, Operating unit for front left seat adjustment, Airbag control unit, Emergency call module control unit and communication unit, Airbag igniter 1 on front passenger side, Side airbag igniter on driver side	81
6. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Side airbag igniter on front passenger side, Coupling point in interior, below left	82
7. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Data bus diagnostic interface, Diagnostic connection	83
8. Airbag control unit, Dash panel insert	84
010 - Airbag systems , (4UM)	85-92
1. Airbag systems , (4UM)	85
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver seat belt tensioner igniter 1, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	86
3. Airbag coil connector and return ring with slip ring. Rear side airbag crash sensor on driver	87

side, Rear side airbag crash sensor on passenger side, Driver side belt force limiter, Front passenger side belt force limiter, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Front passenger seat belt tensioner igniter 1	
4. Driver side belt switch, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	88
5. Operating unit for front left seat adjustment, Driver side seat position sensor, Airbag control unit, Emergency call module control unit and communication unit, Side airbag igniter on driver side	89
6. Airbag control unit, Front passenger airbag unit, Airbag igniter 1 on front passenger side, Airbag igniter 2 on front passenger side, Side airbag igniter on front passenger side, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	90
7. Front passenger side belt switch, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit, Diagnostic connection, Heater element with seat occupied recognition, front passenger side	91
8. Airbag control unit, Onboard supply control unit, Data bus diagnostic interface, Dash panel insert	92
011 - Front differential lock , (1Y2)	93-95
1. Front differential lock , (1Y2)	93
2. Steering angle sender, Power steering control unit, Data bus diagnostic interface, Fuse holder A, Electromechanical power steering motor	94
3. Steering moment sender, ABS control unit, Power steering control unit, Axle differential lock control unit	95
012 - 6-speed automatic gearbox , (0ER),(0ID)	96-102
1. 6-speed automatic gearbox , (0ER),(0ID)	96
2. Multifunction switch, Automatic gearbox control unit, Ignition key withdrawal lock solenoid, Fuse holder B, Fuse holder C	97
3. Multifunction switch, Automatic gearbox control unit, Gearbox	98
4. Automatic gearbox control unit, Gearbox, Auxiliary hydraulic pump 1 for gearbox oil	99
5. Selector lever, Automatic gearbox control unit, Selector lever position display	100
6. Selector lever, Selector lever locked in position P switch, Automatic gearbox control unit, Remote starting system relay, Data bus diagnostic interface, Engine/motor control unit, Selector lever lock solenoid	101
7. Onboard supply control unit, Engine/motor control unit	102
013 - Electric seat adjustment with memory function , (2R7)	103-106
1. Electric seat adjustment with memory function , (2R7)	103
2. Operating unit for front left seat adjustment, Operating unit 2 for front left seat adjustment, Driver seat lumbar support adjustment switch, Driver seat adjustment control unit, Fuse holder C	104
3. Data bus diagnostic interface, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat height adjustment motor	105
4. Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor	106
014 - Electric seat adjustment with no memory function , (3PI)	107-109
1. Electric seat adjustment with no memory function , (3PI)	107
2. Operating unit for front left seat adjustment, Seat longitudinal adjustment button, Seat height adjustment button, Backrest adjustment button, Fuse holder C, Fuse 45 on fuse holder C, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat height adjustment motor	108
3. Operating unit for front left seat adjustment, Driver seat lumbar support adjustment switch, Lumbar support height adjustment button, Airbag control unit	109
015 - Lane departure warning , (7Y4)	110-114
1. Lane departure warning , (7Y4)	110
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	111
3. Rear parking aid warning buzzer, Front parking aid warning buzzer, Adaptive cruise control unit, Parking aid control unit, Onboard supply control unit, Park assist steering control unit, Front camera for driver assist systems	112
4. Switch module 2 in centre console, Parking aid button, Park assist steering button, Rear left parking aid sender, Rear centre right parking aid sender, Parking aid control unit, Park assist steering control unit	113
5. Rear right parking aid sender, Parking aid control unit, Park assist steering control unit	114
016 - Multifunction steering wheel , (2FS),(2FW),(2FY),(2ZA),(2ZH)	115-117
1. Multifunction steering wheel , (2FS),(2FW),(2FY),(2ZA),(2ZH)	115
2. Ignition/starter switch, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Airbag igniter on driver side, Fuse holder C	116
3. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel. Multifunction buttons on right in steering wheel.	117

	Multifunction steering wheel control unit	
017 -	Keyless access locking and starting system , (4F2),(4F6),(4I3)	118-122
	1. Keyless access locking and starting system , (4F2),(4F6),(4I3)	118
	2. Starter button, Onboard supply control unit, Engine/motor control unit, Interface for entry and start system, Fuse holder C	119
	3. Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	120
	4. Driver exterior door handle, Front passenger exterior door handle, Interface for entry and start system	121
	5. Immobiliser reader coil, Control unit in dash panel insert, Interface for entry and start system, Dash panel insert, Rear bumper aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	122
018 -	Steering column electronics for heated steering wheel , (2ZW),(2ZX)	123-125
	1. Steering column electronics for heated steering wheel , (2ZW),(2ZX)	123
	2. Ignition/starter switch, Heated steering wheel sender, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Airbag igniter on driver side, Fuse holder C, Heated steering wheel	124
	3. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	125
019 -	Seat ventilation , (4D3)	126-128
	1. Seat ventilation , (4D3)	126
	2. Fuse carrier 2, Fuse holder C, Front left seat backrest fan 1, Front left seat cushion fan 1	127
	3. Heater and air conditioning controls, Driver side seat ventilation button, Passenger side seat ventilation button, Climatronic control unit, Onboard supply control unit, Data bus diagnostic interface, Front right seat backrest fan 1, Front right seat cushion fan 1	128
020 -	Window wash/wipe system	129-131
	1. Window wash/wipe system	129
	2. Wiper motor relay 1, Wiper motor relay 2, Fuse holder B, Relay and fuse carrier 3	130
	3. Windscreen washer fluid level sender, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Washer pump, Driver side windscreen wiper motor, Left washer jet heater element, Right washer jet heater element	131
021 -	Anti-theft alarm system , (7AL),(7AS)	132-133
	1. Anti-theft alarm system , (7AL),(7AS)	132
	2. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Fuse holder B, Fuse holder C	133
022 -	Radio system with digital sound package , (I8F),(9VG)	134-138
	1. Radio system with digital sound package , (I8F),(9VG)	134
	2. Digital sound package control unit, Control unit 1 for information electronics, Dash panel insert	135
	3. Digital sound package control unit, Data bus diagnostic interface, Front left bass loudspeaker	136
	4. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right bass loudspeaker, Front right bass loudspeaker	137
	5. Digital sound package control unit, Rear right treble loudspeaker, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer	138
023 -	Climatronic , (9AK)	139-146
	1. Climatronic , (9AK)	139
	2. Heater and air conditioning controls, Magnetic clutch relay, Fresh air blower control unit, Climatronic control unit, Fuse carrier 1, Remote starting system fuse 1, Coupling point in interior, below left, Fresh air blower	140
	3. Heater and air conditioning controls, Data bus diagnostic interface	141
	4. Alternator with voltage regulator, Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioner compressor regulating valve, Magnetic clutch for supercharger	142
	5. Heater and air conditioning controls, Potentiometer for left temperature flap control motor, Air conditioner compressor regulating valve, Front left temperature flap, Left temperature flap control motor	143
	6. Heater and air conditioning controls, Potentiometer for right temperature flap control motor, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Air distribution flap, Front right temperature flap, Air recirculation flap, Right temperature flap control motor, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	144
	7. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Footwell vent temperature sender, Evaporator temperature sensor, Defroster flap, Defroster flap control motor	145
	8. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender, Onboard supply control unit	146
024 -	Parking aid (PDC) , (7X2)	147-150
	1. Parking aid (PDC) . (7X2)	147

2. Switch module 2 in centre console, Parking aid button, Park assist steering button, Front parking aid warning buzzer, Parking aid control unit, Onboard supply control unit, Data bus diagnostic interface, Park assist steering control unit, Fuse holder C	148
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit, Park assist steering control unit	149
4. Rear left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit, Park assist steering control unit	150
025 - Dynamic Chassis Control , (2H4)	151-157
1. Dynamic Chassis Control , (2H4)	151
2. Front left vehicle level sender, Front right body acceleration sender, Electronically controlled damping control unit, Fuse holder C	152
3. Front right speed sensor, Front left speed sensor, ABS control unit, Electronically controlled damping control unit	153
4. Rear left vehicle level sender, Front right vehicle level sender, Front left body acceleration sender, Rear body acceleration sender, ABS control unit, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve	154
5. Electronically controlled damping control unit, Data bus diagnostic interface, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	155
6. Alternator with voltage regulator, Rear left speed sensor, Front right shock absorber damping adjustment valve, Left parking brake motor	156
7. Switch module 1 in centre console, Front right brake pad wear sender, Rear right speed sensor, Right parking brake motor	157
026 - Adaptive cruise control , (6K2),(6K4)	158-160
1. Adaptive cruise control , (6K2),(6K4)	158
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	159
3. Adaptive cruise control unit	160
027 - Reversing camera (Rear Assist) , (KA1)	161-162
1. Reversing camera (Rear Assist) , (KA1)	161
2. Rear lid handle, Control unit 1 for information electronics	162
028 - Radiator fan	163-164
1. Radiator fan	163
2. Radiator fan control unit, Fuse holder A, Fuse holder B, Radiator fan, Radiator fan 2	164
029 - Front seat heating , (4A3),(9P3)	165-168
1. Front seat heating , (4A3),(9P3)	165
2. Heater and air conditioning controls, Button for left seat heating, Button for right seat heating, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	166
3. Front left seat temperature sender, Front right seat temperature sender, Onboard supply control unit, Seat heating (driver side), Seat heating (front passenger side)	167
4. Front right seat temperature sender, Onboard supply control unit, Seat heating (front passenger side)	168
030 - Climatic , (KH6)	169-174
1. Climatic , (KH6)	169
2. Magnetic clutch relay, Fresh air blower control unit, Fresh air blower	170
3. Heater and air conditioning controls, Air conditioning system control unit, Data bus diagnostic interface, Fuse carrier 1	171
4. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioning system control unit, Air conditioner compressor regulating valve	172
5. Heater and air conditioning controls, Air conditioning system control unit, Air conditioner compressor regulating valve, Magnetic clutch for supercharger, Air recirculation flap control motor	173
6. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Evaporator temperature sensor, Potentiometer for air distribution flap control motor, Temperature flap, Air distribution flap, Temperature flap control motor, Air distribution flap control motor	174
031 - Windscreen heater , (4GS)	175-176
1. Windscreen heater , (4GS)	175
2. Heated windscreen relay, Onboard supply control unit, Relay and fuse carrier 5, Heater for parked wiper	176
032 - Exterior lighting	177-182
1. Exterior lighting	177
2. Onboard supply control unit, Left fog light bulb, Front left headlight, Front left side marker bulb, Fuse holder C	178
3. Onboard supply control unit, Right fog light bulb, Front right headlight, Front right side marker bulb	179
4. Rotary light switch, Light switch, Hazard warning light switch, Onboard supply control unit, Indicator lamp for hazard warning light, High-level brake light bulb	180
5. Onboard supply control unit. Left tail light cluster. Left brake and tail light bulb. Left number	181

plate light, Right number plate light	
6. Onboard supply control unit, Right tail light cluster, Left tail light cluster 2, Right tail light cluster 2, Right brake and tail light bulb	182
033 - Actuator for structure-borne sound , CXDB	183-184
1. Actuator for structure-borne sound , CXDB	183
2. Data bus diagnostic interface, Control unit for structure-borne sound, Actuator for structure-borne sound, Fuse 34 on fuse holder C	184
034 - Panoramic sliding sunroof , (3FB)	185-187
1. Panoramic sliding sunroof , (3FB)	185
2. Sunroof button, Sliding sunroof adjustment control unit, Data bus diagnostic interface	186
3. Sliding sunroof adjustment control unit, Sliding sunroof motor	187
035 - Dual clutch gearbox 0D9 , (0ES)	188-193
1. Dual clutch gearbox 0D9 , (0ES)	188
2. Mechatronic unit for dual clutch gearbox, Fuse holder B	189
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	190
4. Selector lever, Onboard supply control unit, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Ignition key withdrawal lock solenoid	191
5. Selector lever, Remote starting system relay, Data bus diagnostic interface, Selector lever sensors control unit, Selector lever position display	192
6. Selector lever, Selector lever locked in position P switch, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	193
036 - Dual clutch gearbox 0GC , (0IJ)	194-198
1. Dual clutch gearbox 0GC , (0IJ)	194
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	195
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	196
4. Selector lever, Onboard supply control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid	197
5. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid, Selector lever position display	198
037 - Front camera for driver assist systems , (QK1)	199-201
1. Front camera for driver assist systems , (QK1)	199
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	200
3. Adaptive cruise control unit, Front camera for driver assist systems	201
038 - Seat heating , (4A4)	202-209
1. Seat heating , (4A4)	202
2. Heater and air conditioning controls, Button for left seat heating, Button for right seat heating, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	203
3. Front left seat temperature sender, Onboard supply control unit, Seat heating (driver side)	204
4. Front right seat temperature sender, Onboard supply control unit, Seat occupied recognition control unit, Heater element with seat occupied recognition, front passenger side	205
5. Heated rear seats control unit, Rear left seat heating, Heated cushion for rear left seat	206
6. Heated rear seats control unit, Rear right seat heating, Heated cushion for rear right seat	207
7. Rear left seat heating switch, Heated rear seats control unit, Heated backrest for rear left seat	208
8. Rear right seat heating switch, Heated rear seats control unit, Heated backrest for rear right seat	209
039 - Mobile telephone systems , (9ZV),(9ZX)	210-211
1. Mobile telephone systems , (9ZV),(9ZX)	210
2. Telephone microphone, Storage compartment with interface for mobile telephone	211
040 - 2.0l petrol engine , DKFA	212-234
1. 2.0l petrol engine , DKFA	212
2. Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	213
3. Main relay, Fuse holder B	214
4. Magnetic clutch relay, Secondary air pump relay, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder B, Fuse holder C	215
5. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit, Engine/motor control unit	216
6. Ignition/starter switch, Oil level and oil temperature sender, Steering column electronics control unit, Engine/motor control unit	217
7. ABS control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Engine component current supply relay	218
8. Alternator with voltage regulator, Charge pressure sender, Data bus diagnostic interface, Engine/motor control unit	219
9. Charge pressure sender, Engine/motor control unit, Gearbox oil cooling pump	220
10. Charge pressure sender. Clutch position sender. Engine/motor control unit	221

11. Brake light switch, Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit	222
12. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant shut-off valve	223
13. Engine/motor control unit, Coolant shut-off valve	224
14. Engine temperature regulation module, Intake manifold pressure sender, Engine/motor control unit, Actuator for engine temperature regulation	225
15. Engine speed sender, Charge pressure control module, Position sender for charge pressure positioner, Sender 1 for secondary air pressure, Engine/motor control unit, Charge pressure positioner	226
16. Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	227
17. Throttle valve module, Knock sensor 1, Engine/motor control unit, Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve	228
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Valve for oil pressure control, Piston cooling jet control valve, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2	229
19. Hall sender 3, Engine/motor control unit, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4	230
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	231
21. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	232
22. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	233
23. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	234
041 - Steering column electronics	235-238
1. Steering column electronics	235
2. Horn plate, Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Airbag igniter on driver side, Fuse holder C	236
3. Ignition/starter switch, Intermittent wiper switch, Multifunction display call-up button, Onboard supply control unit, Steering column electronics control unit	237
4. Onboard supply control unit, Ignition key withdrawal lock solenoid	238
042 - 1.4l petrol engine , DGXA	239-258
1. 1.4l petrol engine , DGXA	239
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	240
3. Main relay, Secondary air pump relay, Starter relay 1, Fuse holder B, Secondary air pump motor	241
4. Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	242
5. Alternator with voltage regulator, Switch module 1 in centre console, Start/Stop operation button, Onboard supply control unit	243
6. Accelerator pedal module, Engine/motor control unit	244
7. Brake light switch, Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit	245
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Gearbox neutral position sender, Engine/motor control unit	246
9. Remote starting system relay, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	247
10. Fuel tank leak detection module, Radiator outlet coolant temperature sender, Engine/motor control unit, Fuse carrier 1, Remote starting system fuse 1	248
11. Fuel tank leak detection module, Engine/motor control unit, Fuel tank shut-off valve	249
12. Coolant temperature sender, Tank pressure sensor, Data bus diagnostic interface, Engine/motor control unit, Fuel pressure regulating valve	250
13. Throttle valve module, Intake manifold sender, Intake manifold pressure sender, Hall sender 3, Sender 1 for secondary air pressure, Engine/motor control unit	251
14. Hall sender, Knock sensor 1, Sender 1 for secondary air pressure, Engine/motor control unit, Secondary air inlet valve, Coolant pump for low-temperature circuit	252
15. Oil pressure switch for reduced oil pressure, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	253
16. Oil pressure switch, Warning contact for crankcase breather hose, Charge pressure sender, Charge pressure sender, Charge pressure control module, Intake air temperature sender, Engine/motor control unit	254

17. Engine speed sender, Fuel pressure sender, Vacuum pump relay, Engine/motor control unit, Vacuum pump for brakes, Radiator blind control motor	255
18. Ambient temperature sensor, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	256
19. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Ignition coil 4 with output stage	257
20. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	258
043 - 1.6l petrol engine , CWVA	259-271
1. 1.6l petrol engine , CWVA	259
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	260
3. Main relay, Starter relay 1, Fuse holder B	261
4. Alternator with voltage regulator, Switch module 1 in centre console, Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder B, Fuse holder C	262
5. Onboard supply control unit, Engine/motor control unit, Engine component current supply relay, Relay and fuse carrier 3	263
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Clutch position sender, Engine/motor control unit	264
7. Brake light switch, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	265
8. Lambda probe 1 after catalytic converter, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	266
9. Intake manifold sender, Hall sender, Intake manifold pressure sender, Data bus diagnostic interface, Engine/motor control unit	267
10. Oil pressure switch, Throttle valve module, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	268
11. Engine speed sender, Engine/motor control unit, Injector, cylinder 1, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	269
12. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Ignition coil 1 with output stage, Ignition coil 2 with output stage	270
13. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Engine/motor control unit, Dash panel insert, Ignition coil 3 with output stage, Ignition coil 4 with output stage	271
044 - 2.0l petrol engine , CXDB	272-294
1. 2.0l petrol engine , CXDB	272
2. Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	273
3. Main relay, Fuse holder B	274
4. Magnetic clutch relay, Secondary air pump relay, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder B, Fuse holder C	275
5. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit, Engine/motor control unit	276
6. Ignition/starter switch, Oil level and oil temperature sender, Steering column electronics control unit, Engine/motor control unit	277
7. Oil level and oil temperature sender, ABS control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Engine component current supply relay	278
8. Alternator with voltage regulator, Charge pressure sender, Data bus diagnostic interface, Engine/motor control unit	279
9. Charge pressure sender, Engine/motor control unit, Gearbox oil cooling pump	280
10. Charge pressure sender, Clutch position sender, Engine/motor control unit	281
11. Brake light switch, Accelerator pedal module, Clutch position sender, Gearbox neutral position sender, Engine/motor control unit	282
12. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant shut-off valve	283
13. Engine/motor control unit, Coolant shut-off valve	284
14. Engine temperature regulation module, Intake manifold pressure sender, Engine/motor control unit, Actuator for engine temperature regulation	285
15. Engine speed sender, Position sender for charge pressure positioner, Sender 1 for secondary air pressure, Engine/motor control unit, Charge pressure positioner	286
16. Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	287
17. Throttle valve module, Knock sensor 1, Engine/motor control unit, Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve	288
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Valve for oil pressure control. Piston cooling inlet control valve. Exhaust cam actuator A for	289

cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2	
19. Hall sender 3, Engine/motor control unit, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4	290
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	291
21. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	292
22. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	293
23. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	294
045 - 2.0l petrol engine , CYKA	295-317
1. 2.0l petrol engine , CYKA	295
2. Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	296
3. Main relay, Fuse holder B	297
4. Magnetic clutch relay, Secondary air pump relay, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder B, Fuse holder C	298
5. Switch module 1 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit, Engine/motor control unit	299
6. Ignition/starter switch, Oil level and oil temperature sender, Steering column electronics control unit, Engine/motor control unit	300
7. Oil level and oil temperature sender, ABS control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Engine component current supply relay	301
8. Alternator with voltage regulator, Charge pressure sender, Data bus diagnostic interface, Engine/motor control unit	302
9. Charge pressure sender, Engine/motor control unit, Gearbox oil cooling pump	303
10. Charge pressure sender, Clutch position sender, Engine/motor control unit	304
11. Brake light switch, Accelerator pedal module, Clutch position sender, Gearbox neutral position sender, Engine/motor control unit	305
12. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant shut-off valve	306
13. Engine/motor control unit, Coolant shut-off valve	307
14. Engine temperature regulation module, Intake manifold pressure sender, Position sender for charge pressure positioner, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner	308
15. Engine speed sender, Sender 1 for secondary air pressure, Engine/motor control unit, Secondary air inlet valve, Auxiliary pump for heating	309
16. Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1	310
17. Throttle valve module, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	311
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Exhaust cam actuator A for cylinder 1, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3	312
19. Hall sender 3, Engine/motor control unit, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4	313
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	314
21. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	315
22. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	316
23. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	317
046 - 1.4l petrol engine , CZDA	318-333
1. 1.4l petrol engine , CZDA	318
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	319
3. Main relay, Fuse holder B	320
4. Switch module 1 in centre console, Start/Stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	321
5. Ambient temperature sensor. Radiator outlet coolant temperature sender. Onboard supply control	322

unit, Engine/motor control unit	
6. Accelerator pedal module, Lambda probe 1 after catalytic converter, Gearbox neutral position sender, Engine/motor control unit	323
7. Brake light switch, Lambda probe 1 before catalytic converter, Clutch position sender, ABS control unit, Engine/motor control unit, Gearbox	324
8. Oil level and oil temperature sender, Steering column electronics control unit, Engine/motor control unit	325
9. Data bus diagnostic interface, Engine/motor control unit	326
10. Hall sender, Coolant temperature sender, Vacuum pump relay, Engine/motor control unit, Vacuum pump for brakes, Charge pressure positioner	327
11. Intake manifold sender, Charge pressure sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	328
12. Charge pressure sender, Engine speed sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel pressure regulating valve	329
13. Throttle valve module, Engine/motor control unit, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	330
14. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Camshaft control valve 1, Ignition coil 3 with output stage, Ignition coil 4 with output stage	331
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Knock sensor 1, Engine/motor control unit, Charge air cooling pump	332
16. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	333
047 - Lane change assist , (7Y8),(7Y9)	334-336
1. Lane change assist , (7Y8),(7Y9)	334
2. Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in left exterior mirror, Blind Spot Monitor warning lamp in right exterior mirror, Driver side exterior mirror, Passenger side exterior mirror	335
3. Data bus diagnostic interface, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2	336
048 - Front seat heating , (4A3)	337-340
1. Front seat heating , (4A3)	337
2. Heater and air conditioning controls, Button for left seat heating, Button for right seat heating, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	338
3. Front left seat temperature sender, Onboard supply control unit, Seat heating (driver side)	339
4. Front right seat temperature sender, Onboard supply control unit, Seat occupied recognition control unit, Heater element with seat occupied recognition, front passenger side	340
049 - Fuses in interior	341-355
1. Fuses in interior	341
2. Alarm horn, Fuse holder C	342
3. Fuse holder C	343
4. Fuse holder C	344
5. Heated rear window relay, Fuse holder C	345
6. Relay for power sockets, Fuse holder C	346
7. Terminal 15 voltage supply relay, Fuse holder C, Heater for parked wiper	347
8. Remote starting system relay, Fuse holder C	348
9. Fuse holder C, USB connection 1	349
10. Emergency call module control unit and communication unit, Fuse holder C	350
11. Fuse holder C	351
12. Magnetic clutch relay, Heated windscreen relay, Fuse holder C	352
13. Vacuum pump relay, Engine/motor control unit, Fuse holder C, Vacuum pump for brakes	353
14. Fuse holder C, Fuse carrier 1, Remote starting system fuse 1, USB charging socket fuse	354
15. Fuse carrier 2, Front passenger seat adjustment thermal fuse 1	355
050 - 12 V sockets	356-358
1. 12 V sockets	356
2. Relay for power sockets, Fuse holder C, 12 V socket 2	357
3. Onboard supply control unit, USB charging socket 1, Connection 2 (58d), in dash panel wiring harness	358
051 - Emergency call module , (EL2),(EL5)	359-362
1. Emergency call module , (EL2),(EL5)	359
2. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Fuse holder C	360
3. Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	361
4. Control unit in dash panel insert, Onboard supply control unit, Emergency call module control unit and communication unit, Dash panel insert, Roof aerial, GPS aerial, GSM aerial	362
052 - 8-speed automatic gearbox with Tiptronic , (0IH)	363-369
1. 8-speed automatic gearbox with Tiptronic , (0IH)	363
2. Automatic gearbox control unit. Gearbox. Solenoid valve 1. Solenoid valve 2. Solenoid valve 4.	364

Selector lever lock solenoid, Ignition key withdrawal lock solenoid, Fuse holder B, Fuse holder C	
3. Oil pressure switch for automatic gearbox, Gearbox input speed sender 1, Automatic gearbox control unit, Gearbox, Solenoid valve 3, Solenoid valve 5	365
4. Automatic gearbox control unit, Gearbox	366
5. Selector lever, Selector lever locked in position P switch, Automatic gearbox control unit, Gearbox, Selector lever position display	367
6. Automatic gearbox control unit, Data bus diagnostic interface	368
7. Automatic gearbox control unit, Onboard supply control unit, Engine/motor control unit	369
053 - 1.4l petrol engine , CWLA	370-383
1. 1.4l petrol engine , CWLA	370
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	371
3. Main relay, Fuse holder B	372
4. Switch module 1 in centre console, Start/stop operation button, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	373
5. Ambient temperature sensor, Radiator outlet coolant temperature sender, Onboard supply control unit, Engine/motor control unit	374
6. Brake light switch, Accelerator pedal module, Engine/motor control unit, Gearbox	375
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	376
8. Hall sender, Steering column electronics control unit, Engine/motor control unit	377
9. Coolant temperature sender, Data bus diagnostic interface, Engine/motor control unit, Vacuum pump for brakes, Charge pressure positioner	378
10. Intake manifold sender, Knock sensor 1, Fuel pressure sender, Engine/motor control unit	379
11. Throttle valve module, Charge pressure sender, Engine speed sender, Engine/motor control unit, Fuel pressure regulating valve	380
12. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	381
13. Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	382
14. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Ignition coil 4 with output stage, Charge air cooling pump	383
054 - Dash panel insert	384-386
1. Dash panel insert	384
2. Dash panel insert, Fuse holder C	385
3. Immobiliser reader coil, Fuel delivery unit, Dash panel insert	386
055 - Rear left door	387-389
1. Rear left door	387
2. Rear driver side window regulator button, Rear left door contact switch, Onboard supply control unit, Rear left door lock unit, Rear left window regulator motor, Rear left door central locking motor, lock	388
3. Driver door control unit, Digital sound package control unit, Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker	389
056 - Rear right door	390-392
1. Rear right door	390
2. Rear passenger side window regulator button, Rear right door contact switch, Onboard supply control unit, Rear right door lock unit, Rear right window regulator motor, Rear right door central locking motor, lock	391
3. Front passenger door control unit, Digital sound package control unit, Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker	392
057 - Basic equipment	393-396
1. Basic equipment	393
2. Hazard warning light switch, Bonnet contact switch, Treble horn, Bass horn, Left horn, Horn relay, Onboard supply control unit	394
3. Tank flap release, Fuel tank filler flap central locking actuator, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Tank filler flap locking motor	395
4. Brake fluid level warning contact, Front right brake pad wear sender, Onboard supply control unit, Rear lid lock unit	396
058 - Convenience system	397-402
1. Convenience system	397
2. Driver door control unit, Blind Spot Monitor warning lamp in left exterior mirror, Lane change assist warning lamp in left exterior mirror, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor	398
3. Driver door control unit. Driver side turn signal repeater bulb. Coupling point for front left	399

door, Coupling point for front right door, Driver side exterior mirror, Heated exterior mirror on driver side	
4. Front passenger door control unit, Blind Spot Monitor warning lamp in right exterior mirror, Lane change assist warning lamp in right exterior mirror, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	400
5. Interior mirror, Heater and air conditioning controls, Sunlight penetration photosensor, Air humidity, rain and light sensor, Onboard supply control unit, Data bus diagnostic interface, Main beam assist control unit, Front interior light, Automatic anti-dazzle interior mirror	401
6. Remote starting system relay, Onboard supply control unit, Remote starting system fuse 1	402
059 - Onboard supply control unit	403-423
1. Onboard supply control unit	403
2. Fuse holder C	404
3. Onboard supply control unit, Fuse holder B	405
4. Onboard supply control unit	406
5. Onboard supply control unit	407
6. Onboard supply control unit	408
7. Onboard supply control unit	409
8. Onboard supply control unit	410
9. Onboard supply control unit	411
10. Onboard supply control unit	412
11. Onboard supply control unit	413
12. Onboard supply control unit	414
13. Onboard supply control unit	415
14. Onboard supply control unit	416
15. Onboard supply control unit	417
16. Tank flap release, Onboard supply control unit	418
17. Onboard supply control unit	419
18. Onboard supply control unit, USB charging socket 1	420
19. Onboard supply control unit	421
20. Onboard supply control unit	422
21. Onboard supply control unit	423
060 - Background lighting , (QQ7)	424-427
1. Background lighting , (QQ7)	424
2. Light 1 for dash panel contour lighting, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Fuse holder C, Light for passenger door background lighting	425
3. Driver door control unit, Storage compartment illumination bulb, Coupling point in front left door, Light for driver door background lighting, Driver side entry light	426
4. Front passenger door control unit, Passenger side entry light	427
061 - Interior lights	428-431
1. Interior lights	428
2. Rotary light switch, Light switch, Onboard supply control unit, Fuse holder C	429
3. Front interior light button, Rear interior light button, Front interior light (door contact) button, Front left reading light button, Front right reading light button, Driver vanity mirror contact switch, Onboard supply control unit, Front interior light, Luggage compartment light, Driver side illuminated vanity mirror, Front left reading light, Front right reading light	430
4. Front passenger vanity mirror contact switch, Onboard supply control unit, Rear interior light, Front passenger side illuminated vanity mirror	431
062 - Anti-theft alarm system , (7AG)	432-433
1. Anti-theft alarm system , (7AG)	432
2. Anti-theft alarm system horn, Onboard supply control unit, Fuse holder C	433
063 - Earthing concept	434-451
1. Earthing concept	434
2. Battery, Battery monitor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	435
3. Oil pressure switch, Treble horn, Left horn, Air conditioner compressor regulating valve, Coupling point in engine compartment, left, Exterior socket, 230 V, 110 V, Charge air cooling pump, Earth connection 4, in engine compartment wiring harness	436
4. Oil level and oil temperature sender, Automatic gearbox control unit, Mechatronic unit for dual clutch gearbox, Left fog light bulb, Front left headlight, Gearbox, Relay and fuse carrier 3, Coupling point in engine compartment, left, Windscreen wiper motor	437
5. Brake light switch, Brake fluid level warning contact, Automatic glow period control unit, Axle differential lock control unit, Coupling point in engine compartment, left, Coupling point on engine, top centre	438
6. Clutch position sender, Radiator fan control unit, Adaptive cruise control unit, Right fog light bulb, Coupling point in engine compartment, left, Gearbox oil cooling pump, Heated windscreen, Left	439

washer jet heater element, Right washer jet heater element	
7. Bonnet contact switch, Front right brake pad wear sender, Air quality sensor, Ethanol concentration sender, Pressure sender for refrigerant circuit, Bass horn, Anti-theft alarm system horn, Alarm horn, Control unit for structure-borne sound, Front right headlight, Relay and fuse carrier 5, Vacuum pump for brakes, Heater for parked wiper	440
8. Hazard warning light switch, Parking brake button, Heater and air conditioning controls, Switch module 1 in centre console, Switch module 2 in centre console, Selector lever, ABS control unit, 12 V socket 2, Radiator fan, Auxiliary air heater element	441
9. Driver exterior door handle, Starter button, Driver door control unit, Remote starting system relay, Storage compartment illumination bulb, Light 1 for dash panel contour lighting, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Coupling point on front left exterior door handle, Coupling point for rear left door, Coupling point for front left door, USB charging socket 1, Driver door lock unit, Rear left window regulator motor, Light for passenger door background lighting	442
10. Operating unit for front left seat adjustment, Driver seat lumbar support adjustment switch, Magnetic clutch relay, Heated windscreen relay, Onboard supply control unit, Digital sound package control unit, Seat occupied recognition control unit, Fuse holder C, Coupling point for front left seat, Seat heating (driver side)	443
11. Rotary light switch, Terminal 15 voltage supply relay, Parking aid control unit, Steering column electronics control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Relay for power sockets, Dash panel insert, Front left footwell light, Fuse holder C, Diagnostic connection	444
12. Interior mirror, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Anti-theft alarm sensor, Air humidity, rain and light sensor, Fresh air blower control unit, Sliding sunroof adjustment control unit, Front camera for driver assist systems, Coupling point for roof, centre, Coupling point in front right seat, Coupling point for front right seat, Front interior light, Rear interior light, Rear interior light, Heated backrest for front passenger seat	445
13. Front passenger exterior door handle, Operating unit for preparation for mobile telephone, Front passenger door control unit, Display unit for front information display and operating unit control unit, Control unit for navigation system, Emergency call module control unit and communication unit, Interface for entry and start system, Front right footwell light, Storage compartment with interface for mobile telephone, Coupling point on front right exterior door handle, Coupling point for rear right door, Coupling point for front right door, USB connection 1, Front passenger door lock unit, Rear right window regulator motor	446
14. Rear lid handle, Electronically controlled damping control unit, Control unit 1 for information electronics, Left tail light cluster, Rear left seat heating, Heated backrest for rear left seat	447
15. Rear lid handle release button, Rear lid lock unit, Left tail light cluster 2, Right tail light cluster 2, High-level brake light bulb, Roof aerial, 2-pin connector, 2-pin connector, Coupling point for front left door, Coupling point for front right door, Driver side exterior mirror, Passenger side exterior mirror, Left number plate light, Right number plate light	448
16. Fuel delivery unit, Fuel pump control unit, Blind Spot Monitor control unit, Frequency modulation (FM) frequency filter in negative wire	449
17. Rear left seat heating switch, Rear right seat heating switch, Heated rear seats control unit, Blind Spot Monitor control unit 2, Right tail light cluster, Rear right seat heating, Heated backrest for rear right seat	450
18. Engine/motor control unit, Coupling point in engine compartment, left, Secondary air pump motor	451
064 - Interior lights	452-455
1. Interior lights	452
2. Rotary light switch, Light switch, Onboard supply control unit, Fuse holder C	453
3. Front interior light button, Rear interior light button, Front interior light (door contact) button, Front left reading light button, Front right reading light button, Driver vanity mirror contact switch, Onboard supply control unit, Front interior light, Luggage compartment light, Driver side illuminated vanity mirror, Front left reading light, Front right reading light	454
4. Front passenger vanity mirror contact switch, Onboard supply control unit, Rear interior light, Front passenger side illuminated vanity mirror	455
065 - Windscreen heater , (4GS)	456-457
1. Windscreen heater , (4GS)	456
2. Heated windscreen relay, Onboard supply control unit, Fuse holder C, Heater for parked wiper	457
066 - Engine preheating , (7VP)	458-459
1. Engine preheating , (7VP)	458
2. Exterior socket, 230 V, 110 V, Engine preheating element	459
067 - Radio and navigation system (South Korea) , (ER7)	460-469
1. Radio and navigation system (South Korea) , (ER7)	460
2. Control unit 1 for information electronics, Control unit for navigation system, Telephone microphone, Fuse holder C	461
3. Control unit 1 for information electronics. Control unit for navigation system. Connection for	462

external audio sources	
4. Control unit 1 for information electronics, Control unit for navigation system	463
5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, USB connection 1	464
6. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	465
7. Control unit 1 for information electronics, Front left loudspeaker, Front left bass loudspeaker	466
8. Control unit 1 for information electronics, Front right loudspeaker, Rear left bass loudspeaker, Rear right bass loudspeaker, Front right bass loudspeaker	467
9. Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert, Left aerial module	468
10. Control unit 1 for information electronics, Roof aerial, Aerial, GPS aerial, Heated rear window	469
068 - Multimedia system , (8AR)	470-477
1. Multimedia system , (8AR)	470
2. Multimedia system operating unit, Heated rear window relay, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	471
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, USB connection 1, USB connection 2	472
4. Control unit 1 for information electronics, Front left loudspeaker, Front right loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker	473
5. Control unit 1 for information electronics, Front right loudspeaker, Rear left bass loudspeaker, Front right bass loudspeaker, Rear left mid-range and bass loudspeaker	474
6. Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert, Rear right bass loudspeaker, Telephone microphone, Storage compartment with interface for mobile telephone	475
7. Control unit 1 for information electronics, Roof aerial, Left aerial module, Satellite aerial, GSM aerial	476
8. Control unit 1 for information electronics, Aerial, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Radio aerial, Heated rear window	477
069 - Multimedia system , (I8I)	478-484
1. Multimedia system , (I8I)	478
2. Heated rear window relay, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C, USB connection 1, USB connection 2	479
3. Control unit 1 for information electronics, Front left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, USB connection 2	480
4. Control unit 1 for information electronics, Front right loudspeaker, Rear left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Rear left mid-range and bass loudspeaker	481
5. Control unit 1 for information electronics, Dash panel insert, Roof aerial, Rear right bass loudspeaker, Satellite aerial, GSM aerial	482
6. Data bus diagnostic interface, Control unit 1 for information electronics, Left aerial module, Radio aerial, Storage compartment with interface for mobile telephone	483
7. Control unit 1 for information electronics, Aerial, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	484
070 - Sound system , (8AR),(9VG)	485-489
1. Sound system , (8AR),(9VG)	485
2. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer	486
3. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics	487
4. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker	488
5. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	489
071 - Emergency call module , (NZ4)	490-493
1. Emergency call module , (NZ4)	490
2. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Dash panel insert	491
3. Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	492
4. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Roof aerial, Telephone microphone, LTE aerial 2	493
072 - Emergency call module , (NZ3)	494-497
1. Emergency call module , (NZ3)	494
2. Operating unit for preparation for mobile telephone. Emergency call module control unit and	495

communication unit, Dash panel insert	
3. Airbag control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	496
4. Onboard supply control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Roof aerial, LTE aerial 2	497
073 - Emergency call module , (EL6)	498-501
1. Emergency call module , (EL6)	498
2. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Dash panel insert	499
3. Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	500
4. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Roof aerial, Telephone microphone, LTE aerial 2	501
074 - Windscreen heater , (4GS)	502-503
1. Windscreen heater , (4GS)	502
2. Heated windscreen relay, Onboard supply control unit, Fuse holder C, Heater for parked wiper	503
075 - Basic equipment	504-507
1. Basic equipment	504
2. Hazard warning light switch, Bonnet contact switch, Treble horn, Bass horn, Left horn, Horn relay, Onboard supply control unit	505
3. Tank flap release, Fuel tank filler flap central locking actuator, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Tank filler flap locking motor	506
4. Brake fluid level warning contact, Front right brake pad wear sender, Onboard supply control unit, Rear lid lock unit	507
076 - Onboard supply control unit	508-528
1. Onboard supply control unit	508
2. Fuse holder C	509
3. Onboard supply control unit, Fuse holder B	510
4. Onboard supply control unit	511
5. Onboard supply control unit	512
6. Onboard supply control unit	513
7. Onboard supply control unit	514
8. Onboard supply control unit	515
9. Onboard supply control unit	516
10. Onboard supply control unit	517
11. Onboard supply control unit	518
12. Onboard supply control unit	519
13. Onboard supply control unit	520
14. Onboard supply control unit	521
15. Onboard supply control unit	522
16. Tank flap release, Onboard supply control unit	523
17. Onboard supply control unit	524
18. Onboard supply control unit, USB charging socket 1	525
19. Onboard supply control unit	526
20. Onboard supply control unit	527
21. Onboard supply control unit	528
077 - 1.4l petrol engine , DGXA,DJXA	529-548
1. 1.4l petrol engine , DGXA,DJXA	529
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	530
3. Main relay, Secondary air pump relay, Starter relay 1, Fuse holder B, Secondary air pump motor	531
4. Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	532
5. Switch module 1 in centre console, Start/Stop operation button, Vacuum pump relay, Onboard supply control unit, Fuse holder C	533
6. Accelerator pedal module, Onboard supply control unit, Engine/motor control unit	534
7. Alternator with voltage regulator, Brake light switch, Clutch position sender, Engine/motor control unit	535
8. Brake light switch, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	536
9. Lambda probe 1 after catalytic converter, Gearbox neutral position sender, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	537
10. Radiator outlet coolant temperature sender, Remote starting system relay, Engine/motor control unit, Fuse carrier 1, Remote starting system fuse 1	538
11. Fuel tank leak detection module, Engine/motor control unit	539
12. Tank pressure sensor. Data bus diaanostic interface. Engine/motor control unit. Fuel tank	540

shut-off valve	
13. Throttle valve module, Intake manifold sender, Intake manifold pressure sender, Engine/motor control unit	541
14. Hall sender, Coolant temperature sender, Hall sender 3, Sender 1 for secondary air pressure, Engine/motor control unit	542
15. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Coolant pump for low-temperature circuit	543
16. Oil pressure switch, Oil pressure switch for reduced oil pressure, Warning contact for crankcase breather hose, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve	544
17. Charge pressure sender, Engine speed sender, Charge pressure sender, Charge pressure control module, Intake air temperature sender, Fuel pressure sender, Engine/motor control unit	545
18. Ambient temperature sensor, Engine/motor control unit, Vacuum pump for brakes, Radiator blind control motor	546
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	547
20. Fuel delivery unit, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	548
078 - 1.4l petrol engine , CZDA	549-564
1. 1.4l petrol engine , CZDA	549
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Starter relay	550
1, Starter relay 2, Fuse holder B	
3. Main relay, Fuse holder B	551
4. Vacuum pump relay, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C, Vacuum pump for brakes	552
5. Switch module 1 in centre console, Start/Stop operation button, Ambient temperature sensor, Onboard supply control unit, Engine/motor control unit	553
6. Accelerator pedal module, Radiator outlet coolant temperature sender, Engine/motor control unit	554
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Gearbox	555
8. Brake light switch, Oil level and oil temperature sender, Engine/motor control unit	556
9. Steering column electronics control unit, Engine/motor control unit	557
10. Hall sender, Data bus diagnostic interface, Engine/motor control unit	558
11. Coolant temperature sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	559
12. Intake manifold sender, Charge pressure sender, Engine speed sender, Engine/motor control unit, Fuel pressure regulating valve	560
13. Throttle valve module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	561
14. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Ignition coil 2 with output stage, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	562
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Knock sensor 1, Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Charge air cooling pump	563
16. Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	564
079 - Lane change assist , (7Y8),(7Y9)	565-567
1. Lane change assist , (7Y8),(7Y9)	565
2. Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in left exterior mirror, Driver side exterior mirror	566
3. Data bus diagnostic interface, Blind Spot Monitor control unit, Blind Spot Monitor control unit 2, Blind Spot Monitor warning lamp in right exterior mirror, Passenger side exterior mirror	567
080 - 12 V sockets	568-570
1. 12 V sockets	568
2. Relay for power sockets, Fuse holder C, 12 V socket 2	569
3. Onboard supply control unit, USB charging socket 1, Connection 2 (58d), in dash panel wiring harness	570
801 - - Fitting locations: Earth points - 3	571-583
1. - Fitting locations: Earth points	571-583
1.1 Earth points in front part of vehicle	571-577
1.1.1 Front from left	571-572
1.1.2 Front from right	573
1.1.3 1.4l petrol engine, CZDA, CWLA, DGXA, DJXA	574
1.1.4 2.0l petrol engine. DKFA. CXDB	575

1.1.5 Dual clutch gearbox, 0GC, 0D9	576
1.1.6 Manual gearbox, 02S, 0AF, 0A4, 02Q	577
1.1.7 Automatic gearbox 09S	578
1.2 Earth points in middle part of vehicle	578-581
1.2.1 Front left of interior	579
1.2.2 Front right of interior	580
1.2.3 Front middle of interior	581
1.2.4 Front passenger seat	582
1.3 Earth points in rear part of vehicle	582-583
1.3.1 Luggage compartment	583
802 - -Fitting locations: Fuses - 3	584-624
1. Fuses	584-624
1.1 Fuse holder A -SA-, from December 2017	584-585
1.1.1 Fitting location of fuse holder A -SA-, from December 2017	585
1.1.2 Fuse assignment for fuse holder A -SA-, from December 2017	586
1.2 Fuse holder B -SB-, from December 2017	586-591
1.2.1 Fitting location of fuse holder B -SB-, from December 2017	587
1.2.2 Fuse assignment for fuse holder B -SB-, from December 2017	588-591
1.3 Fuse holder B -SB-, from September 2018	592-597
1.3.1 Fitting location of fuse holder B -SB-, from September 2018	592-593
1.3.2 Fuse assignment for fuse holder B -SB-, from September 2018	594-597
1.4 Fuse holder C -SC-, from December 2017	598-603
1.4.1 Fitting location of fuse holder C -SC-, from December 2017	598-599
1.4.2 Fuse assignment for fuse holder C -SC-, from December 2017	600-603
1.5 Fuse holder C -SC-, from September 2018	604-609
1.5.1 Fitting location of fuse holder C -SC-, from September 2018	604-605
1.5.2 Fuse assignment for fuse holder C -SC-, from September 2018	606-609
1.6 Fuse holder C -SC-, from August 2019	610-615
1.6.1 Fitting location of fuse holder C -SC-, from August 2019	610-611
1.6.2 Fuse assignment for fuse holder C -SC-, from August 2019	612-615
1.7 Fuse holder C -SC-, from January 2020	616-621
1.7.1 Fitting location of fuse holder C -SC-, from January 2020	616-617
1.7.2 Fuse assignment for fuse holder C -SC-, from January 2020	618-621
1.8 Single fuses, from December 2017	622-624
1.8.1 Fitting location of single fuses, from December 2017	622
1.8.2 Fuse assignment for single fuses, from December 2017	623-624
803 - - Fitting locations: Relays - 3	625-633
1. Relays	625-633
1.1 Relay on fuse holder B -SB-, from December 2017	626
1.1.1 Relay on fuse holder B -SB-, from December 2017	626
1.2 Relay on fuse holder C -SC-, from December 2017	627
1.2.1 Relay on fuse holder C -SC-, from December 2017	628
1.3 Relays on fuse holder C -SC-, from September 2018	628
1.3.1 Relays on fuse holder C -SC-, from September 2018	629
1.4 Relay and fuse carrier 3 -SR3-, from December 2017	629
1.4.1 Relay and fuse carrier 3 -SR3-, from December 2017	630
1.5 Relay carrier 5 -SR5-, from December 2017	630
1.5.1 Relay carrier 5 -SR5-, from December 2017	631
1.6 Relay on fuse carrier 1 -ST1-, from December 2017	631
1.6.1 Relay on fuse carrier 1 -ST1-, from December 2017	632
1.7 Vacuum pump relay -J318-	632-633
1.7.1 Vacuum pump relay -J318-	633
804 - - Fitting locations: front part of vehicle - 3	634-668
1. - Fitting locations: front part of vehicle	634-668
1.1 Front, view from front	641-642
1.2 Front, view from left	643-646
1.2.1 Front, view from left, part 1	643-644
1.2.2 Front, view from left, part 2	645-646
1.3 Front, view from right	647
1.3.1 Front, view from right, part 1	647
1.3.2 Front, view from right, part 2	648
1.4 1.4l petrol engine, CZDA, CWLA, DGXA, DJXA	648-652
1.4.1 1.4l petrol engine, CZDA, CWLA, DGXA, DJXA, from front	649
1.4.2 1.4l petrol engine, CZDA, CWLA, DGXA, DJXA, from above	650-651
1.4.3 1.4l petrol engine, CZDA, CWLA, DJXA, from rear	652
1.4.4 1.4l petrol engine. DGXA. from rear	652

1.5 1.6l petrol engine, CWVA	653-656
1.5.1 1.6l petrol engine, CWVA, from front	654
1.5.2 1.6l petrol engine, CWVA, from above	654
1.5.3 1.6l petrol engine, CWVA, from left	655
1.5.4 1.6l petrol engine, CWVA, from rear	656
1.6 2.0l petrol engine, DKFA, CXDB	657-661
1.6.1 2.0l petrol engine, DKFA, CXDB, from front	658
1.6.2 2.0l petrol engine, DKFA, CXDB, from above	659
1.6.3 2.0l petrol engine, DKFA, CXDB, from left	659
1.6.4 2.0l petrol engine, DKFA, CXDB, from right	660
1.6.5 2.0l petrol engine, DKFA, CXDB, from rear	661
1.7 Manual gearbox	662-663
1.7.1 Manual gearbox, 02S, 02Q	663
1.7.2 Manual gearbox, 0AF, 0A4	663
1.8 Dual clutch gearbox	664-665
1.8.1 Dual clutch gearbox, 0GC	665
1.8.2 Dual clutch gearbox, 0D9	665
1.9 Automatic gearbox	666-668
1.9.1 Automatic gearbox, 09G	667
1.9.2 Automatic gearbox, 09S	667-668
805 - - Fitting locations: middle part of vehicle - 3	669-697
1. Fitting locations: middle part of vehicle	669-697
1.1 At front of interior	674-682
1.1.1 Front left of interior	675
1.1.2 Left footwell	676
1.1.3 Front right of interior	677
1.1.4 Dash panel	678
1.1.5 Steering wheel	679
1.1.6 Steering column	680
1.1.7 Front centre console	681
1.1.8 Left front seat	682
1.1.9 Right front seat	683
1.2 Rear interior	683-685
1.2.1 Rear interior, view from left	684
1.2.2 Rear interior, view from right	685
1.2.3 Rear centre console	686
1.3 Roof	686-688
1.3.1 Roof, part 1	687
1.3.2 Roof, part 2, with no sliding/tilting sunroof, 3FA	688
1.3.3 Roof, sliding/tilting sunroof, 3FB	689
1.4 Doors	689-692
1.4.1 Driver door	690
1.4.2 Front passenger door	691
1.4.3 Rear left door	692
1.4.4 Rear right door	693
1.5 Heater and air conditioning unit	693-697
1.5.1 Air conditioning system, KH6, part 1	694
1.5.2 Air conditioning system, KH6, part 2	695
1.5.3 Climatronic, 9AK, part 1	696
1.5.4 Climatronic, 9AK, part 2	697
806 - - Fitting locations: rear part of vehicle - 3	698-700
1. Fitting locations: rear part of vehicle	698-700
1.1 Rear side	699-700
807 - -Fitting locations: vehicle underbody - 3	701-702
1. -Fitting locations: vehicle underbody	701-702
1.1 Underbody	701-702
830 - -Connector views: parts with prefix A to D - 3	703-704
1. Connector views: parts with prefix A to D	703-704
1.1 Starter -B-	703
1.2 Alternator with voltage regulator -CX1-	703
1.3 Immobiliser reader coil -D2-	703-704
831 - -Connector views: parts with prefix E - 3	705-721
1. Connector views: parts with prefix E	705-721
1.1 Driver seat lumbar support adjustment switch -E176-	706
1.2 Key operated switch to deactivate airbag on front passenger side -E224-	706
1.3 Rear lid remote release button -E233-	706

1.4 Driver side belt switch -E24-	707
1.5 Front passenger side belt switch -E25-	707
1.6 Driver side interior locking button for central locking system -E308-	708
1.7 Selector lever -E313-	708
1.8 Starter button -E378-	709
1.9 Operating unit for preparation for mobile telephone -E508-	709
1.10 Operating unit for window regulator in driver door -E512-	710
1.11 Rear driver side window regulator button -E711-	710
1.12 Rear passenger side window regulator button -E713-	711
1.13 Front passenger side window regulator button -E716-	711
1.14 Rear left seat heating switch -E77-	712
1.15 Rear right seat heating switch -E78-	712
1.16 Rotary light switch -EX1-	713
1.17 Exterior mirror adjuster -EX11-	713
1.18 Parking brake button -EX12-	714
1.19 Tank flap release -EX13-	714
1.20 Heater and air conditioning controls -EX21-	715
1.21 Switch module 1 in centre console -EX23-	716
1.22 Hazard warning light switch -EX3-	717
1.23 Switch module 2 in centre console -EX30-	717
1.24 Operating unit for front left seat adjustment -EX33-	717
1.25 Rear lid handle -EX37-	718-719
1.26 Operating unit 2 for front left seat adjustment -EX38-	720
1.27 Interior mirror -EX5-	720
1.28 Driver exterior door handle -EX6-	720
1.29 Front passenger exterior door handle -EX7-	721
832 - -Connector views: parts with prefix F - 3	722-726
1. Connector views: parts with prefix F	722-726
1.1 Brake light switch -F-	722
1.2 Oil pressure switch -F1-	722
1.3 Driver vanity mirror contact switch -F147-	723
1.4 Front passenger vanity mirror contact switch -F148-	723
1.5 Bonnet contact switch -F266-	724
1.6 Brake fluid level warning contact -F34-	724
1.7 Oil pressure switch for reduced oil pressure -F378-	725
1.8 Reversing light switch -F4-	725-726
833 - -Connector views: parts with prefix G - 3	727-759
1. Connector views: parts with prefix G	727-759
1.1 Sunlight penetration photosensor -G107-	729
1.2 Seat occupied sensor, front passenger side -G128-	729
1.3 Left vent temperature sender -G150-	730
1.4 Right vent temperature sender -G151-	730
1.5 Ambient temperature sensor -G17-	731
1.6 Side airbag crash sensor on driver side -G179-	731
1.7 Side airbag crash sensor on front passenger side -G180-	732
1.8 Crash sensor for front airbag -G190-	732
1.9 Footwell vent temperature sender -G192-	733
1.10 Rear left parking aid sender -G203-	733
1.11 Rear centre left parking aid sender -G204-	734
1.12 Rear centre right parking aid sender -G205-	734
1.13 Rear right parking aid sender -G206-	735
1.14 Air quality sensor -G238-	735
1.15 Fuel pressure sender -G247-	736
1.16 Front right parking aid sender -G252-	736
1.17 Front centre right parking aid sender -G253-	737
1.18 Front centre left parking aid sender -G254-	737
1.19 Front left parking aid sender -G255-	738
1.20 Rear side airbag crash sensor on driver side -G256-	738
1.21 Rear side airbag crash sensor on passenger side -G257-	739
1.22 Oil level and oil temperature sender -G266-	739
1.23 Engine speed sender -G28-	740
1.24 Front airbag crash sensor for driver side -G283-	740
1.25 Front airbag crash sensor for front passenger side -G284-	741
1.26 Front right vehicle level sender -G289-	741
1.27 Hall sender 3 -G300-	742
1.28 Evaporator temperature sensor -G308-	742

1.29 Charge pressure sender -G31-	743
1.30 Coolant shortage indicator sender -G32-	743
1.31 Windscreen washer fluid level sender -G33-	744
1.32 Front left body acceleration sender -G341-	744
1.33 Front right body acceleration sender -G342-	745
1.34 Rear body acceleration sender -G343-	745
1.35 Hall sender -G40-	746
1.36 Rear right speed sensor -G44-	746
1.37 Front right speed sensor -G45-	747
1.38 Rear left speed sensor -G46-	747
1.39 Front left speed sensor -G47-	748
1.40 Clutch position sender -G476-	748
1.41 Driver side belt force limiter -G551-	749
1.42 Front passenger side belt force limiter -G552-	749
1.43 Anti-theft alarm sensor -G578-	750
1.44 Vacuum sender -G608-	750
1.45 Sender 1 for secondary air pressure -G609-	751
1.46 Knock sensor 1 -G61-	751
1.47 Coolant temperature sender -G62-	752
1.48 Gearbox neutral position sender -G701-	752
1.49 Ethanol concentration sender -G708-	753
1.50 Rear left vehicle level sender -G76-	753
1.51 Front left vehicle level sender -G78-	754
1.52 Pressure sender for refrigerant circuit -G805-	754
1.53 Air humidity, rain and light sensor -G823-	755
1.54 Radiator outlet coolant temperature sender -G83-	755
1.55 Fuel delivery unit -GX1-	756
1.56 Lambda probe 1 before catalytic converter -GX10-	756
1.57 Accelerator pedal module -GX2-	757
1.58 Throttle valve module -GX3-	758
1.59 Lambda probe 1 after catalytic converter -GX7-	758
1.60 Intake manifold sender -GX9-	759
834 - -Connector views: parts with prefix H to I - 3	760-763
1. -Connector views: parts with prefix H to I	760-763
1.1 Alarm horn -H12-	760
1.2 Rear parking aid warning buzzer -H15-	760
1.3 Treble horn -H2-	761
1.4 Front parking aid warning buzzer -H22-	761
1.5 Bass horn -H7-	762
1.6 Anti-theft alarm system horn -H8-	762-763
835 - -Connector views: parts with prefix J - 3	764-790
1. Connector views: parts with prefix J	764-790
1.1 ABS control unit -J104-	765
1.2 Blind Spot Monitor control unit -J1086-	765
1.3 Blind Spot Monitor control unit 2 -J1087-	766
1.4 Fresh air blower control unit -J126-	766
1.5 Automatic gearbox control unit -J217-	767
1.6 Airbag control unit -J234-	767
1.7 Electronically controlled damping control unit -J250-	768
1.8 Vacuum pump relay -J318-	768
1.9 Battery monitor control unit -J367-	769
1.10 Driver door control unit -J386-	769-770
1.11 Front passenger door control unit -J387-	771
1.12 Adaptive cruise control unit -J428-	772
1.13 Parking aid control unit -J446-	773
1.14 Remote starting system relay -J471-	773
1.15 Power steering control unit -J500-	774
1.16 Onboard supply control unit -J519-	775
1.17 Digital sound package control unit -J525-	776
1.18 Steering column electronics control unit -J527-	777
1.19 Data bus diagnostic interface -J533-	778
1.20 Fuel pump control unit -J538-	779
1.21 Engine/motor control unit -J623-	779
1.22 Axle differential lock control unit -J647-	780
1.23 Display unit for front information display and operating unit control unit -J685-	781
1.24 Seat occupied recognition control unit -J706-	782

1.25 Mechatronic unit for dual clutch gearbox -J743-	782
1.26 Control unit for electronic steering column lock -J764-	783
1.27 Heated rear seats control unit -J786-	784
1.28 Control unit 1 for information electronics -J794-	784-787
1.29 Driver seat adjustment control unit -J810-	788
1.30 Control unit for structure-borne sound -J869-	789
1.31 Control unit for fuel tank leak detection -J909-	789
1.32 Emergency call module control unit and communication unit -J949-	789
1.33 Interface for entry and start system -J965-	790
836 - -Connector views: parts with prefix K to M - 3	791-794
1. Connector views: parts with prefix K to M	791-794
1.1 Central locking SAFELOCK function warning lamp -K133-	791
1.2 Warning lamp for airbag deactivated on front passenger side -K145-	791
1.3 Front left footwell light -K268-	792
1.4 Front right footwell light -K269-	793
1.5 Dash panel insert -KX2-	793-794
837 - -Connector views: parts with prefix N - 3	795-812
1. Connector views: parts with prefix N	795-812
1.1 Secondary air inlet valve -N112-	796
1.2 Ignition coil 2 with output stage -N127-	796
1.3 Airbag igniter 1 on front passenger side -N131-	797
1.4 Driver seat belt tensioner igniter 1 -N153-	798
1.5 Front passenger seat belt tensioner igniter 1 -N154-	798
1.6 Side airbag igniter on driver side -N199-	799
1.7 Side airbag igniter on front passenger side -N200-	799
1.8 Camshaft control valve 1 -N205-	800
1.9 Turbocharger air recirculation valve -N249-	800
1.10 Driver side curtain airbag igniter -N251-	801
1.11 Front passenger side curtain airbag igniter -N252-	801
1.12 Fuel metering valve -N290-	802
1.13 Ignition coil 3 with output stage -N291-	802
1.14 Ignition coil 4 with output stage -N292-	803
1.15 Injector, cylinder 1 -N30-	803
1.16 Injector, cylinder 2 -N31-	804
1.17 Exhaust camshaft control valve 1 -N318-	804
1.18 Injector, cylinder 3 -N32-	805
1.19 Injector, cylinder 4 -N33-	805
1.20 Front left shock absorber damping adjustment valve -N336-	806
1.21 Front right shock absorber damping adjustment valve -N337-	806
1.22 Rear left shock absorber damping adjustment valve -N338-	807
1.23 Rear right shock absorber damping adjustment valve -N339-	807
1.24 Ignition key withdrawal lock solenoid -N376-	808
1.25 Valve for oil pressure control -N428-	808
1.26 Coolant valve for gearbox -N488-	809
1.27 Ignition coil 1 with output stage -N70-	809
1.28 Heater element for crankcase breather -N79-	810
1.29 Activated charcoal filter solenoid valve 1 -N80-	810
1.30 Gearbox -NX1-	811-812
839 - -Connector views: parts with prefix R - 3	813-824
1. Connector views: parts with prefix R	813-824
1.1 Rear bumper aerial for entry and start system -R136-	813
1.2 Interior aerial 1 for entry and start system -R138-	814
1.3 Interior aerial 2 for entry and start system -R139-	814
1.4 Rear left treble loudspeaker -R14-	815
1.5 Rear left bass loudspeaker -R15-	815
1.6 Rear right treble loudspeaker -R16-	816
1.7 Rear right bass loudspeaker -R17-	816
1.8 Frequency modulation (FM) frequency filter in negative wire -R178-	817
1.9 Frequency modulation (FM) frequency filter in positive wire -R179-	817
1.10 Front left loudspeaker -R2-	818
1.11 Front left treble loudspeaker -R20-	818
1.12 Front left bass loudspeaker -R21-	819
1.13 Subwoofer -R211-	819
1.14 Actuator for structure-borne sound -R214-	820
1.15 Front right treble loudspeaker -R22-	820
1.16 Front right bass loudspeaker -R23-	821

1.17 Front camera for driver assist systems -R242-	821
1.18 Radio aerial -R248-	822
1.19 Storage compartment with interface for mobile telephone -R265-	822
1.20 Front right loudspeaker -R3-	823
1.21 Telephone microphone -R38-	823-824
840 - -Connector views: parts with prefix S to U - 3	825-851
1. Connector views: parts with prefix S to U	825-851
1.1 Coupling point on front left exterior door handle -TGVL-	825
1.2 Coupling point on front right exterior door handle -TGVR-	826
1.3 Coupling point in front left seat -TISVL-	827
1.4 Coupling point in front right seat -TISVR-	828
1.5 Coupling point in interior, below left -TIUL-	829-833
1.6 Coupling point in engine compartment, left -TML-	834-839
1.7 Coupling point on engine, top centre -TMOM-	840
1.8 Coupling point on engine, bottom left -TMUL-	841
1.9 Coupling point for front left seat -TSVL-	842-843
1.10 Coupling point for front right seat -TSVR-	844
1.11 Coupling point for rear left door -TTHL-	845
1.12 Coupling point for rear right door -TTHR-	846
1.13 Coupling point for front left door -TTVL-	847
1.14 Coupling point for front right door -TTVR-	848
1.15 12 V socket 2 -U18-	849
1.16 Diagnostic connection -U31-	850
1.17 USB charging socket 1 -U37-	850
1.18 USB connection 1 -U41-	850-851
841 - -Connector views: parts with prefix V - 3	852-868
1. Connector views: parts with prefix V	852-868
1.1 Windscreen wiper motor -V-	853
1.2 Secondary air pump motor -V101-	853
1.3 Headlight washer system pump -V11-	854
1.4 Air recirculation flap control motor -V113-	854
1.5 Driver seat height adjustment motor -V138-	854
1.6 Left window regulator motor -V14-	855
1.7 Right window regulator motor -V15-	855
1.8 Vacuum pump for brakes -V192-	856
1.9 Rear left window regulator motor -V26-	857
1.10 Rear right window regulator motor -V27-	857
1.11 Driver seat longitudinal adjustment motor -V28-	858
1.12 Left parking brake motor -V282-	858
1.13 Right parking brake motor -V283-	859
1.14 Driver seat backrest adjustment motor -V45-	859
1.15 Coolant pump for low-temperature circuit -V468-	860
1.16 Gearbox oil cooling pump -V478-	860
1.17 Washer pump -V5-	861
1.18 Front left seat cushion fan 1 -V514-	861
1.19 Front right seat backrest fan 1 -V516-	862
1.20 Front right seat cushion fan 1 -V518-	862
1.21 Radiator blind control motor -V544-	863
1.22 Circulation pump -V55-	863
1.23 Air flow flap control motor -V71-	864
1.24 Driver door lock unit -VX21-	864
1.25 Rear left door lock unit -VX23-	865
1.26 Rear right door lock unit -VX24-	865
1.27 Rear lid lock unit -VX25-	866
1.28 Driver side exterior mirror -VX4-	866
1.29 Passenger side exterior mirror -VX5-	867
1.30 Radiator fan -VX57-	867-868
842 - -Connector views: parts with prefix W to Z - 3	869-881
1. Connector views: parts with prefix W to Z	869-881
1.1 Front passenger side illuminated vanity mirror -W14-	870
1.2 Driver side illuminated vanity mirror -W20-	870
1.3 Luggage compartment light -W3-	870
1.4 Rear interior light -W43-	871
1.5 Light for driver door background lighting -W86-	871
1.6 Light for passenger door background lighting -W87-	872
1.7 Driver side entry light -W92-	872

1.8 Passenger side entry light -W93-	873
1.9 Light 2 for driver door background lighting -W97-	873
1.10 Light 2 for passenger door background lighting -W98-	874
1.11 Front interior light -WX1-	874
1.12 Rear interior light -WX2-	875
1.13 Left number plate light -X4-	875
1.14 Right number plate light -X5-	876
1.15 Heated backrest for rear left seat -Z11-	876
1.16 Windscreen heater for front sensors -Z113-	877
1.17 Heated backrest for rear right seat -Z13-	877
1.18 Heated windscreen -Z2-	878
1.19 Left washer jet heater element -Z20-	878
1.20 Right washer jet heater element -Z21-	879
1.21 Rear left seat heating -ZX10-	879
1.22 Rear right seat heating -ZX12-	880
1.23 Heating element with seat occupied recognition, front passenger side -ZX14-	880
1.24 Seat heating (driver side) -ZX15-	881
849 - --General information-- - 3	882-896
1. Current flow diagram - general information	882-896
1.1 Signal names	882-890
1.1.1 Signal names, from 2018	882-885
1.1.2 Signal names - DIN standard 72552	886-889
1.1.3 Signal names - supplement	890
1.2 Wires	891-892
1.2.1 Wire cross-section	891
1.2.2 Wire colour	891
1.2.3 Coaxial cable	892
1.3 Fuse colours	893-896