



Workshop Manual Jetta 2022 ➤

Brake system

Edition 09.2021



Contents

| | |
|--|-----------|
| 00 - Materials | 1 |
| 1 Safety information | 1 |
| 1.1 Safety measures when working on vehicles with start/stop system | 1 |
| 1.2 Safety precautions when using testing and measuring instruments during a road test | 1 |
| 2 Identification | 2 |
| 2.1 Allocation of PR number - brakes | 2 |
| 3 Technical data | 4 |
| 3.1 Technical data for brakes | 4 |
| 4 Brake test | 6 |
| 4.1 General notes | 6 |
| 4.2 Checking vehicles with front-wheel drive | 6 |
| 4.3 Checking electromechanical parking brake | 6 |
| 45 - Anti-lock brake system | 7 |
| 1 General notes | 7 |
| 1.1 Repair instructions for repair work on ABS | 7 |
| 2 Overview of fitting locations | 9 |
| 2.1 Overview of fitting locations – ABS/ESP | 9 |
| 3 Control unit and hydraulic unit | 12 |
| 3.1 Assembly overview – control unit and hydraulic unit | 12 |
| 3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55 | 14 |
| 3.3 Separating control unit from hydraulic unit | 21 |
| 3.4 Fitting control unit to hydraulic unit | 22 |
| 3.5 Connecting brake lines to hydraulic unit | 23 |
| 4 Sensors | 25 |
| 4.1 Assembly overview – speed sensor on front axle | 25 |
| 4.2 Assembly overview – speed sensors on rear axle | 26 |
| 4.3 Removing and installing ESP sensor unit G419 | 27 |
| 4.4 Removing and installing speed sensors on front axle G45/G47 | 27 |
| 4.5 Removing and installing speed sensors on rear axle G44/G46 | 28 |
| 4.6 Checking ABS sensor ring | 30 |
| 46 - Brakes - mechanism | 32 |
| 1 Front brake | 32 |
| 1.1 Assembly overview – front brake | 32 |
| 1.2 Removing and installing brake pads | 34 |
| 1.3 Removing and installing brake caliper | 36 |
| 1.4 Removing and installing brake carrier | 38 |
| 1.5 Removing and installing brake disc | 40 |
| 1.6 Removing and installing brake splash plate | 41 |
| 2 Rear brake | 43 |
| 2.1 Assembly overview - rear brakes | 43 |
| 2.2 Removing and installing brake pads | 45 |
| 2.3 Removing and installing brake caliper | 51 |
| 3 Parking brake | 56 |
| 3.1 Overview of fitting locations - parking brake | 56 |
| 3.2 Removing and installing control unit for electromechanical parking brake J540 | 58 |
| 3.3 Removing and installing parking brake motor V282/V283 | 58 |
| 4 Brake pedal | 61 |
| 4.1 Assembly overview – brake pedal | 61 |
| 4.2 Removing and installing mounting bracket | 63 |



| | | |
|-----------|--|------------|
| 4.3 | Separating brake pedal from brake servo | 65 |
| 4.4 | Connecting brake pedal to brake servo | 66 |
| 4.5 | Removing and installing brake pedal | 67 |
| 47 | Brakes - hydraulics | 68 |
| 1 | Front brake caliper | 68 |
| 1.1 | Assembly overview – front brake caliper | 68 |
| 1.2 | Removing and installing brake caliper piston | 69 |
| 2 | Rear brake caliper | 73 |
| 2.1 | Assembly overview – rear brake caliper | 73 |
| 2.2 | Removing and installing protective cap | 73 |
| 3 | Brake servo and brake master cylinder | 77 |
| 3.1 | Assembly overview – brake servo/brake master cylinder | 77 |
| 3.2 | Removing and installing brake light switch | 79 |
| 3.3 | Removing and installing brake servo | 80 |
| 3.4 | Removing and installing brake master cylinder | 87 |
| 4 | Vacuum system | 92 |
| 4.1 | Assembly overview - vacuum pump | 92 |
| 4.2 | Checking non-return valve | 92 |
| 4.3 | Removing and installing vacuum sender G608 | 93 |
| 4.4 | Checking vacuum system | 94 |
| 5 | Brake lines | 100 |
| 5.1 | Repairing brake lines | 100 |
| 6 | Hydraulic system | 104 |
| 6.1 | General notes on brake fluid | 104 |
| 6.2 | Pre-bleeding hydraulic system | 104 |
| 6.3 | Bleeding hydraulic system following standard procedure | 107 |
| 6.4 | Subsequent bleeding of hydraulic system | 108 |
| 6.5 | Leak test | 109 |