



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when working on subframe	1
<b>2 Repair notes</b>	<b>2</b>
2.1 Leaks at shock absorbers	2
2.2 Noises from shock absorbers	2
2.3 Checking shock absorbers when removed	3
2.4 Steering rack	3
2.5 Gaskets and seals	4
2.6 Nuts and bolts	4
2.7 Electrical components	4
2.8 Raising suspension to unladen position (vehicles with coil springs)	4
<b>3 Evaluating accident vehicles</b>	<b>8</b>
3.1 Check list for evaluating running gear on accident vehicles	8
<b>4 Disposal</b>	<b>10</b>
4.1 Releasing gas and draining front gas-filled shock absorbers	10
4.2 Releasing gas and draining rear gas-filled shock absorbers	12
<b>40 - Front suspension</b>	<b>13</b>
<b>1 Front axle</b>	<b>13</b>
1.1 Overview of fitting locations – front axle	13
<b>2 Subframe</b>	<b>16</b>
2.1 Assembly overview – subframe	16
2.2 Removing and installing subframe without steering rack	16
2.3 Removing and installing subframe with steering rack	21
2.4 Repairing subframe	29
2.5 Repairing thread in longitudinal member	40
2.6 Fixing subframe in position	40
2.7 Lowering subframe	44
<b>3 Anti-roll bar</b>	<b>49</b>
3.1 Assembly overview – anti-roll bar	49
3.2 Removing and installing anti-roll bar	49
3.3 Removing and installing coupling rod	55
<b>4 Suspension strut, upper suspension link</b>	<b>56</b>
4.1 Assembly overview - suspension strut, upper suspension link	56
4.2 Removing and installing suspension strut	57
4.3 Repairing suspension strut	67
<b>5 Lower suspension link, swivel joint</b>	<b>72</b>
5.1 Assembly overview - lower suspension link, swivel joint	72
5.2 Removing and installing lower suspension link	73
5.3 Checking swivel joint	79
5.4 Removing and installing swivel joint	80
5.5 Renewing bonded rubber bush for lower suspension link	85
<b>6 Wheel bearing</b>	<b>93</b>
6.1 Assembly overview – wheel bearing assembly	93
6.2 Removing and installing wheel bearing housing	93
6.3 Removing and installing wheel bearing unit	99
<b>7 Drive shaft</b>	<b>103</b>
7.1 Overview - drive shaft	103
7.2 Assembly overview – drive shaft	104



7.3	Removing and installing drive shaft	112
7.4	Loosening and tightening threaded connections of drive shaft	125
7.5	Removing and installing drive shaft heat shield	127
7.6	Dismantling and assembling drive shaft	127
7.7	Checking outer constant velocity joint	146
7.8	Checking inner constant velocity joint	148
<b>42</b>	<b>Rear suspension</b>	<b>151</b>
<b>1</b>	<b>Rear axle</b>	<b>151</b>
1.1	Overview – rear axle	151
1.2	Lowering rear axle	154
1.3	Removing and installing rear axle	157
<b>2</b>	<b>Axle beam</b>	<b>164</b>
2.1	Assembly overview – axle beam	164
2.2	Assembly overview - attachments for torsion beam axle	164
2.3	Removing and installing stone deflector for axle beam	166
2.4	Renewing bonded rubber bush for axle beam	167
<b>3</b>	<b>Subframe</b>	<b>177</b>
3.1	Assembly overview – subframe	177
3.2	Fixing subframe in position	177
<b>4</b>	<b>Anti-roll bar</b>	<b>183</b>
4.1	Assembly overview – anti-roll bar	183
4.2	Removing and installing anti-roll bar	183
4.3	Removing and installing coupling rod	184
<b>5</b>	<b>Suspension link, track rod</b>	<b>187</b>
5.1	Assembly overview - transverse link	187
5.2	Assembly overview – track rod	189
5.3	Removing and installing upper transverse link	189
5.4	Removing and installing lower transverse link	190
5.5	Removing and installing track rod	192
<b>6</b>	<b>Suspension strut, shock absorber, spring</b>	<b>194</b>
6.1	Assembly overview - suspension strut, shock absorber, spring	194
6.2	Removing and installing shock absorber	196
6.3	Repairing shock absorber	202
6.4	Removing and installing spring	204
<b>7</b>	<b>Wheel bearing assembly, trailing arm</b>	<b>214</b>
7.1	Assembly overview – wheel bearing assembly	214
7.2	Assembly overview - trailing arm	216
7.3	Removing and installing wheel bearing housing	217
7.4	Removing and installing wheel bearing unit	222
7.5	Renewing bonded rubber bush for wheel bearing housing	226
7.6	Removing and installing trailing arm with mounting bracket	230
7.7	Repairing trailing arm	234
<b>43</b>	<b>Self-levelling suspension</b>	<b>240</b>
<b>1</b>	<b>Electronic damping control</b>	<b>240</b>
1.1	Overview of fitting locations - electronically controlled damping system	240
1.2	Removing and installing electronically controlled damping control unit J250	242
1.3	Removing and installing front body acceleration senders G341/G342	243
1.4	Removing and installing rear left body acceleration sender G699	246
<b>2</b>	<b>Vehicle level sender</b>	<b>248</b>
2.1	Assembly overview – front vehicle level senders	248
2.2	Assembly overview – rear vehicle level senders	249
2.3	Removing and installing front vehicle level senders G78/G289	250
2.4	Removing and installing rear vehicle level senders G76/G77	252



<b>44 - Wheels, tyres, vehicle geometry</b>	<b>254</b>
<b>1 Wheel alignment</b>	<b>254</b>
1.1 Notes for wheel alignment	254
1.2 Prerequisites for checking	255
1.3 Preparations for testing	255
1.4 Specifications for wheel alignment	257
1.5 Wheel alignment procedure	259
1.6 Necessity of wheel alignment	261
1.7 Vehicle data sticker	263
1.8 Adjusting camber at front wheels	263
1.9 Adjusting camber on rear axle	265
1.10 Adjusting toe at rear axle	267
1.11 Adjusting front axle toe	267
1.12 Wheel runout compensation	268
1.13 Checking maximum steering wheel angle	269
<b>2 Adaptive cruise control</b>	<b>270</b>
<b>3 Front camera for driver assist systems</b>	<b>271</b>
<b>48 - Steering</b>	<b>272</b>
<b>1 Steering wheel</b>	<b>272</b>
1.1 Assembly overview – steering wheel	272
1.2 Removing and installing steering wheel	273
<b>2 Steering column</b>	<b>275</b>
2.1 Assembly overview – steering column	275
2.2 Checking steering column for damage	276
2.3 Handling and transporting steering column	277
2.4 Removing and installing steering column	278
2.5 Removing and installing control unit for electronic steering column lock J764	283
<b>3 Steering rack</b>	<b>286</b>
3.1 Assembly overview – steering rack	286
3.2 Removing and installing steering rack	288
3.3 Removing and installing bellows	297
3.4 Removing and installing track rod	300
3.5 Removing and installing track rod ball joint	304
3.6 Repairing steering rack	306
<b>4 Sensors</b>	<b>311</b>
4.1 Removing and installing steering angle sender G85	311