



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working with pyrotechnic components	1
1.2 Safety measures when working on vehicles with start/stop system	3
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	3
1.4 Additional safety regulations for airbag control unit	4
1.5 Additional safety regulations for side airbag	4
1.6 Additional safety instructions for curtain airbag	5
1.7 Safety regulations for crash sensors (pressure sensors) for front side airbags	5
1.8 Additional safety instructions for repair work on seat occupied recognition for front passenger airbag deactivation - country-specific	6
1.9 Measures for seat occupied recognition for front passenger airbag deactivation following an accident - country-specific	6
1.10 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	7
1.11 Checking airbag securing parts after an accident	9
1.12 Accident without airbag triggering	10
1.13 Checking seat belts	10
1.14 Check belt webbing	10
1.15 Checking inertia reel (locking mechanism)	11
1.16 Visually checking belt buckle	12
1.17 Check operation of belt buckle	12
1.18 Checking belt relays, and buckle tongues	12
1.19 Checking securing parts and anchorage points after an accident	13
1.20 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	13
1.21 Checking child seat anchors after an accident	13
1.22 Safety instructions for automatic anti-dazzle interior mirror	14
2 Repair notes	15
2.1 Contact corrosion	15
2.2 Routing and attachment of lines	15
2.3 Identification labels	15
2.4 Using impact drivers	15
68 - Interior equipment	17
1 Safety information	17
2 Compartments/covers	18
2.1 Overview of fitting locations – compartments/covers	18
2.2 Assembly overview – dash panel cover on driver side	19
2.3 Assembly overview - steering column trim	20
2.4 Assembly overview – glove compartment	21
2.5 Assembly overview - storage compartment in headliner	22
2.6 Removing and installing dash panel cover on driver side	23
2.7 Removing and installing upper steering column trim	24
2.8 Removing and installing lower steering column trim	26
2.9 Removing and installing glove compartment opener	27
2.10 Removing and installing glove compartment	28
2.11 Removing and installing glove compartment cover	29
2.12 Removing and installing restrictor for glove compartment cover	30
2.13 Service position for glove compartment cover	31
2.14 Removing and installing headliner storage compartment	31
2.15 Removing and installing footwell cover on front passenger side	33
3 Equipment	34



3.1	Assembly overview – sun visors	34
3.2	Removing and installing sun visor	34
3.3	Removing and installing sun visor centre mount	37
3.4	Removing and installing roof grab handle	37
3.5	Removing and installing grab handle bracket	40
4	Centre console	42
4.1	Assembly overview – centre console	42
4.2	Removing and installing rear centre console trim	44
4.3	Removing and installing centre console cover	44
4.4	Removing and installing front ashtray	46
4.5	Removing and installing centre console trim in front footwell	46
4.6	Removing and installing centre console	47
4.7	Removing and installing centre console bracket	49
4.8	Removing and installing trim for operating and display unit	51
5	Front centre armrest	52
5.1	Removing and installing front centre armrest	52
6	Interior mirror	53
6.1	Assembly overview – interior mirror	53
6.2	Removing and installing interior mirror	56
69	- Passenger protection	67
1	Safety information	67
2	Seat belts	68
2.1	Overview of fitting locations – seat belts and anchorage points	68
2.2	Assembly overview – front three-point seat belt	70
2.3	Assembly overview – rear outer three-point seat belt	72
2.4	Assembly overview – rear centre three-point seat belt	73
2.5	Assembly overview – front belt buckle	74
2.6	Assembly overview – rear belt buckle	75
2.7	Removing and installing front three-point seat belt	76
2.8	Removing and installing rear three-point seat belt	83
2.9	Removing and installing front belt guide	86
2.10	Removing and installing front belt end fitting	86
2.11	Removing and installing rear outer belt end fitting	89
2.12	Removing and installing belt height adjuster	90
2.13	Removing and installing front belt buckle	91
2.14	Removing and installing rear belt buckle	92
3	Child seat anchors	94
3.1	Testing after accident	94
3.2	Removing and installing guide for ISOFIX child seat anchor	94
3.3	Removing and installing rear child seat anchors	95
4	Airbag system	96
4.1	Overview of fitting locations – airbag system	96
5	Airbag control unit	99
5.1	Assembly overview – airbag control unit	99
5.2	Removing and installing airbag control unit J234	99
6	Front airbag	103
6.1	Assembly overview – front airbag, driver side	103
6.2	Removing and installing airbag unit with igniter	104
6.3	Removing and installing return spring with slip ring (coil connector)	108
6.4	Renewing connector on airbag	108
7	Front passenger airbag	111
7.1	Assembly overview – front passenger airbag	111
7.2	Removing and installing front passenger airbag unit with igniter	112



7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	114
7.4	Removing and installing front passenger airbag warning lamp K145	116
7.5	“Advanced airbag system” (only for North American Region/Canada)	116
8	Side airbags	117
8.1	Assembly overview – front side airbag	117
8.2	Removing and installing front side airbag with igniter	117
9	Curtain airbags	121
9.1	Assembly overview – curtain airbag	121
9.2	Removing and installing curtain airbag with igniter	121
10	Airbag crash sensors	126
10.1	Overview of fitting locations – airbag crash sensors	126
10.2	Removing and installing front airbag crash sensor	127
10.3	Removing and installing front side airbag crash sensor G179/G180	130
10.4	Removing and installing rear side airbag crash sensor G256/G257	132
11	Seat position sensor	135
11.1	Assembly overview – seat position sensor	135
11.2	Removing and installing seat position sensor	135
12	Seat belt verification	138
12.1	Removing and installing Seat occupied sensor, front passenger side G128	138
13	Seat occupied recognition	139
13.1	Assembly overview - seat occupied recognition	139
13.2	Removing and installing seat occupied recognition control unit J706	140
13.3	Removing and installing front seat occupied sensor G1067/G128	141
13.4	Removing and installing bracket for seat occupied recognition control unit J706	146
13.5	Importers reporting obligation	147
70	Trim, insulation	148
1	Safety information	148
2	Front door trims	149
2.1	Assembly overview – front door trim	149
2.2	Removing and installing trim	151
2.3	Removing and installing front door trim	152
2.4	Removing and installing mirror cover trim	156
3	Rear door trims	158
3.1	Assembly overview – rear door trim	158
3.2	Removing and installing rear door trim	158
4	Dash panel	164
4.1	Assembly overview - dash panel	164
4.2	Removing and installing dash panel end cover	166
4.3	Removing and installing dash panel trim	167
4.4	Removing and installing radio/navigation system mounting frame	170
4.5	Removing and installing dash panel	171
4.6	Removing and installing outer dash panel vents	176
4.7	Removing and installing side defroster vent	177
4.8	Removing and installing dash panel insert trim	178
4.9	Removing and installing centre vent	180
5	Central tube for dash panel	182
5.1	Assembly overview – central tube for dash panel	182
5.2	Removing and installing dash panel cross member	184
5.3	Removing and installing impact damper	189
5.4	Removing and installing crash bar	192
6	Interior trims	194
6.1	Overview of fitting locations – interior trims	194
6.2	Assembly overview – sill panel moulding	195



6.3	Assembly overview - A-pillar trim	196
6.4	Assembly overview – B-pillar trim	198
6.5	Assembly overview - C-pillar trim	199
6.6	Assembly overview – wheel housing trim	200
6.7	Assembly overview – foot rest and floor covering	201
6.8	Removing and installing sill panel moulding	202
6.9	Removing and installing A-pillar trim	205
6.10	Removing and installing A-pillar gap cover	209
6.11	Removing and installing B-pillar trim	210
6.12	Removing and installing C-pillar trim	215
6.13	Removing and installing wheel housing trims	216
6.14	Removing and installing foot rest	219
6.15	Removing and installing floor covering	220
6.16	Removing and installing rear shelf	223
7	Luggage compartment trims	225
7.1	Overview of fitting locations – luggage compartment trims	225
7.2	Assembly overview - lower rear lid trim	225
7.3	Removing and installing lower rear lid trim	226
7.4	Removing and installing luggage compartment side trim	228
7.5	Removing and installing lock carrier trim	229
7.6	Removing and installing cross member trim	230
8	Roof trims	232
8.1	Assembly overview – moulded headliner	232
8.2	Removing and installing moulded headliner	232
8.3	Installing roof reinforcement to body	236
72 - Seat frames		239
1	Safety information	239
2	Overview of seat variants	240
2.1	Overview of fitting locations – seat variants	240
3	Front seats	241
3.1	Overview of fitting locations – electrical and electronic components	241
3.2	Assembly overview – front seat	245
3.3	Assembly overview – front backrest	248
3.4	Assembly overview – head restraint	250
3.5	Assembly overview – seat pan	251
3.6	Assembly overview – seat height adjustment	255
3.7	Assembly overview – fire extinguisher	257
3.8	Removing and installing front seat	258
3.9	Connecting and disconnecting airbag adapter	264
3.10	Removing and installing seat height adjustment handle	266
3.11	Removing and installing seat height adjuster	267
3.12	Removing and installing seat rake adjustment unit	268
3.13	Removing and installing lumbar support adjuster	268
3.14	Removing and installing backrest adjuster	269
3.15	Removing and installing front backrest	270
3.16	Removing and installing head restraint	272
3.17	Removing and installing head restraint guide	273
3.18	Dismantling and assembling seat pan	275
3.19	Removing and installing lumbar support adjustment switch E752/E753	280
3.20	Removing and installing lumbar support adjustment motor V491/V492	281
3.21	Removing and installing massage control unit J740	281
3.22	Securing front seat to seat repair stand	282
3.23	Removing and installing lumbar support	283
3.24	Removing and installing seat adjustment operating unit EX33/EX34	287



3.25	Removing and installing bracket for seat trim	288
3.26	Removing and installing seat adjustment control unit	289
3.27	Removing and installing inner seat trim	290
3.28	Removing and installing outer seat trim	290
3.29	Disconnecting and connecting wire routing	292
4	Rear seats	295
4.1	Assembly overview – bench seat/individual seats	295
4.2	Assembly overview – rear seat backrest	296
4.3	Assembly overview – centre armrest	296
4.4	Removing and installing bench seat/individual seats	297
4.5	Removing and installing head restraint	300
4.6	Removing and installing head restraint guide	301
4.7	Removing and installing rear seat backrest	301
4.8	Removing and installing trim for locking mechanism	303
4.9	Removing and installing locking mechanism for rear seat backrest	303
4.10	Removing and installing centre armrest	305
4.11	Removing and installing side padding	307
4.12	Removing and installing backrest cover panel	307
74	Seat - padding, covers	309
1	Safety information	309
2	Front seat covers and padding	310
2.1	Assembly overview – seat pan cover and padding	310
2.2	Assembly overview – backrest cover and padding	311
2.3	Assembly overview – seat heating element	311
2.4	Assembly overview – backrest heating element	312
2.5	Removing and installing cover and padding in area of seat pan	313
2.6	Removing and installing backrest cover and backrest padding	315
2.7	Separating cover and padding in area of seat pan	319
2.8	Separating cover and padding on backrest	321
2.9	Removing and installing seat heating element Z6/Z8	324
2.10	Removing and installing backrest heating element Z7/Z9	324
3	Rear seat covers and padding	326
3.1	Assembly overview – cover and padding	326
3.2	Assembly overview – seat heating element	327
3.3	Removing and installing covers and padding	329
3.4	Removing and installing intermediate padding	329
3.5	Separating cover and padding	330
3.6	Removing and installing seat heating element	336
3.7	Removing and installing backrest heating element	336