



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the cooling system	1
2 Repair instructions	2
2.1 Routing and attachment of lines	2
2.2 Contact corrosion	2
2.3 Bonding surfaces for self-adhesive components	2
2.4 Secured threaded connections	2
50 - Body - front	3
1 Lock carrier	3
1.1 Assembly overview – lock carrier	3
1.2 Removing and installing lock carrier	3
1.3 Moving to and back from service position	6
2 Wings	11
2.1 Assembly overview – wing	11
2.2 Removing and installing wing	11
3 Bulkhead	14
3.1 Assembly overview – bulkhead	14
3.2 Assembly overview – plenum chamber cover	14
3.3 Removing and installing bulkhead	15
3.4 Removing and installing plenum chamber cover	16
55 - Bonnet, rear lid	18
1 Bonnet	18
1.1 Assembly overview – bonnet	18
1.2 Assembly overview – Bowden cable	19
1.3 Removing and installing bonnet	21
1.4 Adjusting bonnet	21
1.5 Removing and installing bonnet lock	26
1.6 Removing and installing bonnet lock release lever	29
1.7 Removing and installing striker pin	30
1.8 Removing and installing hinges	30
1.9 Removing and installing insulation	31
1.10 Removing and installing Bowden cable	33
1.11 Removing and installing bonnet stay	35
2 Rear lid	36
2.1 Assembly overview – rear lid	36
2.2 Removing and installing rear lid	38
2.3 Adjusting rear lid	38
2.4 Removing and installing bonnet lock	41
2.5 Removing and installing operating mechanism	42
2.6 Removing and installing hinges	43
2.7 Removing and installing striker pin	43
2.8 Removing and installing rear lid seal	45
3 Tank flap unit	46
3.1 Assembly overview – tank flap unit	46
3.2 Removing and installing tank flap unit	47
3.3 Removing and installing fuel tank flap	48
3.4 Removing and installing sealing collar	48



57 - Front doors, door components, central locking	50
1 Door	50
1.1 Assembly overview – door	50
1.2 Removing and installing inner door seal	52
1.3 Removing and installing outer door seal	54
1.4 Removing and installing door	57
1.5 Adjusting door	60
1.6 Adjusting striker pin	62
1.7 Removing and installing door arrester	63
2 Door components	65
2.1 Assembly overview – door components	65
2.2 Assembly overview – window regulator	66
2.3 Assembly overview – door handle and door lock	67
2.4 Removing and installing window regulator motor	68
2.5 Removing and installing window regulator	70
2.6 Removing and installing inner door cover	72
2.7 Removing and installing striker pin	74
2.8 Removing and installing door handle	75
2.9 Removing and installing mounting bracket	78
2.10 Removing and installing door lock	81
2.11 Removing and installing window channel	85
2.12 Removing and installing window slot inner seal	87
2.13 Removing and installing outer window slot seal	88
2.14 Removing and installing lock cylinder	89
2.15 Removing and installing cap on door handle	91
3 Central locking	98
3.1 Overview of fitting locations – central locking system	98
3.2 Removing and installing driver door control unit J386 and front passenger door control unit J387	100
3.3 Removing and installing rear left door control unit J388 and rear right door control unit J389	102
3.4 Removing and installing bonnet contact switch F266	103
3.5 Removing and installing tank filler flap locking motor V155	104
3.6 Removing and installing ignition key battery	106
58 - Rear doors, door components	107
1 Door	107
1.1 Assembly overview – door	107
1.2 Removing and installing door	109
1.3 Adjusting door	112
1.4 Adjusting striker pin	115
1.5 Removing and installing door arrester	116
1.6 Removing and installing outer door seal	118
1.7 Removing and installing inner door seal	120
2 Door components	122
2.1 Assembly overview – door components	122
2.2 Assembly overview – window regulator	123
2.3 Assembly overview – door handle and door lock	124
2.4 Removing and installing window regulator motor	125
2.5 Removing and installing window regulator	128
2.6 Removing and installing inner door cover	129
2.7 Removing and installing striker pin	130
2.8 Removing and installing door handle	131
2.9 Removing and installing mounting bracket	133
2.10 Removing and installing door lock	134



2.11	Removing and installing window channel	138
2.12	Removing and installing outer window slot seal	140
2.13	Removing and installing window slot inner seal	141
2.14	Removing and installing cap on door handle	141
60	- Sunroof	146
1	Repair instructions	146
1.1	Minimum drying time for adhesives	146
1.2	Tools and materials required for removal and installation	146
1.3	Preparing new sliding sunroof frame for installation	149
1.4	Preparing body flange for installing	151
1.5	Cleaning off excess adhesive	152
2	Sliding sunroof	153
2.1	Assembly overview – sliding sunroof	153
2.2	Assembly overview – sunroof roller blind	155
2.3	Assembly overview – wind deflector	155
2.4	Assembly overview - adhesive beads on sliding sunroof	156
2.5	Removing and installing sliding sunroof frame	158
2.6	Removing and installing wind deflector	162
2.7	Removing and installing glass panel	163
2.8	Removing and installing front trim for sliding sunroof	164
2.9	Removing and installing sliding sunroof adjustment control unit J245	168
2.10	Removing and installing sliding sunroof seals	168
2.11	Removing and installing sunroof roller blind	171
2.12	Removing and installing side trim	178
2.13	Removing and installing sunroof motor V1	178
2.14	Removing and installing tilt mechanism for sliding sunroof	179
2.15	Manual operation	183
63	- Bumpers	184
1	Bumper, front	184
1.1	Assembly overview – bumper cover	184
1.2	Assembly overview – bumper carrier	187
1.3	Removing and installing bumper cover	187
1.4	Repairing bumper cover	189
1.5	Installing holder for parking aid sender	189
1.6	Installing retainer for parking aid sender	194
2	Bumper, rear	199
2.1	Assembly overview – bumper cover	199
2.2	Assembly overview – bumper carrier	203
2.3	Removing and installing bumper cover	203
2.4	Removing and installing attachments	205
2.5	Repairing bumper cover	208
2.6	Removing and installing bumper carrier	208
2.7	Installing holder for parking aid sender	208
2.8	Installing retainer for parking aid sender	213
64	- Glazing	218
1	Repair instructions	218
1.1	Minimum drying times for bonded windows	218
1.2	Window repair	218
1.3	Installation instructions for bonded windows	219
1.4	Tools and materials required for removal and installation	220
1.5	Preparing old undamaged windows for installing	224
1.6	Preparing new windows for installing	225
1.7	Preparing body flange for installing	225



1.8	Cleaning off excess adhesive	226
2	Windscreen	228
2.1	Assembly overview – windscreen	228
2.2	Removing and installing windscreen	228
3	Rear windscreen	232
3.1	Assembly overview – rear window	232
3.2	Removing and installing rear window	233
4	Side windows	237
4.1	Assembly overview - rear side windows	237
4.2	Removing and installing rear side window	238
5	Door windows	241
5.1	Assembly overview - front door window	241
5.2	Assembly overview - rear door window	241
5.3	Removing and installing front door window	242
5.4	Removing and installing rear door window	244
66	- Exterior equipment	247
1	Radiator grille and front trim	247
1.1	Assembly overview – radiator grille	247
1.2	Removing and installing radiator grille	248
1.3	Removing and installing trim strip	248
2	Spoiler	250
2.1	Assembly overview – spoiler	250
2.2	Removing and installing spoiler	250
3	Mouldings, trims, extensions	254
3.1	Assembly overview - side member trim	254
3.2	Assembly overview – water deflector	254
3.3	Assembly overview - B-pillar trim	255
3.4	Assembly overview – C-pillar trim	256
3.5	Removing and installing side member trim	257
3.6	Removing and installing water deflector	263
3.7	Removing and installing B-pillar trim on door	264
3.8	Removing and installing C-pillar trim on door	267
4	Noise insulation	269
4.1	Assembly overview - noise insulation	269
4.2	Assembly overview – skid plate	270
5	Underbody cladding	272
5.1	Overview of fitting locations - underbody cladding	272
5.2	Assembly overview - bracing on underbody	272
5.3	Removing and installing tunnel cross-piece	273
6	Decorative film / protective film	276
6.1	Renewing protective films	276
7	Exterior mirror	277
7.1	Assembly overview – exterior mirror	277
7.2	Removing and installing exterior mirror	278
7.3	Removing and installing mirror glass	279
7.4	Removing and installing mirror adjustment unit	280
7.5	Removing and installing mirror cover	282
7.6	Removing and installing mirror frame	282
8	Wheel housing liner	284
8.1	Assembly overview – front wheel housing liner	284
8.2	Assembly overview – rear wheel housing liner	284
8.3	Assembly overview - sill panel cover	285
8.4	Removing and installing front wheel housing liner	286



8.5	Removing and installing rear wheel housing liner	287
8.6	Removing and installing side member cover	288
9	Lettering and badges	290
9.1	Dimensions - lettering and badges on rear	290
9.2	Dimensions – lettering and badges on sides	291
9.3	Removing and installing bonded lettering	292
9.4	Removing and installing badges at front	293
9.5	Renewing lettering and badges at rear	294
9.6	Renewing lettering and badges on sides	295
9.7	Removing and installing lettering and badges for radiator grille	297
10	Heat shields	298
10.1	Overview of fitting locations – heat shields	298
10.2	Removing and installing tunnel heat shield	298
10.3	Removing and installing fuel tank heat shield	299
10.4	Removing and installing rear underbody heat shield	300
10.5	Removing and installing rear silencer heat shield	301