



Contents

00 - Technical data	1
1 Technical data	1
1.1 Brakes	1
45 - Anti-lock brake system	2
1 Anti-lock brake system (ABS/EDL) Bosch 5.0	2
1.1 General information on this anti-lock brake system	2
1.2 Notes on repair work on the anti-lock brake system (ABS/EDL) Bosch 5.0	2
2 Electrical/electronic components and fitting locations ABS/EDL Bosch 5.0	4
2.1 Fig. 1 Diagnostic connection	5
3 Hydraulic unit, brake servo/brake master cylinder - Assembly overview (ABS/EDL) Bosch 5.0	6
3.1 Connecting brake lines to the hydraulic unit	7
3.2 Removing and installing control unit and hydraulic unit	7
4 Anti-lock brake system (ABS/EDL) Bosch 5.3	10
4.1 General information on this anti-lock brake system	10
4.2 Notes on repair work on the anti-lock brake system (ABS/EDL) Bosch 5.3	10
5 Electrical/electronic components and fitting locations ABS/EDL Bosch 5.3	12
5.1 Fig. 1 Diagnostic connection	13
6 Hydraulic unit, brake servo/brake master cylinder - Assembly overview (ABS/EDL) Bosch 5.3	14
6.1 Connecting brake lines to the hydraulic unit	15
6.2 Removing and installing control unit and hydraulic unit	15
7 Faults displayed by warning lamps K47, K118 and K135	18
8 Faults displayed by warning lamps K47, K118 and K135	20
9 Removing and installing parts of ABS system on front and rear axle	22
9.1 Removing and installing speed sensor with speed sensor cable on front axle	22
9.2 Removing and installing speed sensor with speed sensor cable on rear axle	24
46 - Brakes - mechanism	26
1 Repairing front brakes	26
1.1 Repairing floating caliper brake, LT 28/35	26
1.2 Removing and installing brake pads	28
1.3 Repairing floating caliper brake, LT 46, Perrot, Bosch (Wabco)	30
1.4 Removing and installing brake pads	32
2 Repairing rear brakes	35
2.1 Repairing floating caliper brake, LT 28/35, ATE	35
2.2 Removing and installing brake pads	36
2.3 Repairing floating caliper brake, LT 35, Bosch	39
2.4 Removing and installing brake pads	40
2.5 Removing and installing brake shoes for the handbrake, LT 28/35	42
2.6 Repairing floating caliper brake, LT 46, Perrot, Bosch (Wabco)	45
2.7 Removing and installing brake pads	47
2.8 Removing and installing brake shoes for the handbrake, LT 46	49
3 Assembly overview - handbrake lever	53
3.1 Removing and installing handbrake lever	53
3.2 Removing and installing front handbrake cable	55
3.3 Adjusting handbrake	57
3.4 Adjusting the brake shoes for the handbrake and the rear handbrake cables, LT 28/35	58
3.5 Adjusting the brake shoes for the handbrake and the rear handbrake cables, LT 46	60
3.6 Assembly overview - pedal cluster, brake pedal	61
3.7 Removing and installing brake pedal	63



3.8	Adjusting the brake light switch -F-	63
47	Brakes - hydraulics	64
1	Assembly overview - brake master cylinder/brake servo	64
1.1	Removing and installing brake master cylinder	64
1.2	Removing and installing brake servo	65
2	Repairing vacuum pump	66
2.1	Assembly overview for vehicles with 4-cyl. diesel engine (vacuum pump with V-belt drive)	66
2.2	Removing and installing vacuum pump	67
2.3	Assembly overview for vehicles with 4-cyl. diesel engine (vacuum pump with gear drive)	67
2.4	Removing and installing vacuum pump	68
2.5	Assembly overview for vehicles with 5-cyl. diesel engine	69
2.6	Removing and installing vacuum pump	69
2.7	Checking non-return valve	70
3	Repairing front brake calipers	71
3.1	Repairing brake calipers, LT 28/35	71
3.2	Removing and installing front brake caliper piston	71
3.3	Removing	72
3.4	Installing	72
3.5	Repairing brake caliper, LT 46, Perrot, Bosch (Wabco)	73
3.6	Removing and installing front brake caliper piston	74
4	Repairing rear brake caliper	77
4.1	Repairing brake caliper, LT 28/35, ATE	77
4.2	Removing and installing piston for rear brake caliper	77
4.3	Removing	78
4.4	Installing	78
4.5	Repairing brake caliper, LT 35, Bosch	79
4.6	Removing and installing piston for rear brake caliper	82
4.7	Repairing brake caliper, LT 46, Perrot, Bosch (Wabco)	83
4.8	Removing and installing piston for rear brake caliper	84
5	Checking and adjusting brake pressure regulator	87
5.1	Checking brake pressure regulator	87
5.2	Adjusting the brake pressure regulator	88
5.3	Nominal values of brake pressure regulator setting for vehicles with goods vehicle registration	89
5.4	Nominal values of brake pressure regulator setting for vehicles with car registration	89
6	Bleeding the brake system on vehicles with and without ABS/EDL	91
6.1	Bleeding the brake system with brake filling and bleeding unit VAS 5234 or V.A.G 1869	91
6.2	Bleeding brake system without brake filling and bleeding unit	92
7	Performing self-diagnosis	93
8	Definitions	94
8.1	ABS/EDL	94
8.2	ABD	94
8.3	Speed sensor	94
8.4	Rep. Gr.	94