



Contents

00 - Technical data	1
1 Rear axle identification	1
1.1 Rear axle identification	1
1.2 Code letters, assembly allocation, ratios, capacities	1
2 Transmission overview	3
2.1 Transmission overview	3
3 Calculating overall ratio "i"	5
3.1 Calculating overall ratio "i"	5
4 General repair instructions	5
4.1 General repair instructions	5
39 - Final drive, Differential rear	7
1 Replacing seal for propellor shaft on manual gearbox	7
1.1 Replacing seal for propellor shaft on manual gearbox	7
2 Replacing seal for propellor shaft flange of rear axle	10
2.1 Replacing seal for propellor shaft flange of rear axle	10
3 Removing and installing propshaft	13
3.1 Removing and installing propshaft	13
4 Servicing 2-piece propshaft	15
4.1 Servicing 2-piece propshaft	15
4.2 Renewing intermediate bearing of 2-piece propshaft	18
5 Servicing 3-piece propshaft	20
5.1 Servicing 3-piece propshaft	20
5.2 Renewing intermediate bearing of 3-piece propshaft	25
6 Rear axle	27
6.1 Rear axle	27
6.2 Assembly overview	27
6.3 Removing and installing rear axle	29
7 Check gearbox oil	35
7.1 Check gearbox oil	35
8 Dismantling and assembling rear axle	36
8.1 Dismantling and assembling rear axle	36
8.2 Assembly overview	36
8.3 Assembly sequence	40
9 Dismantling and assembling differential	47
9.1 Dismantling and assembling differential	47
9.2 Dismantling and assembling differential (non-divided version)	47
9.3 Assembly overview	47
9.4 Assembly sequence	50
10 Dismantling and assembling differential	55
10.1 Dismantling and assembling differential	55
10.2 Dismantling and assembling differential (divided version)	55
10.3 Assembly overview	55
10.4 Assembly sequence	59
11 Dismantling and assembling bevel pinion	64
11.1 Dismantling and assembling bevel pinion	64
12 Adjusting bevel pinion and crown wheel	65
12.1 Adjusting bevel pinion and crown wheel	65
12.2 Adjustment and marking of drive sets	66
12.3 Adjustment overview	67
12.4 Position of adjustment shims	69



13	Adjusting bevel pinion	70
13.1	Adjusting bevel pinion	70
14	Adjusting crown wheel	73
14.1	Adjusting crown wheel	73
15	Removing and installing differential lock	78
15.1	Removing and installing differential lock	78
15.2	Assembly overview	78
15.3	Assembly sequence	80
15.4	Bleed hydraulic system of differential lock	81
15.5	Adjust shift cylinder	82
16	Dismantling and assembling differential lock shift cylinder	83
16.1	Dismantling and assembling differential lock shift cylinder	83
16.2	Assembly overview	83
16.3	Assembly sequence	85
17	Removing and installing differential lock ratio unit	87
17.1	Removing and installing differential lock ratio unit	87
18	Removing and installing valve 1 for differential lock (N125)	89
18.1	Removing and installing valve 1 for differential lock (N125)	89