



## Contents

<b>01 - Self-diagnosis</b>	<b>1</b>
<b>1 Vehicle diagnosis, testing and information systems</b>	<b>1</b>
1.1 Connecting vehicle diagnosis, testing and information system VAS 5051B	2
<b>2 Immobiliser self-diagnosis</b>	<b>4</b>
2.1 Performing immobiliser self-diagnosis	5
2.2 Fault table	9
2.3 Reading data block	10
2.4 Coding immobiliser control unit J362	12
<b>3 Guided functions for immobiliser</b>	<b>13</b>
3.1 Observe additional information and prerequisites for „online request with GeKo-VW“	13
3.2 Online system test	14
3.3 Adaptation of ignition keys	14
3.4 Adaptation (matching) after changing engine control unit	15
3.5 Adapting immobiliser	15
<b>4 Dash panel insert adaptation</b>	<b>16</b>
4.1 Adapting the dash panel insert	17
4.2 Vehicle speed display adaptation	21
4.3 Adapting distance travelled display	24
4.4 Adaptation of distance travelled display unit	26
4.5 Engine speed signal adaptation	27
4.6 Adaptation of ambient temperature display unit	28
4.7 Adapting selector lever position display (automatic gearbox)	29
4.8 Adaptation of dash panel insert identification	31
<b>5 Tachograph self-diagnosis</b>	<b>33</b>
5.1 Carrying out tachograph self-diagnosis	33
5.2 Fault table	37
5.3 Reading data block	37
<b>27 - Starter, current supply, CCS</b>	<b>41</b>
<b>1 Battery</b>	<b>41</b>
1.1 Fundamentals for batteries	41
1.2 Types of battery	41
1.3 Warning notices and safety regulations	42
1.4 Battery terminal connection	44
<b>2 Checking battery</b>	<b>45</b>
2.1 Procedure when checking a battery	45
2.2 Visual check	45
2.3 Checking battery with magic eye	46
2.4 Checking low maintenance battery	47
2.5 Checking "no load" voltage of battery	50
2.6 Battery tester with printer VAS 5097 A	51
2.7 Evaluating test result	54
<b>3 Charging battery</b>	<b>55</b>
3.1 Battery charger VAS 5095 A	55
3.2 Battery charger VAS 5900	59
3.3 Totally discharged batteries	67
<b>4 Disconnecting and reconnecting battery</b>	<b>69</b>
4.1 Disconnecting battery	69
4.2 Reconnecting battery	69
<b>5 Removing and installing battery</b>	<b>71</b>
5.1 Removing battery	71
5.2 Installing battery	71



5.3	Batteries with central gas venting	72
<b>6</b>	<b>Specified torques: battery</b>	<b>74</b>
<b>7</b>	<b>Starter</b>	<b>75</b>
7.1	Removing and installing starter	75
<b>8</b>	<b>Removing and installing alternator</b>	<b>78</b>
8.1	4-cylinder petrol engine	78
8.2	5-cylinder diesel engine	79
8.3	4-cylinder diesel engine	80
8.4	Checking V-belt and poly V-belt	82
8.5	Removing and installing poly V-belt	82
8.6	Securing B+ and D+ wires to alternator	85
8.7	Alternator carbon brushes	86
8.8	Removing and installing poly V-belt pulley on alternator	86
<b>9</b>	<b>Cruise control system (CCS)</b>	<b>87</b>
9.1	Cruise control system for vehicles with direct-injection diesel engine	87
9.2	Assembly overview - cruise control system	87
9.3	Removing and installing cruise control system switch E45	88
<b>90 - Gauges, instruments</b>		<b>90</b>
<b>1</b>	<b>Dash panel insert</b>	<b>90</b>
1.1	Removing and installing dash panel insert	90
1.2	Pin assignment of multi-pin connectors at dash panel insert	94
1.3	Installation position of bulbs for illumination and warning lamps	97
1.4	Dash panel insert warning lamp symbols	99
<b>2</b>	<b>Tachograph instrument cowling with tachograph</b>	<b>101</b>
2.1	Pin assignment of multi-pin connectors at tachograph instrument cowling and tachograph	101
2.2	Installation position of bulbs for illumination and warning lamps	105
2.3	Tachograph instrument cowling warning lamp symbols	107
<b>91 - Communication</b>		<b>108</b>
<b>1</b>	<b>Radio systems</b>	<b>108</b>
1.1	Radio systems with 2 loudspeakers	108
1.2	Radio systems with 4 loudspeakers	109
1.3	Removing and installing radio	109
1.4	Activating anti-theft coding on radio	111
1.5	Removing and installing front loudspeaker	112
1.6	Removing and installing rear loudspeakers	113
<b>2</b>	<b>Aerial system</b>	<b>114</b>
2.1	Removing and installing roof aerial	114
<b>92 - Windscreen wash/wipe system</b>		<b>116</b>
<b>1</b>	<b>Windscreen wiper system</b>	<b>116</b>
1.1	Assembly overview - windscreen wiper system	116
1.2	Setting park position	117
1.3	Adjusting wiper blade park position	117
1.4	Removing and installing wiper rubber	117
<b>2</b>	<b>Headlight washer system</b>	<b>118</b>
2.1	Assembly overview - headlight washer system	118
2.2	Adjusting spray jets	118
<b>3</b>	<b>Window washer system</b>	<b>119</b>
3.1	Assembly overview - windscreen washer system	119
3.2	Removing washer jet	119
3.3	Adjusting spray jet	120
3.4	Removing reservoir	120



<b>4</b>	<b>Hose repair</b> .....	<b>121</b>
4.1	General description .....	121
4.2	Repairing smooth pipe .....	121
4.3	Repairing corrugated pipe .....	121
<b>94</b>	<b>Lights, bulbs, switches - exterior</b> .....	<b>123</b>
<b>1</b>	<b>Headlights and fog lights</b> .....	<b>123</b>
1.1	Assembly overview - headlight unit .....	123
1.2	Removing and installing headlight insert .....	125
1.3	Removing and installing headlight bulbs .....	126
1.4	Removing and installing lens .....	127
1.5	Adjusting headlights .....	127
<b>2</b>	<b>Front turn signals</b> .....	<b>129</b>
2.1	Removing and installing turn signal indicator housing .....	129
2.2	Removing and installing front turn signal bulb .....	130
2.3	Removing and installing side-mounted turn signals .....	131
<b>3</b>	<b>Additional brake light</b> .....	<b>132</b>
3.1	Removing and installing additional brake light .....	132
<b>4</b>	<b>Number plate light</b> .....	<b>133</b>
4.1	Removing and installing number plate light on panel van .....	133
<b>5</b>	<b>Steering column switch</b> .....	<b>134</b>
5.1	Assembly overview - steering column switch .....	134
5.2	Pin assignment on steering column switch .....	138
5.3	Removing and installing steering lock housing .....	138
<b>6</b>	<b>Pneumatic headlight range control</b> .....	<b>140</b>
6.1	Vacuum system (block diagram) .....	140
6.2	Checking adjustment range .....	140
6.3	Checking vacuum values .....	141
<b>7</b>	<b>Removing and installing tail lights</b> .....	<b>142</b>
7.1	Removing and installing van tail light .....	142
7.2	Removing and installing drop-side tail light .....	144
<b>8</b>	<b>Removing and installing side marker lights</b> .....	<b>145</b>
8.1	Removing and installing front side marker light .....	145
8.2	Removing and installing centre side marker light .....	146
8.3	Removing and installing rear side marker light .....	147
<b>9</b>	<b>Ignition/starter switch and lock cylinder</b> .....	<b>148</b>
9.1	Removing and installing ignition/starter switch .....	148
9.2	Pin assignment of multi-pin connector at ignition/starter switch .....	150
9.3	Removing and installing lock cylinder .....	150
<b>96</b>	<b>Lights, bulbs, switches - interior</b> .....	<b>153</b>
<b>1</b>	<b>Immobiliser</b> .....	<b>153</b>
1.1	Removing and installing immobiliser .....	153
1.2	Removing and installing immobiliser reader coil D2 .....	153
1.3	Transponder .....	154
<b>2</b>	<b>Removing and installing switches in dash panel</b> .....	<b>155</b>
2.1	Removing switches from dash panel insert trim .....	155
2.2	Removing front interior light with reading light .....	157
2.3	Removing rear interior light/load compartment .....	158
<b>97</b>	<b>Wiring</b> .....	<b>159</b>
<b>1</b>	<b>Relay plate</b> .....	<b>159</b>
1.1	Removing relay plate with fuse carrier .....	159
1.2	Auxiliary relay carrier under driver seat .....	161



<b>2</b>	<b>Wiring harness and connector repairs</b>	<b>162</b>
2.1	Notes on safety	162
2.2	General notes concerning repairs to vehicle electrical system	162
2.3	Instructions concerning wiring harness and connector repairs	162
2.4	Supplementary notes on repair of CAN bus wiring	163
2.5	Wiring harness repair set V.A.S 1978	163
2.6	Release tool set VAS 1978/35 for primary and secondary locking elements	164
<b>3</b>	<b>Repairing wiring harness sections</b>	<b>166</b>
3.1	Assembly overview - front end wiring harness section	166
3.2	Front end wiring harness section connections	167
3.3	Wiring assignment at separating point for front end wiring harness section	173
3.4	Front wiring harness repair procedure	174
3.5	Assembly overview - rear end wiring harness section	177
3.6	Rear end wiring harness section connections	178
3.7	Wiring assignment at separating point for rear end wiring harness section	180
3.8	Rear wiring harness repair procedure	181
<b>4</b>	<b>Renewal of aerial wiring</b>	<b>185</b>
4.1	General description	185
4.2	Assembly overview - aerial wire	185
4.3	Installing a new aerial wire	185
<b>5</b>	<b>Crimping pliers V.A.S 1978/9</b>	<b>187</b>
5.1	Fitting tool head	187
5.2	Stripping	188
5.3	Crimping	189
<b>6</b>	<b>Optical fibre lines (OFL)</b>	<b>190</b>
<b>7</b>	<b>Airbag and belt tensioner wiring harness</b>	<b>191</b>