



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Removing and installing interior mirror	1
1.2 Repair method using glass-to-metal adhesive	1
2 Compartments, covers and trims	3
2.1 Removing handbrake lever trim	3
2.2 Removing and installing footwell cover on passenger side	4
2.3 Removing and installing centre console	4
2.4 Removing and installing glove compartment cover	5
2.5 Removing and dismantling glove compartment cover lock	5
2.6 Removing and installing dash panel insert trim	6
2.7 Removing and installing sun visor	8
3 Grab handles	9
3.1 Removing and installing roof grab handle	9
69 - Passenger protection	10
1 Seat belts	10
1.1 Safety regulations for belt tensioners	10
1.2 Disposal of belt tensioner units	10
1.3 Removing and installing front seat belts with belt tensioner	10
1.4 Removing and installing front seat belts without belt tensioner	12
1.5 Removing and installing front fitting	12
1.6 Removing and installing front belt buckle	13
1.7 Removing and installing belt inertia reel without belt tensioner	13
1.8 Removing and installing belt inertia reel with belt tensioner	14
1.9 Removing and installing belt height adjustment	15
1.10 Removing and installing lap belt and double buckle	15
1.11 Assembly overview - rear seat belts	16
2 Inspecting seat belts	19
2.1 Points to check	19
3 Airbag	23
3.1 Tools	23
3.2 Overview - installation locations	23
3.3 Safety precautions when working on airbag	24
3.4 Disposal of airbag units	25
3.5 Deactivating the airbag	25
3.6 Renewing airbag units following an accident	25
3.7 Removing and installing airbag control unit J234	26
3.8 Driver airbag unit	27
3.9 Removing and installing coil connector for airbag/horn plate	31
3.10 Front passenger airbag unit	32
3.11 Removing and installing cover for front passenger airbag unit	36
3.12 Removing and installing frame for front passenger airbag unit	38
3.13 Adapting components	38
70 - Trim, insulation	40
1 Dash panel	40
1.1 Removing and installing dash panel	40
2 Door trims	49
2.1 Assembly overview - front door trim	49
2.2 Removing and installing front door trim	49
2.3 Removing and installing window crank	52



3	Pillar and side trims	53
3.1	Tools	53
3.2	Removing and installing upper A-pillar trim	53
3.3	Removing and installing B-pillar trim	55
3.4	Removing and installing D-pillar trim	56
3.5	Removing and installing window trims	56
3.6	Removing and installing side trims	58
4	Roof trims	59
4.1	Assembly overview - moulded headlining	59
4.2	Removing and installing moulded headlining in front seat area (high-roof vehicles)	60
4.3	Removing and installing moulded headlining for passenger compartment (flat-roof vehicles)	61
72 -	Seat frames	63
1	Front seats	63
1.1	Tools	63
1.2	Removing and installing front seat	63
1.3	Assembly overview - seat frame, single seat	64
1.4	Removing and installing seat padding	66
1.5	Removing and installing slide	66
1.6	Removing and installing front backrest	67
1.7	Removing and installing passenger bench seat	69
1.8	Passenger bench seat 2000 >	70
1.9	Removing and installing front seat box	73
2	Rear seats	74
2.1	Removing and installing passenger bench seat	74
74 -	Seat - padding, covers	76
1	Front seat covers and padding	76
1.1	Tools	76
1.2	Removing and installing front seat cover and padding	76
1.3	Removing and installing front backrest cover and padding	78
1.4	Removing and installing passenger bench seat covers and padding	81
2	Rear seat covers and padding	84
2.1	Removing and installing cover and padding for rear backrest and bench seat	84