



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Assembly overview - lock carrier with attachments	1
1.2 Removing and installing lock carrier with attachments	2
2 Wing	4
2.1 Assembly overview - front wing	4
2.2 Removing and installing wing	5
3 Maintenance flap	7
3.1 Removing maintenance flap cover	7
55 - Bonnet, rear lid	8
1 Bonnet	8
1.1 Assembly overview - bonnet with old type hinges	8
1.2 Removing bonnet (with old type hinges)	9
1.3 Installing and adjusting bonnet (with old type hinges)	9
1.4 Retrofitting new type hinges	10
1.5 Assembly overview - bonnet with new type hinges	12
1.6 Removing bonnet (with new type hinges)	13
1.7 Installing and adjusting bonnet (with new type hinges)	14
1.8 Removing and installing air intake grille and radiator grille	15
1.9 Assembly overview - bonnet lock release cable	16
1.10 Removing and installing bonnet lock cable	17
57 - Front doors, door components, central locking	18
1 Front door	18
1.1 Assembly overview - front door	18
1.2 Removing front door	19
1.3 Installing and adjusting front door	20
1.4 Door arrester ▶ 03.98 and 03.98 ▶	21
1.5 Removing and installing door arrester	21
1.6 Retrofitting new type door arrester	22
1.7 Removing and installing window regulator	24
1.8 Removing and installing step insert	24
1.9 Removing and installing door lock	25
1.10 Assembly overview - door handle	25
1.11 Removing and installing door handle	26
1.12 Removing lock cylinder	27
2 Central locking	28
2.1 Assembly overview - central locking	28
2.2 Function	28
2.3 Removing and installing door lock and servomotor of front door	29
2.4 Removing and installing central lock and remote control of sliding door	30
2.5 Removing and installing door lock and servomotor of rear, right-hand hinged door	33
2.6 Removing and installing central locking control unit	34
3 Radio remote control for central locking	36
3.1 Removing and installing pocket sender battery for radio remote control	36
3.2 Adapting pocket sender	37
58 - Rear doors, door components	41
1 Sliding door	41
1.1 Assembly overview - sliding door	41
1.2 Removing sliding door	42



1.3	Adjusting sliding door	43
1.4	Removing central lock and remote control	46
1.5	Removing door handle	48
1.6	Removing lock cylinder	50
1.7	Removing and installing step insert	50
1.8	Assembly overview - guide rail	51
1.9	Removing and installing guide rail	52
2	Rear left-hand hinged door (high roof)	53
2.1	Tools	53
2.2	Assembly overview - rear left-hand hinged door (high roof)	53
2.3	Removing and installing rear wing door	55
2.4	Adjusting rear hinged doors	55
2.5	Removing and installing door lock	57
2.6	Removing lock rod	58
2.7	Removing and installing magnetic door arrester	59
2.8	Removing and installing magnetic door arrester 2000 >	60
3	Rear right-hand hinged door (high roof)	62
3.1	Tools	62
3.2	Assembly overview - rear right-hand hinged door (high roof)	62
3.3	Removing and installing inner door handle	64
3.4	Removing door lock	65
3.5	Removing door handle	66
3.6	Removing lock cylinder	66
4	Side hinged door	67
4.1	Assembly overview - side hinged door	67
4.2	Removing and installing side wing door	68
4.3	Installing and adjusting side hinged door	68
4.4	Removing and installing step insert	70
4.5	Removing and installing inner door handle	71
4.6	Removing and installing door lock	71
4.7	Removing and installing door arrester	72
4.8	Removing door handle	73
4.9	Removing lock cylinder	73
60	Sunroof	74
1	Sunroof with glass panel	74
61	Convertible roof, hardtop, canopy	75
1	Three-way tipper	75
1.1	Safety precautions when working on three-way tipper	75
1.2	Assembly overview - three-way tipper	76
1.3	Assembly overview - electrohydraulic power unit	78
1.4	Function	78
1.5	Hydraulic flow diagram	79
1.6	Rules for cleanliness	80
1.7	Removing and installing high pressure hose	80
1.8	Identification of high pressure hose	80
1.9	Removing and installing electrohydraulic power unit	81
1.10	Removing and installing multi-piston hydraulic cylinder	81
1.11	Shutoff cable of tipping mechanism limit switch F 239	83
1.12	Fault finding	84
63	Bumpers	87
1	Front bumper	87
1.1	Assembly overview - front bumper	87



1.2	Assembly overview - securing elements	88
2	Rear bumper	89
2.1	Assembly overview - rear bumper	89
2.2	Removing and installing rear bumper	90
64	- Glazing	91
1	Flush bonded windows	91
1.1	Tools	91
1.2	Materials	93
1.3	Assembly overview - windscreen	93
1.4	Removing windscreen	94
1.5	Installing windscreen	95
1.6	Assembly overview - rear window	95
1.7	Removing rear window	96
1.8	Removing damaged rear window	97
1.9	Installing rear window	97
1.10	Preparing old undamaged window for glazing	97
1.11	Preparing new window for glazing	97
1.12	Preparing body flange for glazing	98
1.13	Installation instructions	99
1.14	Curing time	100
1.15	Touching up paint damage	100
1.16	Cleaning off excess adhesive sealing material	100
2	Door windows	101
2.1	Removing door windows	101
66	- Exterior equipment	102
1	Exterior mirror	102
1.1	Assembly overview - exterior mirror	102
1.2	Removing and installing mirror glass	103
1.3	Removing and installing mirror housing (electric adjustment)	103
1.4	Removing mirror triangle cover cap	104
1.5	Panorama mirror	105
2	Decorative trim	107
2.1	Tools	107
2.2	Attachment notes for lettering	107
2.3	Fitting side lettering	107
3	Spare wheel carrier	110
3.1	Tools	110
3.2	Spare wheel carrier	110

