



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Identification plate	1
1.2 Vehicle data plate	1
1.3 Vehicle identification number	1
2 Body dimensions	2
2.1 Floor group - front	2
2.2 Floor group - rear	3
2.3 Body - front	5
2.4 Body - centre	8
2.5 Body - rear	12
3 Body panel gaps/shutlines	14
3.1 Body - front	14
3.2 Body - centre	16
3.3 Body - rear	17
4 Alignment jig	19
4.1 Overview	19
50 - Body - front	28
1 Renewing front cross member	28
1.1 Removing	28
1.2 Installing	30
2 Renewing wheel housing cover (floor pan corner) - partial renewal	32
2.1 Removing	32
2.2 Installing	33
3 Renewing reinforcement for wheel housing	35
3.1 Removing	35
3.2 Installing	36
4 Renewing front wheel housing	37
4.1 Removing	37
4.2 Installing	38
5 Renewing front inner longitudinal member - partial renewal	40
5.1 Removing	40
5.2 Installing	41
6 Renewing battery console	43
6.1 Removing	43
6.2 Installing	43
51 - Body - centre	45
1 Renewing high roof	45
1.1 Removing	45
1.2 Installing	46
2 Renewing roof (dropside)	47
2.1 Removing	47
2.2 Installing	48
3 Renewing high roof (front part)	49
3.1 Removing	49
3.2 Installing	50
4 Renewing high roof cross member, front	51
4.1 Removing	51
4.2 Installing	51



5	Renewing high roof reinforcement	52
5.1	Removing	52
5.2	Installing	53
6	Renewing high roof cross member, rear	54
6.1	Removing	54
6.2	Installing	55
7	Renewing dropside backwall (with rear window)	57
7.1	Removing	57
7.2	Installing	58
8	Renewing dropside backwall (without rear window)	60
8.1	Removing	60
8.2	Installing	61
9	Renewing high roof rear part	63
9.1	Removing	63
9.2	Installing	64
10	Renewing intermediate gusset plate (step)	66
10.1	Removing	66
10.2	Installing	67
11	Renewing rear side panel (panel van)	68
11.1	Removing	68
11.2	Installing	69
12	Renewing rear side panel (sliding door side/panel van)	71
12.1	Removing	71
12.2	Installing	72
13	Renewing rear side panel (Kombi)	74
13.1	Removing	74
13.2	Installing	75
14	Renewing rear side panel (sliding door side/Kombi)	77
14.1	Removing	77
14.2	Installing	78
15	Renewing rear side panel lower part	80
15.1	Removing	80
15.2	Installing	81
16	Renewing rear side panel lower part (sliding door side)	83
16.1	Removing	83
16.2	Installing	84
17	Renewing rear side panel - partial renewal, front	86
17.1	Removing	86
17.2	Installing	87
18	Renewing rear side panel - partial renewal, front (sliding door side)	89
18.1	Removing	89
18.2	Installing	90
19	Renewing rear side panel - partial renewal, rear	92
19.1	Removing	92
19.2	Installing	93
20	Renewing front side panel (panel van)	95
20.1	Removing	95
20.2	Installing	96
21	Renewing front side panel - partial renewal (Kombi)	97
21.1	Removing	97
21.2	Installing	98
22	Renewing front side panel lower part	100



22.1	Removing	100
22.2	Installing	101
23	Renewing hinge pillar (A-pillar) - partial renewal	103
23.1	Removing	103
23.2	Installing	104
24	Renewing lock pillar (B-pillar) with reinforcement	106
24.1	Removing	106
24.2	Installing	107
25	Renewing lock pillar (B-pillar) with reinforcement (droptside)	111
25.1	Removing	111
25.2	Installing	112
26	Renewing lock pillar (B-pillar) with reinforcement (sliding door side)	116
26.1	Removing	116
26.2	Installing	117
27	Renewing side member (sliding door frame)	121
27.1	Removing	121
27.2	Installing	122
28	Renewing outer side member - partial renewal	123
28.1	Removing	123
28.2	Installing	124
29	Renewing floor panel - partial renewal	125
29.1	Removing	125
29.2	Installing	127
53 - Body - rear		129
1	Renewing cross panel	129
1.1	Removing	129
1.2	Installing	130
2	Renewing backwall corner part	132
2.1	Removing	132
2.2	Installing	133
3	Renewing luggage compartment floor - partial renewal	138
3.1	Removing	138
3.2	Installing	139
4	Renewing cross panel member	141
4.1	Removing	141
4.2	Installing	142
5	Renewing rear longitudinal member	144
5.1	Removing	144
5.2	Installing	145
6	Renewing rear outer wheel housing liner	148
6.1	Removing	148
6.2	Installing	149
7	Renewing rear inner wheel housing liner	151
7.1	Removing	151
7.2	Installing	152
8	Renewing rear cross member	154
8.1	Removing	154
8.2	Installing	155

