



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, assembly allocation, ratios, capacities	2
2 Transmission overview	5
2.1 Transmission overview	5
3 Calculating overall ratio i	7
3.1 Calculating overall ratio i	7
4 General repair instructions	7
4.1 General repair instructions	7
30 - Clutch	10
1 Servicing clutch mechanism	10
1.1 Servicing clutch mechanism	10
1.2 Assembly overview - pedal cluster	11
1.3 Removing and installing over-centre spring	15
1.4 Removing and installing clutch pedal	17
1.5 Removing and installing clutch pedal switch (F36)	17
1.6 Assembly overview - hydraulics and clutch release mechanism	20
1.7 Bleeding clutch system	24
2 Servicing clutch	26
2.1 Servicing clutch	26
2.2 Resetting adjustment ring of self-adjusting pressure plate on vehicles with 2.8 l/116 kW Common Rail engine	31
34 - Controls, Housing	34
1 Servicing selector	34
1.1 Servicing selector	34
1.2 Servicing selector mechanism	34
1.3 Removing and installing gearshift lever	36
1.4 Adjusting selectormechanism	37
2 Removing and installing gearbox	39
2.1 Removing and installing gearbox	39
3 Checking gearbox oil	45
3.1 Checking gearbox oil	45
4 Dismantling and	47
4.1 Dismantling and	47
4.2 Dismantling and assembling gearbox	47
4.3 Assembly overview	47
4.4 Gearboxoverview	48
4.5 Dismantling and assembling clutch housing, input shaft and selector mechanism	51
4.6 Dismantling and assembling gearbox casing,output shaft, countershaft and selector rods	56
4.7 Dismantling and assembling sequence	60
5 Servicing gearbox housing	72
5.1 Servicing gearbox housing	72
6 Renewing oil seal for	76
6.1 Renewing oil seal for	76
6.2 Renewing oil seal for propshaft flange on manual gearbox	76
7 Servicing clutch housing	79
7.1 Servicing clutch housing	79
8 Dismantling and	84



8.1	Dismantling and	84
8.2	Dismantling and assembling selector	84
8.3	Dismantling and assembling selector mechanism on gearbox	84
9	Dismantling and assembling selector rods	86
9.1	Dismantling and assembling selector rods	86
35 - Gears, Shafts		88
1	Dismantling and	88
1.1	Dismantling and	88
1.2	Dismantling and assembling input shaft and output shaft	88
1.3	Assembly overview	89
1.4	Adjusting input shaft	107
1.5	Adjusting output shaft (manual gearbox 000.1)	108
2	Dismantling and assembling countershaft	110
2.1	Dismantling and assembling countershaft	110
3	Dismantling and	122
3.1	Dismantling and	122
3.2	Dismantling and assembling shaft with	122
3.3	Dismantling and assembling shaft with reverse gearwheel	122