



## Contents

<b>01 - Self-diagnosis . . . . .</b>	<b>1</b>
<b>1    Self-diagnosis . . . . .</b>	<b>1</b>
1.1    Self-diagnosis . . . . .	1
1.2    Function . . . . .	1
1.3    Technical Data for the Self-diagnosis . . . . .	2
1.4    Connecting the V.A.G 1551 fault output device and selecting the control unit for engine electronics . . . . .	2
1.5    Retrieving and deleting the fault memory . . . . .	4
1.6    Fault Table . . . . .	6
<b>2    Diagnosis of actuators . . . . .</b>	<b>17</b>
2.1    Diagnosis of actuators . . . . .	17
2.2    Diagnosis of actuators . . . . .	17
<b>3    Measurement value blocks . . . . .</b>	<b>21</b>
3.1    Measurement value blocks . . . . .	21
3.2    Reading measurement value blocks . . . . .	21
3.3    Evaluating measurement value blocks . . . . .	22
<b>4    Connecting test box V.A.G 1598 . . . . .</b>	<b>29</b>
4.1    Connecting test box V.A.G 1598 . . . . .	29
4.2    Connecting and disconnecting test box V.A.G 1598 . . . . .	29
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>32</b>
<b>1    Motronic Injection and Ignition System . . . . .</b>	<b>32</b>
1.1    Motronic Injection and Ignition System . . . . .	32
1.2    Adapting engine control unit to electronic immobiliser . . . . .	32
1.3    Overview of Installation Points . . . . .	34
1.4    Servicing the Injection Unit . . . . .	37
1.5    Dismantling and Assembling the Intake Pipe . . . . .	46
1.6    Dismantling and Assembling the Fuel Distribution . . . . .	48
1.7    Removing and Fitting the Air Filter . . . . .	52
1.8    Safety Measures . . . . .	53
1.9    Rules Regarding Cleanliness . . . . .	54
1.10    Technical Data . . . . .	54
1.11    Idling Test . . . . .	55
1.12    Carrying out a Basic Setting . . . . .	56
1.13    Checking the Lambda Sensor and Lambda Control . . . . .	57
1.14    Checking the Lambda Sensor Heating . . . . .	59
1.15    Check lambda sensor heating . . . . .	60
1.16    Checking the Operating States of the Engine . . . . .	61
1.17    Checking the Throttle Valve Control Unit . . . . .	63
1.18    Checking the Coolant Temperature Sender . . . . .	70
1.19    Resistance values for coolant temperature sender . . . . .	72
1.20    Checking the Intake Air Temperature Sender . . . . .	72
1.21    Resistance values for intake air temperature sender . . . . .	74
1.22    Checking the Engine Speed Sender . . . . .	74
1.23    Checking intake manifold pressure sender . . . . .	75
1.24    Checking speed signal . . . . .	77
1.25    Checking the Power Supply for the Control Unit . . . . .	77
1.26    Removing and Fitting Injection Valve . . . . .	79
1.27    Checking the Injection Valves . . . . .	80
1.28    Checking fuel pressure regulator and holding pressure . . . . .	84
1.29    Checking the Intake System for Leaks (Unmetered Air) . . . . .	85
<b>28 - Ignition system . . . . .</b>	<b>87</b>
<b>1    Motronic Injection and Ignition System . . . . .</b>	<b>87</b>



LT 1997 >

## Motronic Injection and Ignition System (4-Valve) - Edition 10.1996

---

1.1	Motronic Injection and Ignition System . . . . .	87
1.2	Servicing the Ignition Unit . . . . .	87
1.3	Safety measures . . . . .	91
1.4	Testing data, spark plugs . . . . .	92
1.5	Checking the Ignition Transformer . . . . .	92