



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
01 - Self-diagnosis	3
1 Self-diagnosis	3
1.1 Features of self-diagnosis	3
1.2 Technical data of self-diagnosis	3
1.3 Connecting vehicle diagnosis, testing and information system VAS 5051	4
2 Fault memory	6
2.1 Reading and erasing fault memory	6
3 Fault table: V.A.G codes	7
4 Fault table: SAE P codes	17
5 Final control diagnosis	30
5.1 Performing final control diagnosis	30
6 Measured value blocks	33
6.1 Safety precautions	33
6.2 Read measured value block	33
6.3 Evaluating read measured value blocks at idling speed, engine codes AHD, ANJ, APA, AVR, BBE, BBF	34
6.4 Evaluating read measured value blocks at full throttle, engine codes AHD, ANJ, APA, AVR, BBE, BBF	43
6.5 Evaluating read measured value blocks at idling speed, engine code AGX	49
6.6 Evaluating read measured value blocks at full throttle, engine code AGX	57
10 - Removing and installing engine	61
1 Removing and installing engine	61
1.1 Removing engine	61
1.2 Securing engine on engine and gearbox support	66
1.3 Installing engine	66
1.4 Additional information and assembly work for vehicles with air conditioner	68
13 - Crankshaft group	70
1 Dismantling and assembling engine	70
1.1 Overview	70
1.2 Removing and installing poly-V belt	76
1.3 Removing and installing tensioner for poly V-belt	77
2 Removing and installing sealing flange and flywheel	78
2.1 Renewing crankshaft oil seal - pulley end	79
3 Removing and installing crankshaft	82
3.1 Crankshaft dimensions	83
3.2 Pulling needle roller bearing out of and driving into crankshaft	83
4 Dismantling and assembling pistons and conrods	85
4.1 Checking piston projection at TDC	87
4.2 Piston and cylinder dimensions	89
15 - Cylinder head, valve gear	90
1 Removing and installing cylinder head	90
1.1 Installing cylinder head	92
1.2 Removing and installing camshaft toothed belt	94
1.3 Checking compression	99



2	Repairing valve gear	102
2.1	Reworking valve seats	104
2.2	Checking valve guides	105
2.3	Renewing valve guides	106
2.4	Renewing valve stem seals	107
2.5	Removing and installing camshaft	109
2.6	Checking hydraulic bucket tappets	110
17	- Lubrication	112
1	Removing and installing parts of lubrication system	112
1.1	Engine oil:	112
1.2	Overview	112
1.3	Checking oil pressure and oil pressure switch	117
19	- Cooling	119
1	Removing and installing parts of cooling system	119
1.1	Parts of cooling system, body side	119
1.2	Parts of cooling system - engine side	121
1.3	Coolant hose schematic diagram	123
1.4	Draining and adding coolant	124
1.5	Removing and installing radiator	126
1.6	Removing and installing viscous fan coupling	128
1.7	Checking thermal switch and coolant circulation pump or continued coolant circulation pump	129
20	- Fuel supply system	131
1	Removing and installing parts of fuel supply system	131
1.1	Removing and installing fuel tank with attached components	131
1.2	Repairing fuel filter	132
1.3	Safety measures when working on fuel supply	133
1.4	Rules for cleanliness	133
1.5	Emptying fuel tank	134
1.6	Removing and installing fuel tank	134
1.7	Removing and installing fuel delivery unit	137
1.8	Repairing accelerator mechanism	138
1.9	Checking adjustment of accelerator position sender	139
1.10	Checking accelerator position sender	140
21	- Turbocharging/supercharging	143
1	Charge air system with turbocharger	143
1.1	Removing and installing turbocharger with attachments	143
1.2	Removing and installing parts of charge air cooling	147
1.3	Removing and installing turbocharger	148
2	Checking charge pressure system	152
2.1	Checking charge pressure control	152
23	- Mixture preparation - injection	157
1	Repairing diesel direct injection system	157
1.1	Safety precautions	157
1.2	Rules for cleanliness	158
1.3	Overview of fitting locations	158
1.4	Removing and installing injection pump toothed belt	160
1.5	Repairing injection pump	160
1.6	Repairing intake manifold flap	162
1.7	Removing, installing and tensioning injection pump toothed belt	164
1.8	Removing and installing injection pump	167



1.9	Dynamically checking and adjusting commencement of injection	170
1.10	Removing and installing injectors	173
1.11	Repairing injectors	174
1.12	Renewing injection timing device cover O-ring	175
2	Checking components and functions	176
2.1	Connecting test box	176
2.2	Checking voltage supply for diesel direct injection system	177
2.3	Checking engine speed sender	178
2.4	Checking intake manifold pressure sender and altitude sender	179
2.5	Checking coolant temperature sender	182
2.6	Checking intake manifold temperature sender	184
2.7	Checking fuel temperature sender	186
2.8	Checking modulating piston movement sender and metering adjuster	188
2.9	Checking needle lift sender	192
2.10	Checking injection timing control range	194
2.11	Checking air mass meter	198
2.12	Checking intake manifold flap changeover	201
3	Checking additional signals	204
3.1	Checking speed signal	204
3.2	Checking signals from and to air conditioning system	205
3.3	Checking speed signal	206
3.4	Checking signal from brake light switch and brake pedal switch	207
3.5	Checking signal from clutch pedal switch	208
4	Renewing, coding and matching engine control unit	210
4.1	Renewing engine control unit	210
4.2	Coding engine control unit	210
4.3	Activating maximum speed governor in engine electronics control unit	211
4.4	Activating cruise control system	213
26	Exhaust system	214
1	Removing and installing parts of exhaust system	214
1.1	Overview	214
2	Exhaust gas recirculation system	219
2.1	Removing and installing parts of exhaust gas recirculation system	219
2.2	Vacuum hose schematic diagram	220
2.3	Checking exhaust gas recirculation valve	221
2.4	Checking exhaust gas recirculation system	222
28	Glow plug system	228
1	Glow plug system	228
1.1	Checking glow plug system	228
1.2	Checking glow plugs	228

