

001 - Basic equipment	1-16
1. Basic equipment	1
2. Battery, ignition/starter switch	2
3. Fresh air blower, 2-way valve for fresh air/air recirculation flap	3
4. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, lights switched on warning buzzer, alternator warning lamp, ambient temperature indicator	4
5. Dash panel insert, turn signal warning lamp, odometer display	5
6. Dash panel insert, brake system warning lamp, handbrake warning lamp, main beam warning lamp, analogue clock	6
7. Brake pad wear sender	7
8. Door contact switch, front and rear interior light	8
9. Cigarette lighter, connection for radio, self-diagnosis voltage supply, signal horn	9
10. Headlight, side light	10
11. Front turn signal, side turn signal bulbs	11
12. Headlight dipper and flasher switch, turn signal switch, hazard warning light switch, light switch, parking light switch	12
13. Horn plate, intermittent wiper switch, rear fog light switch	13
14. Rear turn signal, brake light, tail light, reversing light, brake light switch, rear fog light	14
15. Number plate light, heated rear window left, terminal D+ relief relay	15
16. Windscreen washer/wiper system, heated rear window right	16
002 - 2.3 litre/105 kW Motronic, engine codes AGL	17-24
1. 2.3 litre/105 kW Motronic, engine codes AGL	17-18
2. Alternator, starter	19
3. Motronic control unit, ignition system, lambda probe, self-diagnosis connection	20
4. Motronic control unit, injectors, throttle valve potentiometer, idling switch, throttle valve positioner	21
5. Motronic control unit, intake air temperature sender, coolant temperature sender, engine speed sender, activated charcoal filter system, exhaust flap valve, fuel pump	22
6. Dash panel insert, fuel gauge, coolant temperature gauge, coolant shortage indicator, oil pressure warning, speedometer sender	23
7. Dash panel insert, alternator warning lamp, rev. counter, speedometer sender	24
003 - 2.5 litre/75 kW direct injection turbo diesel, engine codes AHD	25-33
1. 2.5 litre/75 kW direct injection turbo diesel, engine codes AHD	25-26
2. Alternator, starter	27
3. Diesel direct injection system control unit, commencement of injection valve, charge pressure control, exhaust gas recirculation, idling switch, accelerator pedal position sender	28
4. Diesel direct injection system control unit, engine speed sender, air mass meter, intake manifold temperature sender, coolant temperature sender, self-diagnosis connection	29
5. Diesel direct injection system control unit, pedal switch, fuel temperature sender, modulating piston movement sender, metering adjuster	30
6. Diesel direct injection system control unit, needle lift sender, fuel shut-off valve, glow plug relay, glow plugs - engine, continued circulation of coolant regulation breather valve	31
7. Dash panel insert, continued coolant circulation, oil pressure switch, speedometer sender, coolant shortage indicator	32
8. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, alternator warning lamp, glow period warning lamp, rev. counter, speedometer	33
004 - Airbag system	34-37
1. Airbag system	34
2. Airbag control unit, airbag warning lamp, airbag/belt tensioner igniter - driver's side, airbag coil connector	35
3. Airbag control unit, belt tensioner igniter - front passenger's side, horn relay	36-37
005 - Anti-lock brake system (ABS) with electronic differential lock (EDL)	38-42
1. Anti-lock brake system (ABS) with electronic differential lock (EDL)	38-39
2. ABS with EDL control unit, brake light switch	40
3. ABS with EDL control unit, speed sensor, inlet valves, outlet valves, inlet valves, change-over valves	41
4. ABS with EDL control unit, ABS warning lamp, EDL warning lamp	42
006 - Tachograph	43-45
1. Tachograph	43
2. Tachograph	44
3. Tachograph, tachograph sender	45
007 - Trailer	46-50
1. Trailer	46-47
2. Left tail light, brake light switch	48
3. Trailer socket, hazard warning light relay, trailer operation	49
4. Right tail light, reversing light switch	50

008 - Seat heating	51-54
1. Seat heating	51-52
2. Heated driver's seat	53
3. Heated front passenger's side	54
009 - Additional air heater B3LC/D3LC	55-60
1. Additional air heater B3LC/D3LC	55-56
2. Heater control unit, additional air heater fuse	57
3. Heater control unit, overheating switch, temperature sensor, fuel pump, flame monitor	58
4. Heater control unit, glow plug, combustion fresh and hot air blower	59
5. Pre-selection clock	60
010 - Central locking	61-64
1. Central locking	61
2. Driver cab central locking	62
3. Load area/passenger compartment central locking	63
4. Load area/passenger compartment central locking	64
011 - Central locking	65-67
1. Central locking	65
2. Driver cab central locking	66
3. Passenger compartment central locking	67
012 - 2.5 litre/55 kW Naturally aspirated diesel engine with direct injection, engine codes AGX	68-76
1. 2.5 litre/55 kW Naturally aspirated diesel engine with direct injection, engine codes AGX	68-69
2. Alternator, starter	70
3. Diesel direct injection system control unit, commencement of injection valve, exhaust gas recirculation, idling switch, accelerator pedal position sender	71
4. Diesel direct injection system control unit, engine speed sender, air mass meter, intake manifold temperature sender, coolant temperature sender, self-diagnosis connection	72
5. Diesel direct injection system control unit, pedal switch, fuel temperature sender, modulating piston movement sender, metering adjuster	73
6. Diesel direct injection system control unit, needle lift sender, fuel shut-off valve, glow plug relay, glow plugs - engine, continued circulation of coolant regulation breather valve	74
7. Dash panel insert, continued coolant circulation, oil pressure switch, speedometer sender, coolant shortage indicator	75
8. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, alternator warning lamp, glow period warning lamp, rev. counter, speedometer	76
013 - Electrically adjustable and heated exterior mirrors	77-80
1. Electrically adjustable and heated exterior mirrors	77-78
2. Electrically adjustable and heated exterior mirror, left	79
3. Electrically adjustable and heated exterior mirror, right	80
014 - Front window lifter	81-84
1. Front window lifter	81-82
2. Window lifter, left	83
3. Window lifter, right	84
015 - Second battery, trailer socket (12V)	85-87
1. Second battery, trailer socket (12V)	85-86
2. Second battery, battery cut-out relay, 12 V socket	87
016 - Fog lights	88-91
1. Fog lights	88-89
2. Front fog lights, headlights, side lights	90
3. Rear fog lights, fog light switch	91
017 - Radio system	92-95
1. Radio system	92-93
2. Radio, front loudspeakers	94
3. Radio, rear loudspeakers, electronic boosted roof aerial	95
018 - Headlight washer system	96-98
1. Headlight washer system	96-97
2. Headlight washer system	98
019 - Day driving light	99-107
1. Day driving light	99-100
2. Left headlight, left side light	101
3. Right headlight, right side light	102
4. Front turn signals, side turn signals	103
5. Headlight dipper/flasher switch, turn signal switch, hazard warning light switch, lighting switch, parking light switch	104
6. Horn plate, intermittent wiper switch, rear fog light switch	105
7. Turn signal bulb rear, brake light, tail lights, reversing light, brake light switch, rear fog light	106

8. Headlight washer system, front and rear wash/wipe system	107
020 - Tilting/tipping mechanism	108-111
1. Tilting/tipping mechanism	108-109
2. Tilting mechanism button	110
3. Tilting/tipping mechanism, tilting/tipping mechanism fuse	111
021 - Immobilizer	112-114
1. Immobilizer	112-113
2. Immobilizer	114
022 - Tail lights, side marker lamps	115-119
1. Tail lights, side marker lamps	115-116
2. Left side marker lamps, brake light switch	117
3. Rear left side marker lamp, turn signal rear left, brake lights, tail light, rear fog light, number plate light	118
4. Right side marker lamps, rear right turn signal, brake light, tail light, reversing light	119
023 - Differential lock	120-122
1. Differential lock	120-121
2. Differential lock	122
024 - Roof turn signals	123-125
1. Roof turn signals	123-124
2. Roof turn signals	125
025 - Air conditioner	126-131
1. Air conditioner	126-127
2. Fresh air blower, fresh and recirculating air flap two-way valve	128
3. Air conditioner switch	129
4. Air conditioner pressure switch, fan thermo-switch	130
5. Radiator fan, magnetic coupling	131
026 - Additional air heater B1LC/D1LC	132-136
1. Additional air heater B1LC/D1LC	132-133
2. Heater control unit, additional air heater fuse, temperature sensor, flame monitor	134
3. Heater control unit, overheating switch, fuel pump, glow plug, combustion fresh and hot air blower	135
4. Pre-selection clock	136
027 - Day driving light, converted	137-146
1. Day driving light, converted	137-138
2. Left headlight, left side light	139
3. Relay for daytime driving light, day driving light fuses	140
4. Right headlight, right side light	141
5. Front turn signals, side turn signals	142
6. Headlight dipper/flasher switch, turn signal switch, hazard warning light switch, lighting switch, parking light switch	143
7. Horn plate, intermittent wiper switch, rear fog light switch	144
8. Turn signal bulb rear, brake light, tail lights, reversing light, brake light switch, rear fog light	145
9. Headlight washer system, front and rear wash/wipe system	146
028 - Rotating light and siren	147-151
1. Rotating light and siren	147-148
2. Rotating light and horn repeat system switch, rotating light relay	149
3. Rotating light and siren control unit, rotating light	150
4. Rotating light and siren control unit, high and low tone-horn, rotating light warning lamp	151
029 - Air conditioner	152-156
1. Air conditioner	152-153
2. Fresh air blower, fresh and recirculating air flap two-way valve	154
3. Air conditioner switch	155
4. Magnetic coupling, air conditioner pressure switch, air conditioner shut-off thermo-switch	156
030 - Basic equipment	157-173
1. Basic equipment	157
2. Battery, ignition/starter switch	158
3. Fresh air blower, 2-way valve for fresh air/air recirculation flap	159
4. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, lights switched on warning buzzer, alternator warning lamp, ambient temperature indicator	160
5. Dash panel insert, turn signal warning lamp, odometer display	161
6. Dash panel insert, brake system warning lamp, handbrake warning lamp, main beam warning lamp, analogue clock	162
7. Brake pad wear sender	163
8. Door contact switch, front and rear interior light	164
9. Cigarette lighter. connection for radio. self-diagnosis voltage supply. signal horn	165

10. Headlight, side light	166
11. Front turn signal, side turn signal bulbs	167
12. Headlight dipper and flasher switch, turn signal switch, hazard warning light switch, light switch, parking light switch	168
13. Horn plate, intermittent wiper switch, rear fog light switch	169
14. Rear turn signal, brake light, tail light, reversing light, brake light switch, rear fog light	170
15. Number plate light, heated rear window left	171
16. Heated rear window right, terminal D+ relief relay	172
17. Windscreen washer/wiper system	173
031 - Central locking	174-177
1. Central locking	174
2. Driver cab central locking	175
3. Load area/passenger compartment central locking	176
4. Load area/passenger compartment central locking	177
032 - Central locking	178-180
1. Central locking	178
2. Driver cab central locking	179
3. Passenger compartment central locking	180
033 - Roof turn signals	181-183
1. Roof turn signals	181-182
2. Roof turn signals	183
034 - Rotating light and siren	184-188
1. Rotating light and siren	184-185
2. Rotating light and siren switch, rotating light relay	186
3. Rotating light and siren control unit, rotating light	187
4. Rotating light and siren control unit, high and low tone-horn, rotating light warning lamp	188
035 - Power take-off	189-191
1. Power take-off	189-190
2. Power take-off	191
036 - Day driving light	192-201
1. Day driving light	192-193
2. Left headlight, left side light, relay for daytime driving light (dipped beam, left)	194
3. Daytime driving light relay (side and tail lights), day driving light fuses	195
4. Right headlight, right side light	196
5. Front turn signals, side turn signals	197
6. Headlight dipper/flasher switch, turn signal switch, hazard warning light switch, lighting switch, parking light switch	198
7. Horn plate, intermittent wiper switch, rear fog light switch	199
8. Turn signal bulb rear, brake light, tail lights, reversing light, brake light switch, rear fog light	200
9. Headlight washer system, front and rear wash/wipe system	201
037 - Cruise control system (CCS)	202-205
1. Cruise control system (CCS)	202-203
2. Cruise control system switch	204
3. Cruise control system (CCS) control motor	205
038 - 2.8 litre/92 kW direct injection turbo diesel, engine codes AGK	206-211
1. 2.8 litre/92 kW direct injection turbo diesel, engine codes AGK	206-207
2. Alternator, starter	208
3. Relay for glow plugs, glow plugs - engine, coolant temperature sender, fuel shut-off valve	209
4. Dash panel insert, oil pressure warning, speedometer sender, coolant shortage indicator, fuel gauge, coolant temperature gauge	210
5. Dash panel insert, alternator warning lamp, glow period warning lamp, rev. counter, speedometer, reserve fuel warning lamp	211
039 - Basic equipment	212-227
1. Basic equipment	212
2. Battery, ignition/starter switch	213
3. Fresh air blower, 2-way valve for fresh air/air recirculation flap	214
4. Dash panel insert, odometer display	215
5. Dash panel insert, turn signal warning lamp, brake system warning lamp, handbrake warning lamp, main beam warning lamp, analogue clock, lights switched on warning buzzer	216
6. Brake pad wear sender, brake fluid level warning contact	217
7. Door contact switch, front and rear interior light	218
8. Connection for radio, self-diagnosis voltage supply, signal horn, cigarette lighter	219
9. Headlight, side light	220
10. Front turn signal, side turn signal bulbs	221
11. Headlight dipper and flasher switch. turn signal switch. hazard warning light switch. light	222

switch, parking light switch	
12. Intermittent wiper switch, rear fog light switch	223
13. Rear turn signal, brake light, tail light, reversing light, brake light switch, rear fog light, high level brake light	224
14. Number plate light, heated rear window left	225
15. Heated rear window right, terminal D+ relief relay	226
16. Windscreen washer/wiper system	227
040 - 2.3 litre/105 kW Motronic, engine codes AGL	228-235
1. 2.3 litre/105 kW Motronic, engine codes AGL	228-229
2. Alternator, starter	230
3. Motronic control unit, ignition system, lambda probe, self-diagnosis connection	231
4. Motronic control unit, injectors, throttle valve potentiometer, idling switch, throttle valve positioner, immobilizer control unit	232
5. Motronic control unit, intake air temperature sender, coolant temperature sender, engine speed sender, activated charcoal filter system, exhaust flap valve, fuel pump	233
6. Dash panel insert, coolant shortage indicator, oil pressure warning, speedometer sender, alternator warning lamp	234
7. Dash panel insert, rev. counter, speedometer, fuel gauge, coolant temperature gauge, ambient temperature indicator, immobilizer warning lamp	235
041 - 2.5 litre/75 kW direct injection turbo diesel, engine codes AHD	236-246
1. 2.5 litre/75 kW direct injection turbo diesel, engine codes AHD	236-237
2. Alternator, starter	238
3. Diesel direct injection system control unit, , charge pressure control solenoid valve, terminal 30 voltage supply relay, commencement of injection valve, exhaust gas recirculation, idling switch, accelerator pedal position sender	239
4. Diesel direct injection system control unit, engine speed sender, air mass meter, intake manifold temperature sender, self-diagnosis connection, immobilizer control unit	240
5. Diesel direct injection system control unit, metering adjuster, modulating piston movement sender, fuel temperature sender, coolant temperature sender, pedal switsch, brake light switch	241
6. Diesel direct injection system control unit, cruise control system switch (CCS), needle lift sender	242
7. Diesel direct injection system control unit, fuel shut-off valve, glow plug relay, glow plugs - engine, continued circulation of coolant regulation breather valve	243
8. Dash panel insert, continued coolant circulation, oil pressure switch, speedometer sender, coolant shortage indicator, fuel gauge sender	244
9. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, speedometer, ambient temperature indicator	245
10. Dash panel insert, rev. counter, alternator warning lamp, glow period warning lamp	246
042 - 2.5 litre/55 kW Naturally aspirated diesel engine with direct injection, engine codes AGX	247-257
1. 2.5 litre/55 kW Naturally aspirated diesel engine with direct injection, engine codes AGX	247-248
2. Alternator, starter	249
3. Diesel direct injection system control unit, commencement of injection valve, exhaust gas recirculation, idling switch, accelerator pedal position sender	250
4. Diesel direct injection system control unit, engine speed sender, air mass meter, intake manifold temperature sender, self-diagnosis connection, immobilizer control unit	251
5. Diesel direct injection system control unit, metering adjuster, modulating piston movement sender, fuel temperature sender, coolant temperature sender, pedal switsch, brake light switch	252
6. Diesel direct injection system control unit, cruise control system switch (CCS), needle lift sender	253
7. Diesel direct injection system control unit, fuel shut-off valve, glow plug relay, glow plugs - engine, continued circulation of coolant regulation breather valve	254
8. Dash panel insert, continued coolant circulation, oil pressure switch, speedometer sender, coolant shortage indicator, fuel gauge sender	255
9. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, speedometer, ambient temperature indicator	256
10. Dash panel insert, rev. counter, alternator warning lamp, glow period warning lamp	257
043 - 2.8 litre/92 kW direct injection turbo diesel, engine codes AGK	258-263
1. 2.8 litre/92 kW direct injection turbo diesel, engine codes AGK	258-259
2. Alternator, starter, fuel shut-off valve, immobilizer control unit, fuel shut-off valve control unit	260
3. Relay for glow plugs, glow plugs - engine, coolant temperature sender	261
4. Dash panel insert, speedometer sender, coolant shortage indicator, alternator warning lamp, speedometer, oil pressure switch	262
5. Dash panel insert, glow period warning lamp, rev. counter, reserve fuel warning lamp, oil pressure warning, fuel gauge, coolant temperature gauge, ambient temperature indicator	263
044 - Cruise control svstem (CCS)	264-267

1. Cruise control system (CCS)	264-265
2. Cruise control system switch	266
3. Cruise control system (CCS) control motor	267
045 - Airbag system	268-272
1. Airbag system	268-269
2. Airbag control unit, airbag warning lamp, airbag/belt tensioner igniter - driver's side, airbag coil connector	270
3. Airbag control unit, airbag belt tensioner igniter - front passenger's side, horn relay, horn	271-272
046 - Anti-lock brake system (ABS) with electronic differential lock (EDL)	273-277
1. Anti-lock brake system (ABS) with electronic differential lock (EDL)	273-274
2. ABS with EDL control unit, brake light switch	275
3. ABS with EDL control unit, speed sensor, inlet valves, outlet valves, EDL inlet valves, change-over valve	276
4. ABS with EDL control unit, ABS warning lamp, EDL warning lamp	277
047 - Additional air heater B1LC/D1LC	278-281
1. Additional air heater B1LC/D1LC	278
2. Heater control unit, additional air heater fuse, temperature sensor, flame monitor	279
3. Heater control unit, overheating switch, fuel pump, glow plug, combustion fresh and hot air blower	280
4. Pre-selection clock	281
048 - Additional air heater B3LC/D3LC	282-287
1. Additional air heater B3LC/D3LC	282-283
2. Heater control unit, additional air heater fuse	284
3. Heater control unit, overheating switch, temperature sensor, fuel pump, flame monitor	285
4. Heater control unit, glow plug, combustion fresh and hot air blower, Hall sender	286
5. Pre-selection clock	287
049 - Air conditioner	288-293
1. Air conditioner	288-289
2. Fresh air blower, fresh and recirculating air flap two-way valve	290
3. Air conditioner switch	291
4. Air conditioner pressure switch, fan thermo-switch	292
5. Radiator fan, magnetic coupling	293
050 - Air conditioner	294-299
1. Air conditioner	294-295
2. Fresh air blower, fresh and recirculating air flap two-way valve	296
3. Air conditioner switch	297
4. Magnetic coupling, air conditioner pressure switch, air conditioner shut-off thermo-switch, Continued coolant circulation pump	298-299
051 - Exterior mirror, electrically adjustable and heated	300-302
1. Exterior mirror, electrically adjustable and heated	300
2. Exterior mirror, electrically adjustable and heated, left	301
3. Electrically adjustable and heated exterior mirror, right	302
052 - Front window lifter	303-306
1. Front window lifter	303-304
2. Window lifter, left	305
3. Window lifter, right	306
053 - Fog lights	307-310
1. Fog lights	307-308
2. Front fog lights, headlights, side lights	309
3. Fog light switch, rear fog lights	310
054 - Radio system	311-314
1. Radio system	311-312
2. Radio, front loudspeakers	313
3. Radio, rear loudspeakers, electronic boosted roof aerial	314
055 - Headlight washer system	315-316
1. Headlight washer system	315
2. Headlight washer system	316
056 - Day driving light	317-326
1. Day driving light	317-318
2. Left headlight, left side light, relay for daytime driving light (dipped beam, left)	319
3. Daytime driving light relay (side and tail lights), day driving light fuses	320
4. Right headlight, right side light	321
5. Front turn signals, side turn signals	322
6. Headlight dipper/flasher switch, turn signal switch, hazard warning light switch, lighting switch, parking light switch	323
7. Intermittent wiper switch. windscreen washer pump switch. rear fog light switch	324

8. Turn signal bulb rear, brake light, tail lights, reversing light, brake light switch, rear fog light	325
9. Headlight washer system, front and rear wash/wipe system	326
057 - Tilting/tipping mechanism	327-330
1. Tilting/tipping mechanism	327-328
2. Tilting mechanism button	329
3. Tilting/tipping mechanism, tilting/tipping mechanism fuse	330
058 - Immobilizer for petrol engine	331-333
1. Immobilizer for petrol engine	331-332
2. Immobilizer	333
059 - Tail lights, side marker lamps	334-338
1. Tail lights, side marker lamps	334-335
2. Left side marker lamps, brake light switch	336
3. Rear left side marker lamp, turn signal rear left, brake lights, tail light, rear fog light, number plate light, reversing light left	337
4. Right side marker lamps, rear right turn signal, brake light, tail light, reversing light right	338
060 - Differential lock	339-341
1. Differential lock	339-340
2. Differential lock	341
061 - Roof turn signals	342-344
1. Roof turn signals	342-343
2. Roof turn signals	344
062 - Tachograph	345-348
1. Tachograph	345-346
2. Tachograph	347
3. Tachograph, tachograph sender	348
063 - Trailer	349-353
1. Trailer	349-350
2. Left tail light, brake light switch	351
3. Trailer socket, hazard warning light relay, trailer operation	352
4. Right tail light, reversing light switch	353
064 - Seat heating	354-357
1. Seat heating	354-355
2. Heated driver's seat	356
3. Heated front passenger's side	357
065 - Rotating light and siren	358-360
1. Rotating light and siren	358
2. Rotating light and siren system switch, rotating light relay	359
3. Rotating light and siren system control unit, rotating light, treble horn, bass horn	360
066 - Power take-off	361-363
1. Power take-off	361-362
2. Power take-off	363
067 - Central locking	364-367
1. Central locking	364
2. Driver cab central locking	365
3. Load area/passenger compartment central locking	366
4. Load area/passenger compartment central locking	367
068 - Central locking	368-370
1. Central locking	368
2. Driver cab central locking	369
3. Passenger compartment central locking	370
069 - Rotating light	371-372
1. Rotating light	371
2. Rotating light	372
070 - Air conditioner	373-377
1. Air conditioner	373-374
2. Fresh air blower, fresh and recirculating air flap two-way valve	375
3. Air conditioner switch	376
4. Magnetic coupling, air conditioner pressure switch, air conditioner shut-off thermo-switch, Continued coolant circulation pump	377
071 - 2. Heat exchanger for passenger compartment (preparation)	378-381
1. 2. Heat exchanger for passenger compartment (preparation)	378-379
2. Warm air blower switch	380
3. Connection for 2nd heat exchanger	381
072 - Anti-lock brake system (ABS) with electronic differential lock (EDL)	382-386
1. Anti-lock brake system (ABS) with electronic differential lock (EDL)	382

2. ABS with EDL control unit, brake light switch	383
3. ABS with EDL control unit, speed sensor, front ABS valves	384
4. ABS with EDL control unit, EDL valves, ABS return flow pump, self-diagnosis connection	385
5. ABS with EDL control unit, ABS warning lamp, EDL warning lamp, rear ABS valves	386
073 - Immobilizer for diesel engines	387-390
1. Immobilizer for diesel engines	387-388
2. Immobilizer control unit, immobilizer reading coil	389
3. Immobilizer control unit, immobilizer warning lamp	390
074 - Power take- off with adjustable working speed control	391-394
1. Power take- off with adjustable working speed control	391-392
2. Power take-off switch, power take-off valve, working speed control switch	393
3. Diesel direct injection system control unit, power take-off warning switch, power take-off warning lamp, working speed control warning lamp, handbrake warning lamp	394
075 - Second battery, trailer socket (12V)	395-397
1. Second battery, trailer socket (12V)	395-396
2. Second battery, battery cut-out relay, 12 V socket	397
076 - Voltage supply for electrical installations	398-400
1. Voltage supply for electrical installations	398-399
2. Electrical installations switch	400
077 - 2nd heat exchanger for passenger compartment	401-404
1. 2nd heat exchanger for passenger compartment	401-402
2. Warm air blower switch	403
3. Warm air blower, warm air blower relay, two-way valve for coolant cut-off valve	404
078 - Power take- off with not-adjustable working speed control	405-408
1. Power take- off with not-adjustable working speed control	405-406
2. Power take-off switch, power take-off valve	407
3. Diesel direct injection system control unit, power take-off warning switch, power take-off warning lamp, working speed control warning lamp, handbrake warning lamp	408
079 - 2.3 litre/105 kW Motronic, engine codes AGL	409-416
1. 2.3 litre/105 kW Motronic, engine codes AGL	409-410
2. Alternator, starter	411
3. Motronic control unit, ignition system, lambda probe, self-diagnosis connection	412
4. Motronic control unit, injectors, throttle valve potentiometer, idling switch, throttle valve positioner, immobilizer control unit	413
5. Motronic control unit, intake air temperature sender, coolant temperature sender, engine speed sender, activated charcoal filter system, exhaust flap valve, fuel pump	414
6. Dash panel insert, coolant shortage indicator, oil pressure warning, speedometer sender, alternator warning lamp	415
7. Dash panel insert, rev. counter, speedometer, fuel gauge, coolant temperature gauge, ambient temperature indicator, immobilizer warning lamp	416
080 - 2.5 litre/75 kW direct injection turbo diesel, engine codes AHD	417-427
1. 2.5 litre/75 kW direct injection turbo diesel, engine codes AHD	417-418
2. Alternator, starter	419
3. Diesel direct injection system control unit, charge pressure control solenoid valve, terminal 30 voltage supply relay, commencement of injection valve, exhaust gas recirculation, idling switch, accelerator pedal position sender	420
4. Diesel direct injection system control unit, engine speed sender, needle lift sender, intake manifold temperature sender, immobilizer control unit, self-diagnosis connection	421
5. Diesel direct injection system control unit, metering adjuster, modulating piston movement sender, fuel temperature sender, coolant temperature sender, pedal switch, brake light switch	422
6. Diesel direct injection system control unit, cruise control system switch (CCS), air mass meter	423
7. Diesel direct injection system control unit, fuel shut-off valve, glow plug relay, glow plugs - engine, continued circulation of coolant regulation breather valve	424
8. Dash panel insert, continued coolant circulation, oil pressure switch, speedometer sender, coolant shortage indicator, fuel gauge sender	425
9. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, speedometer, ambient temperature indicator	426
10. Dash panel insert, rev. counter, alternator warning lamp, glow period warning lamp	427
081 - 2.5 litre/55 kW Naturally aspirated diesel engine with direct injection, engine codes AGX	428-438
1. 2.5 litre/55 kW Naturally aspirated diesel engine with direct injection, engine codes AGX	428-429
2. Alternator, starter	430
3. Diesel direct injection system control unit, terminal 30 voltage supply relay, commencement of injection valve, exhaust gas recirculation, idling switch, accelerator pedal position sender	431
4. Diesel direct injection system control unit, engine speed sender, needle lift sender, intake manifold temperature sender, immobilizer control unit, self-diagnosis connection	432
5. Diesel direct injection system control unit, metering adjuster, modulating piston movement sender.	433

fuel temperature sender, coolant temperature sender, pedal switch, brake light switch	
6. Diesel direct injection system control unit, cruise control system switch (CCS), air mass meter	434
7. Diesel direct injection system control unit, fuel shut-off valve, glow plug relay, glow plugs - engine, continued circulation of coolant regulation breather valve	435
8. Dash panel insert, continued coolant circulation, oil pressure switch, speedometer sender, coolant shortage indicator, fuel gauge sender	436
9. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, speedometer, ambient temperature indicator	437
10. Dash panel insert, rev. counter, alternator warning lamp, glow period warning lamp	438
082 - 2.5 litre/66 kW direct injection turbo diesel, engine codes APA	439-449
1. 2.5 litre/66 kW direct injection turbo diesel, engine codes APA	439-440
2. Alternator, starter	441
3. Diesel direct injection system control unit, charge pressure control solenoid valve, terminal 30 voltage supply relay, commencement of injection valve, exhaust gas recirculation, idling switch, accelerator pedal position sender	442
4. Diesel direct injection system control unit, engine speed sender, needle lift sender, intake manifold temperature sender, immobilizer control unit, self-diagnosis connection	443
5. Diesel direct injection system control unit, metering adjuster, modulating piston movement sender, fuel temperature sender, coolant temperature sender, pedal switch, brake light switch	444
6. Diesel direct injection system control unit, cruise control system switch (CCS), air mass meter	445
7. Diesel direct injection system control unit, fuel shut-off valve, continued circulation of coolant regulation breather valve, intake manifold flap change-over valve, glow plugs - engine, relay for glow plugs	446
8. Dash panel insert, continued coolant circulation, oil pressure switch, speedometer sender, coolant shortage indicator, fuel gauge sender	447
9. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, speedometer, ambient temperature indicator	448
10. Dash panel insert, rev. counter, alternator warning lamp, glow period warning lamp	449
083 - Radio system	450-453
1. Radio system	450-451
2. Radio, front loudspeakers	452
3. Radio, rear loudspeakers, electronically amplified roof aerial	453
084 - Airbag system	454-458
1. Airbag system	454-455
2. Airbag control unit, airbag warning lamp, airbag/belt tensioner igniter - driver's side, airbag coil connector	456
3. Airbag control unit, airbag belt tensioner igniter - front passenger's side, horn relay, horn	457-458
085 - Fog lights	459-462
1. Fog lights	459-460
2. Front fog lights, headlights, side lights	461
3. Fog light switch, rear fog light, fog light warning lamp	462
086 - 2.5 l/66 kW Direct injection turbo-diesel, engine code APA	463-473
1. 2.5 l/66 kW Direct injection turbo-diesel, engine code APA	463-464
2. Alternator, starter	465
3. Diesel direct injection system control unit, terminal 30 voltage supply relay, intake manifold pressure and temperature sender	466
4. Diesel direct injection system control unit, engine speed sender, needle lift sender, air mass meter, pedal switch, brake light switch	467
5. Diesel direct injection system control unit, immobilizer control unit, self-diagnosis connection, cruise control system switch (CCS), exhaust gas recirculation, charge pressure control	468
6. Diesel direct injection system control unit, accelerator pedal position sender, kick-down and idling switch, coolant temperature sender, modulating piston movement, metering adjuster, commencement of injection valve	469
7. Diesel direct injection system control unit, fuel shut-off valve, continued circulation of coolant regulation breather valve, intake manifold flap change-over valve, glow plugs - engine, relay for glow plugs	470
8. Dash panel insert, continued coolant circulation, oil pressure switch, speedometer sender, coolant shortage indicator, fuel gauge sender	471
9. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, speedometer, ambient temperature indicator	472
10. Dash panel insert, rev. counter, alternator warning lamp, glow period warning lamp	473
087 - Central locking	474-477
1. Central locking	474
2. Driver cab central locking	475
3. Load area/passenger compartment central locking	476
4. Load area/passenger compartment central locking	477

088 - 2.8 l/116 kW TDI (Common Rail), engine code AUH	478-488
1. 2.8 l/116 kW TDI (Common Rail), engine code AUH	478
2. Alternator, starter, battery	479
3. Diesel direct injection system control unit, terminal 30 voltage supply relay, intake manifold pressure and temperature senders, fuses	480
4. Diesel direct injection system control unit, engine speed sender, hall sender, air mass meter, clutch pedal switch	481
5. Diesel direct injection system control unit, immobilizer control unit, brake light switch, diagnostic socket, cruise control system switch (CCS), charge pressure control	482
6. Diesel direct injection system control unit, injectors, accelerator pedal position sender, idling switch, fuel pressure regulating valve	483
7. Diesel direct injection system control unit, coolant temperature sender, engine glow plugs, glow plug relay, thermal switch and pump for continued coolant circulation	484
8. Diesel direct injection system control unit, intake manifold flap change-over valve, fuel pressure sender	485
9. Dash panel insert, oil pressure switch, speedometer sender, coolant shortage indicator, fuel gauge sender, continued coolant circulation regulation breather valve	486
10. Dash panel insert, fuel gauge, coolant temperature gauge, oil pressure warning, speedometer, ambient temperature indicator	487
11. Dash panel insert, rev. counter, warning lamps, handbrake warning switch, analogue clock	488
089 - Power take- off with not-adjustable working speed control	489-492
1. Power take- off with not-adjustable working speed control	489-490
2. Power take-off switch, power take-off valve	491
3. Diesel direct injection system control unit, power take-off warning switch, power take-off warning lamp, working speed control warning lamp, handbrake warning lamp	492
090 - Power take- off with adjustable working speed control	493-496
1. Power take- off with adjustable working speed control	493-494
2. Power take-off switch, power take-off valve, working speed control switch	495
3. Diesel direct injection system control unit, power take-off warning switch, power take-off warning lamp, working speed control warning lamp, handbrake warning lamp	496
091 - Tachograph	497-499
1. Tachograph	497
2. Tachograph, fuses	498
3. Tachograph, tachograph sender, rev. counter	499
092 - Tachograph	500-502
1. Tachograph	500
2. Tachograph, fuses	501
3. Tachograph, tachograph sender, rev. counter	502
093 - Power take- off with adjustable working speed control	503-505
1. Power take- off with adjustable working speed control	503
2. Power take-off switch, power take-off valve, working speed control switch	504
3. Diesel direct injection system control unit, power take-off warning switch, power take-off warning lamp, working speed control warning lamp, handbrake warning lamp	505
094 - Air conditioner	506-511
1. Air conditioner	506-507
2. Fresh air blower, fresh and recirculating air flap two-way valve	508
3. Air conditioner switch	509
4. Magnetic coupling, air conditioner pressure switch, air conditioner shut-off thermo-switch, Continued coolant circulation pump	510-511
095 - Air conditioning system	512-515
1. Air conditioning system	512
2. Fresh air blower, fresh and recirculating air flap two-way valve	513
3. Air conditioner switch	514
4. Magnetic coupling, air conditioner pressure switch, air conditioner cut-out thermal switch, continued coolant circulation pump	515
096 - Basic equipment	516-531
1. Basic equipment	516
2. Battery, ignition/starter switch	517
3. Fresh air blower, 2-way valve for fresh air/air recirculation flap	518
4. Dash panel insert, odometer display	519
5. Dash panel insert, turn signal warning lamp, brake system warning lamp, handbrake warning lamp, main beam warning lamp, analogue clock, lights switched on warning buzzer	520
6. Brake pad wear sender, brake fluid level warning contact	521
7. Door contact switch, front and rear interior light	522
8. Connection for radio, self-diagnosis voltage supply, signal horn, cigarette lighter	523
9. Headlight. side light	524

10. Front turn signal, side turn signal bulbs	525
11. Headlight dipper and flasher switch, turn signal switch, hazard warning light switch, light switch, parking light switch	526
12. Intermittent wiper switch, rear fog light switch	527
13. Rear turn signal, brake light, tail light, reversing light, brake light switch, rear fog light, high level brake light	528
14. Number plate light, heated rear window left	529
15. Heated rear window right, terminal D+ relief relay	530
16. Wiper motor relay, wiper motor, washer pump	531
097 - Tail lights, side marker lights	532-535
1. Tail lights, side marker lights	532
2. Brake light switch, left side marker lights	533
3. Rear left side marker light, rear left turn signal, brake lights, tail lights, rear fog lights, registration plate light, left reversing light	534
4. Right side marker lights, rear right turn signal, brake lights, tail lights, right reversing light	535
098 - Day driving lights	536-545
1. Day driving lights	536
2. Left headlight, left side light, day driving lights relay (left dipped beam)	537
3. Side marker lights isolation relay, left and right bulbs for side marker lights	538
4. Day driving lights relay (side and tail lights), terminal D+ relief relay, fuses for day driving lights	539
5. Right headlight, right side light, day driving lights relay	540
6. Front turn signals, side mounted turn signals, turn signal warning lamp	541
7. Headlight dip/flasher switch, turn signal switch, hazard warning light switch, light switch, parking light switch	542
8. Intermittent wiper switch, windscreen washer pump switch, rear fog light switch	543
9. Rear turn signals, brake lights, tail lights, reversing light, brake light switch, rear fog light	544
10. Headlight washer system, windscreen wash/wipe system	545
099 - Exterior mirror, electrically adjustable and heated	546-548
1. Exterior mirror, electrically adjustable and heated	546
2. Left exterior mirror, electrically adjustable and heated	547
3. Right exterior mirror, electrically adjustable and heated	548
100 - Radio system package	549-550
1. Radio system package	549
2. Two-way radio, two-way radio loudspeaker, aerial, two-way radio fuse	550
101 - Central locking	551-554
1. Central locking	551
2. Driver cab central locking	552
3. Load area/passenger compartment central locking	553
4. Central locking remote control, control unit, remote control fuse	554
102 - Central locking for plank bed vehicles	555-558
1. Central locking for plank bed vehicles	555
2. Driver cab central locking	556
3. Passenger compartment central locking	557
4. Central locking remote control, control unit, remote control fuse	558
103 - Central locking	559-563
1. Central locking	559
2. Driver cab central locking	560
3. Load area/passenger compartment central locking	561
4. Load area/passenger compartment central locking	562
5. Central locking remote control, control unit, remote control fuse	563
104 - Second battery	564-565
1. Second battery	564
2. Second battery, battery isolation relay	565
105 - Power take-off with non-adjustable working speed governor	566-568
1. Power take-off with non-adjustable working speed governor	566
2. Power take-off fuse, power take-off switch, power take-off valve	567
3. Diesel direct injection system control unit, power take-off warning switch, power take-off warning lamp, working speed governor warning lamp, handbrake warning lamp	568
106 - Central locking	569-572
1. Central locking	569
2. Driver cab central locking	570
3. Load area/passenger compartment central locking	571
4. Central locking remote control, control unit, central locking remote control fuse	572
107 - Central locking for plank bed vehicles	573-576

1. Central locking for plank bed vehicles	573
2. Driver cab central locking	574
3. Passenger compartment central locking	575
4. Central locking remote control, control unit, central locking remote control fuse	576
108 - Central locking	577-581
1. Central locking	577
2. Driver cab central locking	578
3. Central locking switch and actuator, sliding door, side door, central locking switch and actuator (rear door)	579
4. Voltage supply, rear left central locking switch and actuator	580
5. Central locking remote control, control unit, central locking remote control fuse	581
109 - Digital tachograph	582-585
1. Digital tachograph	582
2. Tachograph, tachograph sender, fuses	583
3. Tachograph, rev. counter, speedometer	584-585
201 - -Fitting locations: Relay plate with fuse holder and auxiliary relay carrier	586-593
1. -Fitting locations: Relay plate with fuse holder and auxiliary relay carrier	586
2. Fuse assignment	587
3. Relay position assignment	588
4. Auxiliary relay carrier and fuse carrier	589
5. Auxiliary relay carrier and fuse carrier	590
6. Supplementary fuse holder	591
7. Supplementary fuse holder	592
8. Multi-pin connector assignment	593