



Contents

1	Engine list	1
2	Service work	6
2.1	Service tables	6
2.2	Oil change service	7
2.3	Inspection service every 12 months	8
2.4	Inspection service every 30,000 km	11
2.5	Additional work based on time or distance	13
2.6	Delivery inspection	15
3	General information	17
3.1	Raising vehicle with lifting platform and trolley jack	17
3.2	Service sticker	18
3.3	Connecting vehicle diagnostic tester	19
3.4	Vehicle identification number	21
3.5	Vehicle data sticker	21
3.6	Countries where diesel has a high sulphur content	21
3.7	Engine code and engine number	22
3.8	RME fuel (biodiesel)	22
3.9	Type plate	23
4	Descriptions of work:	24
4.1	Removing and installing engine compartment cover (noise insulation)	25
4.2	Battery: checking battery terminal clamps for secure seating	26
4.3	Battery: Check	28
4.4	Wheel bolts: tightening to specified torque	28
4.5	Clock: setting to correct time	29
4.6	Radio: Activating anti-theft coding	30
4.7	Transportation devices: removing blocking pieces from springs on front axle	31
4.8	Engine oil level: Check, replenish if necessary	32
4.9	Driver and front passenger airbags: Visual check of airbag units	33
4.10	Window wiper and washer system and headlight washer system: Checking function	34
4.11	Wiper blades: Checking for damage; checking park position, adjusting if necessary; if wiper blades "judder": Checking setting angle, adjusting if necessary	38
4.12	Carry out vehicle system test	40
4.13	Automated manual gearbox (DSG): Carrying out basic setting	43
4.14	Service interval display: Resetting	43
4.15	Door arrester: grease.	55
4.16	Sunroof: checking function, cleaning and greasing guide rails	55
4.17	Folding fabric sunroof: Cleaning and greasing guide rails	56
4.18	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	56
4.19	Cooling system: checking frost protection and coolant level	57
4.20	Air filter: Cleaning housing and renewing filter element	59
4.21	Spark plugs: Renewing	65
4.22	Power assisted steering: Check fluid level	71
4.23	Fuel filter: Renewing (diesel engine)	72
4.24	Fuel filter: Draining water (diesel engine)	75
4.25	Dust and pollen filter: renew filter element	75
4.26	Toothed belt: Checking for wear (diesel engine ▶2000)	76
4.27	Camshaft drive toothed belt: Checking (4-cylinder petrol engine)	78
4.28	Toothed belt: Renewing (diesel engine with engine code AKU)	79
4.29	Toothed belt and camshaft drive tensioning roller: Renewing (diesel engine with engine codes AMF, ANY and AYZ)	79
4.30	Engine oil: Draining or extracting and replenishing; renewing oil filter	79
4.31	Poly V-belt: checking condition	83
4.32	Boots: inspecting	83



4.33	Manual gearbox/final drive: Checking oil level, filling oil as required	83
4.34	Automated manual gearbox (DSG): Checking oil level, filling hydraulic oil as required	86
4.35	Brake system: inspect for leaks and damage.	89
4.36	Front and rear brake pads/linings: Check thickness	90
4.37	Underbody protection: Carry out visual check for damage	92
4.38	Track rod ends: checking clearance, firm seating and boots	92
4.39	Swivel joints: inspecting	93
4.40	Checking breakdown set	94
4.41	Tyres (including spare wheel): Checking condition and wear pattern	94
4.42	Tyre tread depth (including spare wheel): Checking	95
4.43	Tyre pressure (including spare wheel): Checking, correcting if necessary	95
4.44	Automatic gearbox: Checking ATF level, filling ATF as required	98
4.45	Brake and clutch system: Changing brake fluid	98
4.46	Brake fluid level (dependent upon brake pad/lining wear): check.	100
4.47	Headlight adjustment: Checking, adjusting if necessary	100
4.48	Carry out road test	111
5	Exhaust emissions test	113
5.1	Exhaust emissions test for petrol engines without OBD	113
5.2	Exhaust emissions test for petrol engines with OBD	125
5.3	Exhaust emissions test for diesel engines without OBD	127
6	Glossary	143