



Contents

91 - Communication	1
1 Communication systems	1
1.1 Fault finding	1
2 Radio "ALPHA"	2
2.1 General notes	2
2.2 Removing and installing radio	2
2.3 Overview of radio connectors	3
2.4 Electronic anti-theft system	4
3 Radio "BETA"	6
3.1 General notes	6
3.2 Removing and installing radio	6
3.3 Overview of radio connectors	7
3.4 Electronic anti-theft system	9
3.5 Adapting radio components	11
4 Radio "GAMMA"	12
4.1 General notes	12
4.2 Removing and installing radio	12
4.3 Overview of radio connectors	13
4.4 Electronic anti-theft system	15
4.5 Adapting radio components	17
5 Radio/navigation system (RNS) with monochrome display	18
5.1 General notes	18
5.2 Removing and installing radio navigation system	19
5.3 Overview - radio/navigation system connections	20
5.4 Electronic anti-theft system	23
5.5 Adapting navigation system components	25
5.6 Adapting radio components	26
6 CD changer/CD player	27
6.1 General notes	27
6.2 Removing and installing CD player/CD changer	27
7 Loudspeaker systems	29
7.1 Removing and installing front treble loudspeakers	29
7.2 Removing and installing rear treble loudspeakers	29
7.3 Removing and installing front bass loudspeakers	29
7.4 Removing and installing rear bass loudspeakers	30
8 Telephone system	31
8.1 General notes	31
9 Aerial systems	32
9.1 General notes	32
9.2 Overview of roof mounted radio aerial	32
9.3 Overview of roof mounted radio and telephone aerial	34
9.4 Overview of roof mounted aerial for radio, telephone and navigation system	35
9.5 Renewal of aerial wiring	36
10 Notes on operating mobile telephones and two-way radios	37
10.1 General notes	37
10.2 Note on performing repair work	38
10.3 Overview - battery, transmitter/receiver unit, fuse and wiring harness	39
10.4 Transmitting power and aerial fitting locations	40
11 Suppression	41
11.1 Suppression measures	41