



Contents

80 - Heating	1
1 Repairing heating system	1
1.1 Passenger compartment heating	1
1.2 Removing and installing fresh air blower V2	2
1.3 Removing and installing activated charcoal filter or dust and pollen filter	3
1.4 Removing leaf screen	4
1.5 Removing centre vents	5
1.6 Removing and installing vent on front passenger side	6
1.7 Removing and installing vent on driver side	6
1.8 Removing footwell vent	7
1.9 Removing and installing controls for fresh and heated air	8
1.10 Notes on mapped cooling, engine code ARR	10
1.11 Mapped cooling layout, engine code ARR	11
1.12 Mapped cooling components in engine compartment, engine code ARR	13
1.13 Connection diagram for mapped cooling vacuum hoses, engine code ARR	14
1.14 Checking ventilation	14
1.15 Checking auxiliary air heater element Z35	15
1.16 Removing auxiliary heating heater element contact switch F268	19
2 Heater unit	21
2.1 Removing and installing heater unit	21
3 Dismantling and assembling heater unit	24
3.1 Dismantling heater unit	25
4 Dismantling and assembling heated air and fresh air controls	28
5 Installing and adjusting cables	29
5.1 Adjusting cable at temperature flap	30
5.2 Adjusting cable at footwell/defroster flap	30
5.3 Adjusting cable at centre flap	30
87 - Air conditioning system	32
1 Notes on repair work to vehicles with air conditioning and on handling refrigerant	32
2 Air conditioning system with manual controls	33
2.1 Air conditioning and heating - passenger compartment	33
2.2 Removing and installing fresh air blower V2	34
2.3 Removing and installing heating and air conditioning controls	35
2.4 Dismantling and assembling heating and air conditioning controls	37
2.5 Installing and adjusting heating and air conditioning cables	38
2.6 Adjusting cable at temperature flap	39
2.7 Adjusting cable at footwell/defroster flap	40
2.8 Adjusting cable at centre flap	40
2.9 Air conditioning system and heating - engine compartment, vehicles ▶ 02.00	41
2.10 Checking water drain valve	43
2.11 Removing high-pressure sender G65	44
2.12 Removing ambient temperature switch F38 or temperature sender for compressor switch-off G346	44
2.13 Air conditioning system and heating - engine compartment, vehicles ▶ 03.00	44
2.14 Air conditioning system and heating - engine compartment, engine codes ANY and AYZ	47
2.15 Checking water drain valve	49
2.16 Removing high-pressure sender G65	49
2.17 Checking coolant temperature sender G62	50
2.18 Repairing Sanden magnetic clutch for air conditioning system N25	51
3 Climatronic air conditioning with automatic regulation	56



3.1	Procedure for checking and adjusting components	56
3.2	Function of operating and display unit for Climatronic air conditioning system E87	56
3.3	Connectors on Climatronic control unit J255	58
3.4	Climatronic - passenger compartment	60
3.5	Removing and installing footwell vent temperature sender G192	64
3.6	Removing and installing sunlight penetration photosensor G107	65
3.7	Removing and installing fresh air blower control unit J126	65
3.8	Removing and installing fresh air blower V2	65
3.9	Removing and installing operating and display unit for Climatronic air conditioning system E87 and Climatronic control unit J255	66
3.10	Removing and installing air flow flap control motor V71	67
3.11	Removing and installing temperature flap control motor V68	68
3.12	Removing and installing centre flap control motor V70	69
3.13	Removing and installing footwell and defroster flap control motor V85	70
3.14	Climatronic - engine compartment	70
3.15	Removing high-pressure sender G65	72
3.16	Checking water drain valve	73
3.17	Removing ambient temperature sensor G17	73
4	Bracket for air conditioner compressor	74
4.1	Removing and installing air conditioner compressor bracket, engine code AHT	74
4.2	Removing and installing air conditioner compressor bracket, engine code ALL	76
4.3	Removing and installing air conditioner compressor, engine codes AER, AFK, AHW, AKQ, ALD, ANV, APE, AQQ, AUA, AUB, AUC, AUD, BBY	78
4.4	Removing and installing air conditioner compressor bracket, engine code AMF	80
4.5	Removing and installing air conditioner compressor bracket, engine codes ANY, AYZ	82
4.6	Removing and installing air conditioner compressor bracket, engine code ARR	84
4.7	Removing and installing air conditioner compressor bracket, engine code AVY	86
5	Repair work on refrigerant circuit which may be performed only in appropriate workshops by specially trained mechanics	89
5.1	Renewing refrigerant circuit components, vehicles ▶ 02.00	89
5.2	Renewing refrigerant circuit components, vehicles 03.00 ▶	94
5.3	Renewing components of refrigerant system, engine codes ANY and AYZ	98
5.4	Removing receiver with dryer	101
5.5	Evacuating and charging valve, low-pressure side	103
5.6	Evacuating and charging valve, high-pressure side	105
5.7	Quick release coupling	106
5.8	Removing and installing air conditioner compressor, engine codes AER, AFK, AHT, AHW, AKQ, ALD, ALL, AMF, ANV, APE, AQQ, AUA, AUB, AUC, AVY and BBY	109
5.9	Removing and installing air conditioner compressor, engine codes ANY and AYZ	112
5.10	Removing and installing air conditioner compressor, engine codes ARR	114
5.11	Notes on installing air conditioner compressor	117
5.12	Removing and installing heater and air conditioning unit	118
5.13	Dismantling and assembling evaporator housing	122
5.14	Expansion valve, function and removal	123
5.15	Expansion valve - function and removing, engine codes ANY, ARR, AVY and AYZ	125
5.16	Removing and installing condenser, vehicles ▶ 02.00	128
5.17	Removing and installing condenser, vehicles 03.00 ▶	130
5.18	Removing and installing condenser engine codes ANY, ARR, AVY and AYZ	132
6	Capacities	135
6.1	Refrigerant R134a	135
6.2	Refrigerant oil	135