



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation, ratios, capacities	1
2 Overview - power transmission	5
3 Calculating overall gear ratio "i"	7
4 General repair notes	8
4.1 Components	8
30 - Clutch	11
1 Repairing clutch mechanism	11
1.1 Assembly overview	11
1.2 Removing and installing slave cylinder	12
1.3 Adjusting clutch play	14
2 Repairing clutch release mechanism	15
3 Repairing clutch	19
34 - Controls, housing	23
1 Electrical and electronic components and their locations	23
1.1 Electrical and electronic components in vehicle	23
1.2 Electrical/electronic components on gearbox	25
1.3 Electrical and electronic components on hydraulic control unit	26
1.4 Location of electronic manual gearbox control unit J514	27
1.5 Removing and installing control unit	27
1.6 Connect vehicle diagnosis, testing and information system VAS 5051	27
2 Repairing selector mechanism	29
2.1 Allocation of selector mechanism	29
2.2 Checking selector mechanism	29
2.3 Checking function of ignition key removal lock - selector mechanism with Stop position forward	30
2.4 Checking function of ignition key removal lock - selector mechanism with Stop position forward left	31
2.5 Removing and installing selector mechanism	32
2.6 Dismantling and assembling selector mechanism	34
2.7 Removing and installing gear knob and cover	35
2.8 Repairing selector lever and selector housing - selector mechanism with "STOP position forward"	36
2.9 Assembly procedure, dismantling and assembling selector mechanism - selector mechanism with "STOP position forward"	38
2.10 Repairing selector lever and selector housing - selector mechanism with "STOP position forward left"	42
2.11 Assembly procedure, dismantling and assembling selector mechanism - selector mechanism with "STOP position forward left"	43
2.12 Repairing selector lever	48
2.13 Removing and installing selector lever lock solenoid N110 - selector mechanism with "STOP position forward"	49
2.14 Removing and installing locking cable	51
2.15 Adjusting selector mechanism with "STOP position forward"	53
2.16 Adjusting selector mechanism with "STOP position forward left"	54
3 Removing and installing gear actuator	56
3.1 Removing and installing gear actuator - vehicles with battery in engine compartment	56
3.2 Removing and installing gear actuator - vehicles with battery in luggage compartment	61
3.3 Repairing gear actuator	65



3.4	Checking and adjusting gear actuator	73
4	Removing and installing hydraulic control unit	76
4.1	Removing and installing hydraulic control unit - vehicles with battery in engine compartment	76
4.2	Removing and installing hydraulic control unit - vehicles with battery in luggage compartment	78
4.3	Repairing hydraulic control unit	79
5	Removing and installing pipe/hose lines	82
6	Checking and topping up fluid level in reservoir for clutch mechanism and selector mechanism	85
6.1	Check fluid level	85
6.2	Topping up fluid	86
7	Removing and installing gearbox	89
7.1	Removing and installing gearbox - Lupo 3 L	89
7.2	Removing and installing gearbox - Lupo FSI	97
8	Checking gear oil	108
9	Dismantling and assembling gearbox	109
9.1	Dismantling and assembling procedure	112
10	Repairing clutch housing	127
11	Adjusting selector finger and selector sleeve	135
35 - Gears, shafts		138
1	Input shaft	138
1.1	Dismantling and assembling input shaft	138
1.2	Adjusting input shaft	144
2	Output shaft	149
2.1	Dismantling and assembling output shaft	149
2.2	Adjusting output shaft	158
39 - Final drive - differential		161
1	Renewing flange shaft oil seals with gearbox installed	161
1.1	Renewing seals for flange shafts - Lupo 3 L	161
1.2	Renewing seals for flange shafts - Lupo FSI	163
2	Renewing selector shaft oil seal with gearbox installed	166
2.1	Removing	166
2.2	Installing	166
3	Adjustment overview	168
4	Differential	169
4.1	Dismantling and assembling differential	169
4.2	Removing and installing final drive gear	174
4.3	Adjusting differential	175