



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Notes on removing	3
1.2 Securing engine to assembly stand	4
1.3 Notes on installing	5
1.4 Torque settings	6
1.5 Assembly mountings	7
13 - Crankshaft group	8
1 Dismantling and assembling engine	8
1.1 Assembly overview	8
1.2 Removing and installing poly V-belt	13
2 Removing and installing balancer shaft and retaining frame	14
2.1 Removing and installing balancer shaft	15
3 Removing and installing cylinder block, sealing flange and flywheel	20
3.1 Renewing crankshaft oil seal on belt pulley end	21
3.2 Removing and installing sealing flange on pulley end	22
4 Dismantling and assembling pistons and conrods	25
4.1 Disconnecting conrod	27
4.2 Checking piston projection at TDC	28
4.3 Piston and cylinder dimensions	29
15 - Cylinder head, valve gear	30
1 Removing and installing cylinder head	30
1.1 Removing, installing and tensioning toothed belts	33
1.2 Dismantling and assembling intake manifold	38
1.3 Removing and installing cylinder head	40
1.4 Compression test	44
2 Repairing valve gear	47
2.1 Reworking valve seats	49
2.2 Checking valve guides	51
2.3 Renewing valve guides	52
2.4 Renewing valve stem seals	52
2.5 Removing and installing camshaft	54
2.6 Removing and installing camshaft oil seal	58
17 - Lubrication	61
1 Removing and installing parts of lubrication system	61
1.1 Engine oil	61
1.2 Removing and installing sump	68
1.3 Checking oil pressure and oil pressure switch	69
19 - Cooling	71
1 Removing and installing parts of cooling system	71
1.1 Parts of cooling system, body side	71
1.2 Parts of cooling system - engine side	73
1.3 Coolant hose schematic diagram	74



1.4	Draining and filling coolant	75
1.5	Removing and installing radiator	78
1.6	Removing and installing coolant pump	79
1.7	Removing and installing thermostat	80
20 - Fuel supply system	82
1	Removing and installing parts of fuel supply system	82
1.1	Removing and installing fuel tank with attached components	82
1.2	Repairing fuel filter	84
1.3	Safety precautions when working on fuel supply system	85
1.4	Rules for cleanliness	85
1.5	Removing and installing fuel cooler	85
1.6	Removing and installing fuel tank	86
1.7	Repairing throttle mechanism	88
1.8	Checking accelerator position sender G79	90
1.9	Adjusting accelerator position sender G79	94
1.10	Checking tandem pump	95
1.11	Removing and installing tandem pump	97
21 - Turbocharging/supercharging	100
1	Charge air system with turbocharger	100
1.1	Safety precautions	100
1.2	Rules for cleanliness	100
1.3	Removing and installing turbocharger with attachments	100
1.4	Removing and installing parts of charge air cooling	103
1.5	Charge pressure control hose routing diagram	104
2	Checking charge pressure control	105
2.1	Checking charge pressure control solenoid valve N75	107
23 - Mixture preparation - injection	109
1	Repairing diesel direct injection system	109
1.1	Safety precautions	109
1.2	Rules for cleanliness	110
1.3	Overview of fitting locations	110
1.4	Repairing intake manifold flap	111
1.5	Repairing unit injector	113
1.6	Removing and installing O-rings for unit injector	113
1.7	Removing and installing unit injector	115
2	Checking components and functions	121
2.1	Checking voltage supply for diesel direct injection system	121
2.2	Checking engine speed sender G28	121
2.3	Checking intake manifold pressure sender G71 and altitude sender F96	122
2.4	Checking coolant temperature sender G62	124
2.5	Checking brake light switch F and brake pedal switch F47	126
2.6	Checking clutch pedal switch F36	127
2.7	Checking intake manifold temperature sender G72	129
2.8	Checking fuel temperature sender G81	130
2.9	Checking air mass meter G70	132
2.10	Checking intake manifold flap change-over	134
2.11	Checking intake manifold flap motor V157	136
2.12	Checking unit injector valves	137
2.13	Checking camshaft position Hall sender G40	139
3	Checking additional signals	141
3.1	Checking speed signal	141
3.2	Checking signal from/to air conditioning system	142



3.3	Checking speed signal	145
3.4	Checking cruise control system (CCS)	145
3.5	Checking data bus	147
4	Renewing, coding and adapting engine control unit	153
4.1	Renewing engine control unit	153
4.2	Coding engine control unit	153
4.3	Adapting engine control unit to electronic immobilizer	154
26 - Exhaust system	156	
1	Removing and installing parts of exhaust system	156
1.1	Front exhaust pipe with catalytic converters and attachments	156
1.2	Silencer with mountings	157
2	Exhaust gas recirculation system	158
2.1	Removing and installing parts of exhaust gas recirculation system	158
2.2	Schematic diagram for vacuum hoses	160
2.3	Checking exhaust gas recirculation valve	160
2.4	Checking exhaust gas recirculation	161
28 - Glow plug system	165	
1	Checking glow plug system	165
1.1	Checking glow plugs	166