



Contents

00 - Technical data	1
1 Technical data	1
1.1 Braking	1
2 Brake test	3
2.1 General	3
2.2 Test	3
45 - Anti-lock brake system	4
1 Anti-lock brake system (ABS) Mark 20 IE and Mark 30 IE	4
1.1 General information on this ABS	4
2 Notes for repair work on anti-lock brake system	5
3 Connecting VAS 5051 and selecting functions	6
4 Electrical and electronic components and locations (ABS, ABS/EDL)	8
5 Fault display via warning lamps	10
6 Assembly overview - hydraulic unit, brake servo/brake master cylinder	11
6.1 Connecting brake lines from brake master cylinder to hydraulic unit	13
6.2 Removing and installing control unit and hydraulic unit	14
7 Removing and installing parts of ABS system on front and rear axle	18
7.1 Removing and installing parts of anti-lock brake system on front axle, brake caliper VW II	18
7.2 Removing and installing parts of anti-lock brake system on front axle, Lucas brake caliper	21
7.3 Removing and installing parts of anti-lock brake system on rear axle (vehicles with drum brakes)	25
7.4 Removing and installing parts of anti-lock brake system on rear axle (vehicles with disc brakes)	28
46 - Brakes - mechanism	32
1 Repairing front brakes	32
1.1 Repairing front brakes, brake caliper VW II	32
1.2 Removing and installing brake pads, brake caliper VW II	33
1.3 Removing and installing brake caliper VW II	35
1.4 Repairing front brakes, Lucas brake calipers	37
1.5 Removing and installing brake pads, Lucas brake calipers	39
1.6 Removing and installing Lucas brake calipers	41
2 Repairing rear brakes, drum brakes	43
2.1 Removing and installing rear brakes	43
2.2 Resetting brake	45
2.3 Repairing rear brake	45
2.4 Removing and installing brake shoes	46
3 Repairing rear brake, disc brake	48
3.1 Repairing rear brakes C 34	48
3.2 Removing and installing brake pads/linings	49
3.3 Removing and installing brake caliper	52
4 Assembly overview - handbrake lever	54
4.1 Removing and installing handbrake cable (drum brakes)	55
4.2 Adjusting handbrake (drum brakes)	56
4.3 Removing and installing handbrake cable (disc brakes)	57
4.4 Adjusting handbrake (disc brakes)	59
5 Assembly overview - brake pedal	60
5.1 Separating brake pedal from brake servo	60
5.2 Removing and installing brake pedal	62



5.3	Removing and installing brake light switch F and brake pedal switch F47	63
47	Brakes - hydraulics	65
1	Repairing front brake caliper, brake caliper VW II	65
1.1	Removing and installing front brake caliper piston	65
2	Repairing Lucas front brake calipers	68
2.1	Removing and installing front brake caliper piston	69
3	Repairing rear brake caliper	71
3.1	Removing and installing rear brake caliper piston	72
3.2	Pressurised leak test	74
4	Assembly overview - brake pressure regulator	75
4.1	Checking and adjusting brake pressure regulator	75
4.2	Specifications for load dependent brake pressure regulator	76
5	Bleeding brake system	78
5.1	Bleeding brake system using brake filling and bleeding unit VAS 5234 or V.A.G 1869	78
5.2	Bleeding brake system without brake filling and bleeding equipment	80
5.3	Changing brake fluid	80
6	Assembly overview - brake servo/brake master cylinder	81
6.1	Removing and installing exhauster pump for brake servo (diesel vehicles)	82
6.2	Checking non-return valve :	83
7	Removing and installing brake master cylinder	84
7.1	Removing	84
7.2	Installing	84
8	Removing and installing brake servo	86
8.1	Removing	86
8.2	Installing	88
9	Repairing brake lines	89
9.1	Assembly overview - flanging tool	91
9.2	Work instructions	91