



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data, running gear</b> .....	<b>1</b>
1.1 Technical data, running gear .....	1
1.2 Wheels, tyres .....	1
<b>40 - Rear suspension</b> .....	<b>2</b>
<b>1 Connecting VAS 5051 and selecting</b> .....	<b>2</b>
1.1 Connecting VAS 5051 and selecting .....	2
<b>2 Servicing front suspension, Lupo 3L</b> .....	<b>4</b>
2.1 Servicing front suspension, Lupo 3L .....	4
2.2 I - Assembly overview, sub-frame, anti-roll bar and wishbone .....	5
2.3 Checking swivel joint .....	9
2.4 Removing and installing wishbone with swivel joint .....	10
2.5 Replacing wishbone bonded rubber mounting .....	14
2.6 Removing and installing subframe .....	16
2.7 II - Servicing wheel bearing .....	19
2.8 Pressing front wheel hub with wheel bearing out and in .....	23
2.9 III - Servicing front suspension strut .....	27
<b>3 Servicing front suspension, Lupo FSI</b> .....	<b>31</b>
3.1 Servicing front suspension, Lupo FSI .....	31
3.2 I - Assembly overview, sub-frame, anti-roll bar and wishbone .....	32
3.3 Checking swivel joint .....	36
3.4 Removing and installing wishbone with swivel joint .....	37
3.5 Replacing wishbone bonded rubber mounting .....	40
3.6 Removing and installing subframe .....	42
3.7 II - Servicing wheel bearing .....	45
3.8 Pressing front wheel bearing out and in .....	48
3.9 III - Servicing front suspension strut .....	54
<b>4 Servicing front suspension, Lupo GTI</b> .....	<b>58</b>
4.1 Servicing front suspension, Lupo GTI .....	58
4.2 I - Assembly overview, sub-frame, anti-roll bar and wishbone .....	59
4.3 Checking swivel joint .....	65
4.4 Removing and installing swivel joint .....	66
4.5 Swivel joint installation position .....	69
4.6 Removing and installing wishbone .....	69
4.7 Replacing wishbone bonded rubber bush .....	71
4.8 Removing and installing subframe .....	75
4.9 II - Servicing wheel bearing .....	78
4.10 Pressing front wheel bearing out and in .....	82
4.11 III - Servicing front suspension strut .....	88
<b>5 Servicing drive shafts, Lupo 3L</b> .....	<b>92</b>
5.1 Servicing drive shafts, Lupo 3L .....	92
5.2 Removing and installing drive shafts .....	93
5.3 IV - Servicing drive shaft .....	96
5.4 Checking outer constant velocity joint .....	103
<b>6 Servicing drive shafts, Lupo FSI</b> .....	<b>106</b>
6.1 Servicing drive shafts, Lupo FSI .....	106
6.2 Removing and installing drive shafts .....	106
6.3 IV - Servicing drive shaft .....	110
6.4 Checking outer constant velocity joint .....	119
6.5 Checking inner constant velocity joint .....	122
<b>7 Servicing drive shafts, Lupo GTI</b> .....	<b>126</b>
7.1 Servicing drive shafts, Lupo GTI .....	126



7.2	Removing and installing drive shafts . . . . .	126
7.3	IV - Servicing drive shaft . . . . .	130
7.4	Checking outer constant velocity joint . . . . .	139
7.5	Checking inner constant velocity joint . . . . .	142
<b>42</b>	<b>- Rear suspension . . . . .</b>	<b>147</b>
<b>1</b>	<b>Servicing rear axle, Lupo 3L . . . . .</b>	<b>147</b>
1.1	Servicing rear axle, Lupo 3L . . . . .	147
1.2	Removing and installing rear axle . . . . .	147
1.3	Assembly overview, rear axle beam . . . . .	152
1.4	Removing and installing bonded rubber bush . . . . .	158
1.5	Removing and installing spring . . . . .	164
1.6	Removing and installing shock absorbers . . . . .	165
1.7	Assembly overview for shock absorbers on vehicles with front wheel drive . . . . .	170
<b>2</b>	<b>Servicing rear axle, Lupo FSI . . . . .</b>	<b>172</b>
2.1	Servicing rear axle, Lupo FSI . . . . .	172
2.2	Removing and installing rear axle . . . . .	172
2.3	Assembly overview, rear axle beam . . . . .	177
2.4	Removing and installing bonded rubber mounting . . . . .	183
2.5	Removing and installing spring . . . . .	189
2.6	Removing and installing shock absorbers . . . . .	191
2.7	Assembly overview for shock absorbers on vehicles with front wheel drive . . . . .	196
<b>3</b>	<b>Servicing rear axle, Lupo GTI . . . . .</b>	<b>198</b>
3.1	Servicing rear axle, Lupo GTI . . . . .	198
3.2	Removing and installing rear axle . . . . .	198
3.3	Assembly overview, rear axle beam . . . . .	203
3.4	Vehicle "level" sender in vehicles with automatic headlight range control . . . . .	209
3.5	Removing and installing bonded rubber mounting . . . . .	210
3.6	Removing and installing spring . . . . .	216
3.7	Removing and installing shock absorbers . . . . .	218
3.8	Assembly overview for shock absorbers on vehicles with front wheel drive . . . . .	223
<b>4</b>	<b>Servicing wheel bearings, Lupo 3L . . . . .</b>	<b>225</b>
4.1	Servicing wheel bearings, Lupo 3L . . . . .	225
4.2	Servicing wheel bearings . . . . .	225
4.3	Removing and installing wheel bearing/wheel hub unit, vehicles with brake drums . . . . .	228
<b>5</b>	<b>Servicing wheel bearings, Lupo FSI, Lupo GTI . . . . .</b>	<b>231</b>
5.1	Servicing wheel bearings, Lupo FSI, Lupo GTI . . . . .	231
5.2	Servicing wheel bearings . . . . .	231
5.3	Removing and installing wheel bearing/wheel hub unit, vehicles with disc brakes . . . . .	233
<b>44</b>	<b>- Wheels, Tyres, Wheel alignment . . . . .</b>	<b>236</b>
<b>1</b>	<b>Tightening torques for wheel bolts . . . . .</b>	<b>236</b>
1.1	Tightening torques for wheel bolts . . . . .	236
<b>2</b>	<b>Wheels, tyres . . . . .</b>	<b>236</b>
2.1	Wheels, tyres . . . . .	236
2.2	Vehicles with wheel breakdown kit . . . . .	236
2.3	Removing tyre . . . . .	237
<b>3</b>	<b>Vehicle alignment . . . . .</b>	<b>238</b>
3.1	Vehicle alignment . . . . .	238
3.2	Test prerequisites: . . . . .	239
3.3	Preparations for measurements . . . . .	239
3.4	Vehicle alignment specifications, Lupo 3L . . . . .	241
3.5	Vehicle alignment specifications, Lupo FSI . . . . .	241
3.6	Vehicle alignment specifications, Lupo GTI . . . . .	242
3.7	Adjusting front wheel camber . . . . .	242
3.8	Adjusting front wheel toe . . . . .	244



3.9	Adjusting camber on rear axle . . . . .	244
3.10	Checking left and right-hand wheel lock . . . . .	244
<b>48</b>	<b>Steering . . . . .</b>	<b>246</b>
<b>1</b>	<b>Airbag, steering wheel, steering column . . . . .</b>	<b>246</b>
1.1	Airbag, steering wheel, steering column . . . . .	246
1.2	Removing and installing driver's airbag unit, Lupo 3L . . . . .	246
1.3	Removing and installing steering wheel, Lupo 3L . . . . .	249
1.4	Removing and installing coil connector with slip ring, Lupo 3L . . . . .	251
1.5	Removing and installing driver's airbag unit, Lupo FSI, Lupo GTI . . . . .	252
1.6	Removing and installing steering wheel, Lupo FSI, Lupo GTI . . . . .	255
1.7	Removing and installing coil connector with slip ring, Lupo FSI, Lupo GTI . . . . .	257
1.8	Removing and installing steering column . . . . .	259
1.9	Assembly overview: Steering column, column tube . . . . .	264
1.10	Dismantling and assembling column tube and steering column . . . . .	271
<b>2</b>	<b>Servicing mechanical steering box, Lupo 3L . . . . .</b>	<b>279</b>
2.1	Servicing mechanical steering box, Lupo 3L . . . . .	279
2.2	Removing and installing mechanical steering box . . . . .	279
2.3	Assembly overview: mechanical steering box . . . . .	285
2.4	Removing and installing track rod . . . . .	290
2.5	Checking play, security and boots on tie rod ends . . . . .	291
2.6	Checking left-hand track rod length and if necessary adjusting . . . . .	291
2.7	Allocation of track rod ball joints . . . . .	293
2.8	Adjusting steering box . . . . .	294
<b>3</b>	<b>Electro/mechanical power steering, Lupo 3L . . . . .</b>	<b>295</b>
3.1	Electro/mechanical power steering, Lupo 3L . . . . .	295
3.2	Removing and installing steering column . . . . .	295
3.3	Assembly overview: Steering column . . . . .	306
<b>4</b>	<b>Servicing electro/hydraulic power assisted steering, Lupo FSI . . . . .</b>	<b>309</b>
4.1	Servicing electro/hydraulic power assisted steering, Lupo FSI . . . . .	309
4.2	Removing and installing power assisted steering box . . . . .	309
4.3	Assembly overview, power assisted steering box . . . . .	316
4.4	Removing and installing track rod . . . . .	321
4.5	Checking play, security and boots on track rod ends . . . . .	322
4.6	Checking left-hand track rod length and adjusting . . . . .	322
4.7	Allocation of track rod end ball joints . . . . .	324
4.8	Removing and installing motor/pump unit . . . . .	325
4.9	Assembly overview: motor/pump unit . . . . .	328
4.10	Bleeding steering system . . . . .	330
4.11	Checking steering system for leaks . . . . .	331
4.12	Checking power assisted steering oil level . . . . .	332
<b>5</b>	<b>Servicing power assisted steering, Lupo GTI . . . . .</b>	<b>335</b>
5.1	Servicing power assisted steering, Lupo GTI . . . . .	335
5.2	Checking vane pump delivery pressure . . . . .	335
5.3	Removing and installing power assisted steering box . . . . .	337
5.4	Assembly overview, power assisted steering box . . . . .	343
5.5	Assembly overview: Hydraulic pipes, power assisted steering box (right-hand drive vehicles) . . . . .	347
5.6	Removing and installing track rod . . . . .	349
5.7	Checking play, security and boots on track rod ends . . . . .	350
5.8	Checking left-hand track rod end length and adjusting . . . . .	350
5.9	Allocation of track rod ends . . . . .	352
<b>6</b>	<b>Assembly overview: vane pump, reservoir and hydraulic pipes, Lupo GTI . . . . .</b>	<b>353</b>
6.1	Assembly overview: vane pump, reservoir and hydraulic pipes, Lupo GTI . . . . .	353
6.2	Removing and installing power-assisted steering vane pump . . . . .	356
6.3	Removing and installing ribbed belt . . . . .	359



Lupo 1999 >

Running gear, axles, steering Lupo 3 L, Lupo FSI, Lupo GTI - Edition 07.2004

---

7	Definitions .....	359
7.1	Definitions .....	359