



Contents

| | |
|--|-----------|
| 68 - Interior equipment | 1 |
| 1 Interior mirror | 1 |
| 1.1 Removing interior rear-view mirror | 1 |
| 1.2 Installing interior rear-view mirror | 1 |
| 1.3 Bonding retaining plate for interior mirror | 1 |
| 1.4 Automatic anti-dazzle interior mirror | 2 |
| 1.5 Removing and installing interior mirror on vehicles with a rain sensor | 3 |
| 1.6 Bonding on interior mirror base with rain sensor | 4 |
| 2 Compartments, covers and trims | 6 |
| 2.1 Removing and installing centre console ▶ 04.00 | 6 |
| 2.2 Removing and installing centre console 05.00 ▶ | 8 |
| 2.3 Installing and removing centre console, Lupo 3L and Lupo FSI | 13 |
| 2.4 Removing ashtray | 16 |
| 2.5 Removing handbrake lever handle | 17 |
| 2.6 Removing driver side compartment | 18 |
| 2.7 Removing front passenger side compartment | 19 |
| 2.8 Removing glove box | 19 |
| 2.9 Removing glove box lock cylinder | 20 |
| 2.10 Removing sun visor | 21 |
| 3 Grab handles | 22 |
| 3.1 Removing roof grab handle ▶ 04.00 | 22 |
| 3.2 Removing roof grab handle 05.00 ▶ | 22 |
| 4 Sill panel trims | 23 |
| 4.1 Removing and installing sill panel trim | 23 |
| 69 - Passenger protection | 25 |
| 1 Seat belts | 25 |
| 1.1 Safety regulations for belt tensioners | 25 |
| 1.2 Disposal of belt tensioner units | 25 |
| 1.3 Checking belt tensioner | 25 |
| 1.4 Removing and installing front seat belts with belt tensioner | 25 |
| 1.5 Removing and installing belt height adjustment | 27 |
| 1.6 Removing belt anchor rail | 28 |
| 1.7 Removing front belt buckle | 29 |
| 1.8 Removing and installing rear seat belts | 29 |
| 1.9 Removing and installing belt reel | 29 |
| 1.10 Removing and installing double buckle | 30 |
| 1.11 Removing and installing lap belt | 31 |
| 2 Inspecting seat belts | 32 |
| 2.1 Checks | 32 |
| 3 Checking child seat anchors (ISOFIX) after an accident | 36 |
| 3.1 Points to check | 36 |
| 4 Airbag | 37 |
| 4.1 Tools | 37 |
| 4.2 Overview - installation locations | 37 |
| 4.3 Safety precautions when working on the airbag | 38 |
| 4.4 Disposal of airbag units | 39 |
| 4.5 Deactivating the airbag | 39 |
| 4.6 Renewing airbag units following an accident | 39 |
| 4.7 Removing and installing driver airbag unit | 40 |
| 4.8 Removing and installing driver airbag unit (Lupo 3L) | 43 |
| 4.9 Removing and installing steering wheel | 47 |



| | | |
|-----------|---|------------|
| 4.10 | Removing and installing steering wheel (Lupo 3L) | 49 |
| 4.11 | Removing and installing coil connector with slip ring | 50 |
| 4.12 | Removing and installing coil connector with slip ring (Lupo 3L) | 51 |
| 4.13 | Removing and installing front passenger airbag unit | 51 |
| 4.14 | Removing and installing airbag control unit (J 234) | 54 |
| 4.15 | Removing and installing driver and front passenger side airbag | 54 |
| 4.16 | Removing and installing sensor for driver/front passenger side airbag | 57 |
| 4.17 | Adapting components | 59 |
| 70 | - Trim, insulation | 60 |
| 1 | Dash panel | 60 |
| 1.1 | Tools | 60 |
| 1.2 | Removing and installing dash panel ▶ 04.00 | 60 |
| 1.3 | Removing and installing dash panel 05.00 ▶ | 66 |
| 2 | Door trims | 73 |
| 2.1 | Tools | 73 |
| 2.2 | Removing and installing door trims | 73 |
| 2.3 | Removing and installing door insulation films | 76 |
| 3 | Pillar and side trims | 79 |
| 3.1 | Tools | 79 |
| 3.2 | Removing and installing upper A-pillar trim | 79 |
| 3.3 | Removing lower A-pillar trim. | 82 |
| 3.4 | Removing and installing B-pillar trim | 83 |
| 3.5 | Removing and installing C-pillar trim | 84 |
| 3.6 | Removing and installing rear seat trim | 84 |
| 3.7 | Removing and installing side window trim | 86 |
| 3.8 | Removing and installing rear storage compartment | 88 |
| 4 | Luggage compartment trims | 91 |
| 4.1 | Tools | 91 |
| 4.2 | Removing and installing rear lock carrier cover | 91 |
| 4.3 | Removing and installing luggage compartment side trim | 91 |
| 4.4 | Removing and installing rear lid trim | 94 |
| 5 | Roof trims | 95 |
| 5.1 | Tools | 95 |
| 5.2 | Removing and installing moulded headliner (vehicles with sunroof) | 95 |
| 5.3 | Removing and installing moulded headlining | 100 |
| 5.4 | Removing and installing roof insulation/reinforcement (DVD) | 102 |
| 72 | - Seat frames | 105 |
| 1 | Front seats | 105 |
| 1.1 | Tools | 105 |
| 1.2 | Removing and installing front seat | 105 |
| 1.3 | Removing and installing front seat (Lupo 3L) | 108 |
| 1.4 | Front seat - assembly overview | 109 |
| 1.5 | Removing and installing front backrest | 110 |
| 1.6 | Removing and installing front backrest (Lupo 3L) | 112 |
| 1.7 | Removing and installing seat height adjustment element | 115 |
| 1.8 | Removing and installing cable for locking backrest | 117 |
| 1.9 | Removing and installing cable for locking backrest (Lupo 3L) | 119 |
| 1.10 | Removing and installing Bowden cable for locking backrest (Lupo 3L) | 121 |
| 1.11 | Removing head restraint guides | 122 |
| 2 | Rear seats | 124 |
| 2.1 | Removing bench seat | 124 |
| 2.2 | Removing backrest | 124 |
| 2.3 | Removing backrest locking hooks | 125 |



| | |
|--|------------|
| 74 - Seat - padding, covers | 126 |
| 1 Front seat covers and padding | 126 |
| 1.1 Tools | 126 |
| 1.2 Removing and installing front seat cover and padding | 126 |
| 1.3 Removing and installing front backrest cover and padding | 129 |
| 1.4 Rear seat covers and padding | 131 |