

Contents

| | | |
|-----------|--|---------------|
| 01 | Self-diagnosis | Page |
| | Self-diagnosis | 01-1 |
| | – Tools | 01-1 |
| | – Connecting fault reader | 01-3 |
| | Self-diagnosis 10.00 ▶ | 01-1 |
| | Self-diagnosis of airbag system | 01-5 |
| | – Function | 01-5 |
| | – Coding airbag control unit | 01-12 |
| | – Adaption (deactivating and activating) | 01-55 |
| | – Read measured value block | 01-66 |
| | – Test box VAS 5056 | 01-81 |
| | – Final control diagnosis | 01-84 |
| | Self-diagnosis for central locking | 01-87 |
| | – Functional description | 01-87 |
| | – System active indicator | 01-90 |
| | – Initiating convenience system self-diagnosis | 01-91 |
| | – Overview of the selectable functions | 01-93 |
| | – Interrogating control unit version | 01-94 |
| | – Coding central locking control unit using fault reader V.A.G 1551 | 01-97 |
| | – Interrogating fault memory | 01-100 |
| | – Erasing fault memory | 01-103 |
| | – Ending output..... | 01-105 |
| | – Fault table | 01-106 |
| | – Final control diagnosis | 01-125 |
| | – Read measured value block | 01-129 |
| | – Display group overview | 01-131 |
| | – Matching ignition keys to radio wave remote control | 01-152 |
| | – Radio wave remote control function variants | 01-157 |
| | – Removing and installing batteries for a key with radio wave remote control | 01-160 |
| | Self-diagnosis for the interior monitoring system | 01-164 |
| | – Description of the interior monitoring system | 01-164 |
| | – Anti-theft alarm system active indicator | 01-166 |
| | – Initiating self-diagnosis for the interior monitoring system | 01-167 |
| | – Overview of the selectable functions | 01-169 |
| | – Interrogating fault memory | 01-170 |
| | – Erasing fault memory | 01-173 |
| | – Ending output..... | 01-175 |
| | – Fault table | 01-176 |
| | – Final control diagnosis | 01-179 |
| | – Reading measured value block | 01-182 |
| | – Display group overview | 01-184 |