



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	3
2.1 Transmission layout	3
3 Calculating overall ratio "i"	5
3.1 Calculating overall ratio "i"	5
4 General repair instructions	5
4.1 General repair instructions	5
30 - Clutch	8
1 Servicing clutch control	8
1.1 Servicing clutch control	8
1.2 Assembly overview - Pedal cluster	9
1.3 Removing and installing clutch pedal	13
1.4 Removing and installing over-centre spring	16
1.5 Assembly overview - Hydraulic system	18
1.6 Removing and installing master cylinder	21
1.7 Bleeding clutch system	24
2 Servicing clutch release mechanism	25
2.1 Servicing clutch release mechanism	25
3 Servicing clutch	28
3.1 Servicing clutch	28
34 - Controls, Housing	33
1 Servicing gear selector mechanism	33
1.1 Servicing gear selector mechanism	33
1.2 Installation position of gear selector mechanism	33
1.3 Removing and installing selector lever knob and gaiter	36
1.4 Servicing gear stick and gear stick housing	38
1.5 Assembly overview - removing and installing selector cables	42
1.6 Removing and installing gear selector mechanism	45
1.7 Adjusting gear selector mechanism	47
2 Removing and installing gearbox	51
2.1 Removing and installing gearbox	51
3 Checking gear oil	65
3.1 Checking gear oil	65
4 Dismantling and assembling gearbox	66
4.1 Dismantling and assembling gearbox	66
4.2 Overview	66
4.3 Assembly overview	68
4.4 Removing and installing cover for gearbox housing and 5th gear	69
4.5 Removing and installing gearbox housing and selector mechanism	72
4.6 Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks	74
4.7 Assembly sequence	77
5 Servicing gearbox housing and clutch housing	95
5.1 Servicing gearbox housing and clutch housing	95
6 Dismantling and assembling gearbox selector mechanism	105
6.1 Dismantling and assembling gearbox selector mechanism	105
7 Dismantling and assembling selector forks	111



7.1	Dismantling and assembling selector forks	111
35 - Gears, Shafts		118
1	Dismantling and assembling input shaft	118
1.1	Dismantling and assembling input shaft	118
2	Adjusting input shaft	131
2.1	Adjusting input shaft	131
2.2	Table of adjustment shims	133
2.3	Performing measurement check	135
3	Dismantling and assembling output shaft	136
3.1	Dismantling and assembling output shaft	136
3.2	From gearbox build date 04 09 0 the synchronisation for 1st gear has been modified	162
4	Adjusting output shaft	166
4.1	Adjusting output shaft	166
5	Dismantling and assembling reverse shaft	169
5.1	Dismantling and assembling reverse shaft	169
39 - Final drive, Differential rear		174
1	Renewing oil seals for flanged shafts	174
1.1	Renewing oil seals for flanged shafts	174
1.2	Renewing oil seal for left flanged shaft	174
1.3	Renewing oil seal for right flanged shaft	177
2	Dismantling and assembling differential	180
2.1	Dismantling and assembling differential	180
3	Adjustment overview	193
3.1	Adjustment overview	193
4	Adjusting differential	194
4.1	Adjusting differential	194