



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	3
2.1 Transmission layout	3
3 Calculating overall ratio "i"	5
3.1 Calculating overall ratio "i"	5
4 General repair instructions	5
4.1 General repair instructions	5
30 - Clutch	8
1 Servicing clutch control	8
1.1 Servicing clutch control	8
1.2 Assembly overview - Pedal cluster	9
1.3 Removing and installing over-centre spring	13
1.4 Removing and installing clutch pedal	14
1.5 Removing and installing mounting bracket	17
1.6 Assembly overview - Hydraulic system	21
1.7 Removing and installing master cylinder	25
1.8 Removing and installing slave cylinder	29
1.9 Removing and installing pipe/hose assembly	31
1.10 Bleeding clutch system	33
2 Servicing clutch release mechanism	34
2.1 Servicing clutch release mechanism	34
3 Servicing clutch	37
3.1 Servicing clutch	37
34 - Controls, Housing	42
1 Servicing gear selector mechanism	42
1.1 Servicing gear selector mechanism	42
1.2 Installation position of gear selector mechanism	42
1.3 Removing and installing selector lever knob and gaiter	45
1.4 Servicing gear stick and gear stick housing	47
1.5 Assembly overview - removing and installing selector cables	51
1.6 Removing and installing gear selector mechanism	54
1.7 Adjusting gear selector mechanism	57
2 Removing and installing gearbox	61
2.1 Removing and installing gearbox	61
3 Checking gear oil	74
3.1 Checking gear oil	74
4 Dismantling and assembling gearbox	76
4.1 Dismantling and assembling gearbox	76
4.2 Overview	76
4.3 Removing and installing cover for gearbox housing and 5th gear	79
4.4 Dismantling and assembling clutch housing	81
4.5 Removing and installing input shaft, output shaft (pinion shaft), differential, selector mechanism and selector forks	82
4.6 Assembly sequence	86
5 Servicing gearbox housing and clutch housing	96
5.1 Servicing gearbox housing and clutch housing	96
6 Dismantling and assembling gearbox selector mechanism	104



6.1	Dismantling and assembling gearbox selector mechanism	104
7	Dismantling and assembling selector forks	107
7.1	Dismantling and assembling selector forks	107
35 - Gears, Shafts		115
1	Dismantling and assembling input shaft	115
1.1	Dismantling and assembling input shaft	115
2	Dismantling and assembling output shaft	131
2.1	Dismantling and assembling output shaft	131
39 - Final drive, Differential rear		146
1	Renewing oil seals for flanged shafts	146
1.1	Renewing oil seals for flanged shafts	146
1.2	Renewing oil seal for left flanged shaft	146
1.3	Renewing oil seal for right flanged shaft	149
2	Dismantling and assembling differential	151
2.1	Dismantling and assembling differential	151
3	Adjusting differential	162
3.1	Adjusting differential	162