



## Contents

<b>01 - Self-diagnosis, Electrical check</b> .....	<b>1</b>
<b>1 Self-diagnosis function</b> .....	<b>1</b>
1.1 Self-diagnosis function .....	1
1.2 Self-diagnosis - Guide for automatic gearbox .....	4
<b>2 Performing self-diagnosis</b> .....	<b>5</b>
2.1 Performing self-diagnosis .....	5
<b>3 Fault table</b> .....	<b>8</b>
3.1 Fault table .....	8
<b>4 Erasing fault memory</b> .....	<b>12</b>
4.1 Erasing fault memory .....	12
<b>5 Initiating basic setting</b> .....	<b>13</b>
5.1 Initiating basic setting .....	13
<b>6 Read measured value block</b> .....	<b>14</b>
6.1 Read measured value block .....	14
6.2 Test table .....	15
<b>7 Checking solenoid valves whilst driving</b> .....	<b>21</b>
7.1 Checking solenoid valves whilst driving .....	21
<b>8 End output</b> .....	<b>23</b>
8.1 End output .....	23
<b>9 Gearbox: Electrical check</b> .....	<b>24</b>
9.1 Gearbox: Electrical check .....	24
9.2 Electrical check for vehicles up to > 09.99 (with 45-pin control unit connector) .....	26
9.3 Electrical check for vehicles from 10.99 >(with 68-pin control unit connector) .....	32
<b>10 Definitions</b> .....	<b>39</b>
10.1 Definitions .....	39