



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Notes on removing	3
1.2 Securing engine to assembly stand	5
1.3 Notes on installing	5
1.4 Specified torques	7
1.5 Assembly mountings	7
1.6 Additional information and assembly work for vehicles with air conditioner	8
13 - Crankshaft group	9
1 Dismantling and assembling engine	9
1.1 Part I: assembly overview - toothed belt drive	10
1.2 Part II: assembly overview - cylinder block	11
1.3 Removing and installing poly V-belt	12
2 Removing and installing cylinder block, sealing flange and flywheel	15
2.1 Assembly overview - aluminium cylinder block	15
2.2 Renewing crankshaft oil seal - belt pulley end	17
2.3 Renewing crankshaft sealing flange - flywheel end	18
2.4 Crankshaft dimensions	26
3 Dismantling and assembling pistons and conrods	28
3.1 Assembly overview	28
3.2 Piston and cylinder dimensions	31
15 - Cylinder head, valve gear	32
1 Dismantling and assembling cylinder head	32
1.1 Assembly overview	32
1.2 Removing, installing and tensioning toothed belt	35
1.3 Checking semi-automatic toothed belt tensioning roller	37
1.4 Removing and installing cylinder head	39
1.5 Checking compression	44
2 Repairing valve gear	47
2.1 Assembly overview	47
2.2 Reworking valve seats	49
2.3 Renewing camshaft oil seal	51
2.4 Removing and installing cylinder head cover and camshaft	52
2.5 Checking valve guides	55
2.6 Renewing valve stem seals	56
17 - Lubrication	59
1 Removing and installing parts of lubrication system	59
1.1 Engine oil	59
1.2 Assembly overview	59
1.3 Removing and installing oil sump	61
1.4 Removing and installing oil pump	63
1.5 Checking oil pressure and oil pressure switch	66
19 - Cooling	69
1 Removing and installing parts of cooling system	69



1.1	Assembly overview - parts of cooling system, body side	69
1.2	Assembly overview - parts of cooling system, engine side	71
1.3	Coolant hose schematic diagram	73
1.4	Draining and filling coolant	74
1.5	Removing and installing radiator	76
1.6	Checking cooling system for leaks	77
20	- Fuel supply system	79
1	Removing and installing parts of fuel supply system	79
1.1	Assembly overview - removing and installing fuel tank with attachments and fuel filter ..	79
1.2	Safety precautions when working on fuel supply system	81
1.3	Rules for cleanliness	82
1.4	Crash fuel shut-off	82
1.5	Removing and installing fuel delivery unit	82
1.6	Removing and installing fuel tank	84
1.7	Checking fuel pump	85
2	Electronic power control (EPC)	92
2.1	Assembly overview	92
2.2	Function of EPC system	92
3	Activated charcoal filter system	94
3.1	Function	94
3.2	Assembly overview - repairing activated charcoal filter system components	94
3.3	Checking fuel tank breather	95
24	- Mixture preparation - injection	98
1	Repairing injection system	98
1.1	General notes on injection	98
1.2	Safety precautions	98
1.3	Rules for cleanliness	99
1.4	Technical data	100
1.5	Assembly overview - dismantling and assembling intake manifold	100
1.6	Assembly overview - dismantling and assembling fuel rail with injectors	102
1.7	Assembly overview - dismantling and assembling air filter housing	102
1.8	Cleaning throttle valve module J338	104
2	Checking components	106
2.1	Checking intake air preheating	106
2.2	Check injectors for spray pattern and leakage	106
2.3	Checking injection rate of injectors	109
2.4	Checking fuel pressure regulator and holding pressure	112
2.5	Checking vacuum valve	115
3	Engine control unit	117
3.1	Removing and installing engine control unit	117
3.2	Adapting function and components	117
3.3	Reading and erasing engine control unit fault memory	118
26	- Exhaust system	120
1	Removing and installing parts of exhaust system	120
1.1	Assembly overview - exhaust manifold, front exhaust pipe and catalytic converter with attachments	120
1.2	Assembly overview - silencer with mountings	122
2	Exhaust gas recirculation system	123
2.1	Assembly overview - repairing parts of exhaust gas recirculation system	123
28	- Ignition system	124
1	Repairing ignition system	124



1.1	General notes on ignition system	124
1.2	Assembly overview - ignition system components	124
1.3	Safety precautions	125
1.4	Test data, spark plugs	126