



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Securing engine to assembly stand	7
1.4 Notes on installing	7
1.5 Tightening torques	9
1.6 Assembly mountings	9
1.7 Additional information and removal instructions for vehicles with air conditioner	10
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Dismantling and assembling engine	12
1.2 Removing and installing ribbed belt	20
2 Removing and installing cylinder block, sealing flange and flywheel	22
2.1 Removing and installing cylinder block, sealing flange and flywheel	22
2.2 Aluminium cylinder block	22
2.3 Renewing crankshaft oil seal -belt pulley end-	25
2.4 Renewing crankshaft sealing flange -flywheel end-	27
3 Dismantling and assembling pistons and conrods	36
3.1 Dismantling and assembling pistons and conrods	36
3.2 Piston and cylinder dimensions	41
15 - Cylinder head, Valve gear	42
1 Removing and installing cylinder head	42
1.1 Removing and installing cylinder head	42
1.2 Checking valve timing	48
1.3 Checking semi-automatic toothed belt tensioning roller	51
1.4 Removing, installing and tensioning toothed belts	54
1.5 Removing and installing camshaft housing	61
1.6 Removing and installing cylinder head	64
1.7 Checking compression pressures	67
2 Servicing valve gear	69
2.1 Servicing valve gear	69
2.2 Reworking valve seats	78
2.3 Removing and installing camshaft adjuster and exhaust camshaft sprocket	80
2.4 Renewing camshaft oil seals	87
2.5 Checking valve guides	90
2.6 Renewing valve guides	91
2.7 Renewing valve stem seals	92
17 - Lubrication	95
1 Removing and installing parts of the lubrication system	95
1.1 Removing and installing parts of the lubrication system	95
1.2 Removing and installing oil sump	101
1.3 Removing and installing oil pump	104
1.4 Checking oil pressure and oil pressure switch	107



19 - Cooling system	109
1 Removing and installing parts of cooling system	109
1.1 Removing and installing parts of cooling system	109
1.2 Parts of cooling system body side	110
1.3 Checking coolant temperature sender -radiator outlet-	113
1.4 Parts of cooling system engine side	115
1.5 Coolant hose connection diagram	120
1.6 Draining and filling cooling system	122
1.7 Removing and installing radiator	124
1.8 Removing and installing coolant pump	126
1.9 Dismantling and assembling coolant distribution housing	128
20 - Fuel supply system	130
1 Removing and installing parts of fuel supply system	130
1.1 Removing and installing parts of fuel supply system	130
1.2 Removing and installing fuel tank with its attachments and fuel filter	131
1.3 Safety precautions when working on the fuel supply system	135
1.4 Rules for cleanliness	136
1.5 Removing and installing fuel delivery unit	136
1.6 Removing and installing fuel tank	138
1.7 Checking fuel pump	140
1.8 Removing and installing high-pressure pump	146
2 Electronic power control (EPC)	148
2.1 Electronic power control (EPC)	148
2.2 Function of EPC system	148
2.3 Servicing parts of electronic power control (EPC)	149
3 Activated charcoal filter system	150
3.1 Activated charcoal filter system	150
3.2 Function	150
3.3 Servicing parts of the activated charcoal filter system	151
3.4 Checking fuel tank breather	153
24 - Mixture preparation, Injection	155
1 Servicing injection	155
1.1 Servicing injection	155
1.2 General notes on injection	155
1.3 Removing and installing parts of the injection system	156
1.4 Dismantling and assembling intake manifold	161
1.5 Dismantling and assembling fuel rail with injectors	169
1.6 Dismantling and assembling air cleaner	172
1.7 Removing and installing injectors	175
1.8 Safety precautions	180
1.9 Rules for cleanliness	181
1.10 Technical data	181
2 Checking components	182
2.1 Checking components	182
2.2 Removing and installing fuel pressure regulator and fuel metering valve	182
2.3 Checking fuel pressure regulator and holding pressure	184
2.4 Removing and installing engine control unit	187
2.5 Interrogating and erasing engine control unit fault memory	188
2.6 Adapting functions and components	189
26 - Exhaust system	191
1 Removing and installing parts of exhaust system	191
1.1 Removing and installing parts of exhaust system	191
1.2 Exhaust manifold, front exhaust pipe and catalyst with attachments	191



2	Exhaust gas recirculation system	199
2.1	Exhaust gas recirculation system	199
2.2	Servicing parts of exhaust gas recirculation system	200
28	Ignition system	202
1	Servicing ignition system	202
1.1	Servicing ignition system	202
1.2	General notes on ignition system	202
1.3	Removing and installing parts of the ignition system	203
1.4	Safety precautions	205
1.5	Test data, spark plugs	206