



Contents

01 - Self-diagnosis	1
1 General to self-diagnosis	1
1.1 General to self-diagnosis	1
1.2 Features of self-diagnosis	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
1.5 Connecting Vehicle Diagnosis, Testing and Information system VAS 5051 and selecting engine electronics control unit	5
2 Fault memory	8
2.1 Fault memory	8
2.2 Interrogating and erasing fault memory	8
3 Fault table, fault codes 00282...00530	10
3.1 Fault table, fault codes 00282...00530	10
4 Fault table, fault codes 00533...65535	15
4.1 Fault table, fault codes 00533...65535	15
5 Final control diagnosis	20
5.1 Final control diagnosis	20
5.2 Performing final control diagnosis	20
6 Measured value blocks	24
6.1 Measured value blocks	24
6.2 Safety precautions	24
6.3 Read measured value block and basic settings	24
6.4 Evaluating measured value blocks, display groups 000 - 005	25
6.5 Evaluating measured value blocks, display groups 006 - 013	28
6.6 Evaluating measured value blocks, display groups 014 - 099	33
24 - Mixture preparation, Injection	37
1 Servicing injection system	37
1.1 Servicing injection system	37
1.2 Fitting locations overview	37
1.3 General notes on injection	39
1.4 Removing and installing parts of the injection system	41
1.5 Dismantling and assembling intake manifold	47
1.6 Dismantling and assembling fuel rail	50
1.7 Dismantling and assembling air cleaner	52
1.8 Removing and installing air cleaner	55
1.9 Safety precautions	56
1.10 Rules for cleanliness	56
1.11 Technical data	56
2 Checking components	57
2.1 Checking components	57
2.2 Checking Lambda probe heating	57
2.3 Checking throttle valve control part	59
2.4 Checking coolant temperature sender	66
2.5 Checking intake manifold pressure sender	68
2.6 Checking intake air temperature sender	69
2.7 Checking engine speed sender	72
2.8 Checking injectors	74
2.9 Checking fuel pressure regulator and holding pressure	77
2.10 Checking intake air system for leaks (unmetered air)	80
2.11 Checking intake air preheating	81
3 Checking functions	82
3.1 Checking functions	82



3.2	Idling check	82
3.3	Checking Lambda control	83
3.4	Checking engine operating mode	88
3.5	Checking driving characteristics after a cold start	90
4	Engine control unit	91
4.1	Engine control unit	91
4.2	Checking control unit voltage supply	91
4.3	Replacing engine control unit	93
4.4	Coding engine control unit	94
4.5	Adapting engine control unit to throttle valve control part	95
4.6	Matching engine control unit to electronic immobilizer	97
5	Checking additional signals	98
5.1	Checking additional signals	98
5.2	Checking signal from/to air conditioning system	98
5.3	Testing speed signal	99
5.4	Checking engine speed signal	101
28	- Ignition system	102
1	Servicing ignition system	102
1.1	Servicing ignition system	102
1.2	General notes on ignition system	102
1.3	Removing and installing parts of the ignition system	103
1.4	Safety precautions	105
1.5	Test data, spark plugs	106
1.6	Checking ignition coils with output stage	106
1.7	Checking knock sensor	109