



Contents

01 - Self-diagnosis	1
1 General to self-diagnosis	1
1.1 General to self-diagnosis	1
1.2 Features of self-diagnosis	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
1.5 Connecting Vehicle Diagnosis, Testing and Information system VAS 5051 and selecting engine electronics control unit	4
2 Fault memory	7
2.1 Fault memory	7
2.2 Interrogating and erasing fault memory	7
3 Fault table, fault codes 00282...00537	9
3.1 Fault table, fault codes 00282...00537	9
4 Fault table, fault codes 00543...65535	13
4.1 Fault table, fault codes 00543...65535	13
5 Final control diagnosis	15
5.1 Final control diagnosis	15
5.2 Performing final control diagnosis	15
6 Measured value blocks	18
6.1 Measured value blocks	18
6.2 Safety precautions	18
6.3 Read measured value block	18
6.4 Evaluating measured value blocks	19
24 - Mixture preparation, Injection	23
1 Servicing injection system	23
1.1 Servicing injection system	23
1.2 Fitting locations overview	23
1.3 General notes on injection	26
1.4 Removing and installing parts of the injection system	27
1.5 Dismantling and assembling intake manifold	35
1.6 Dismantling and assembling fuel rail with injectors	38
1.7 Dismantling and assembling air cleaner	40
1.8 Safety precautions	43
1.9 Rules for cleanliness	44
1.10 Technical data	44
2 Checking components	45
2.1 Checking components	45
2.2 Checking Lambda probe heating	45
2.3 Checking throttle valve control part	47
2.4 Checking intake manifold pressure sender	55
2.5 Checking intake air temperature sender	56
2.6 Checking coolant temperature sender	60
2.7 Idling speed boost	63
2.8 Checking injectors	66
2.9 Checking fuel pressure regulator and holding pressure	72
2.10 Checking intake air system for leaks (unmetered air)	76
2.11 Checking intake air preheating	77
3 Checking functions	77
3.1 Checking functions	77
3.2 Checking Lambda probe and Lambda control	77
3.3 Checking engine operating mode	81
4 Engine control unit	83



4.1	Engine control unit	83
4.2	Checking control unit voltage supply	83
4.3	Replacing engine control unit	85
4.4	Adapting engine control unit to throttle valve control part	86
4.5	Matching engine control unit to electronic immobilizer	87
5	Checking additional signals	88
5.1	Checking additional signals	88
5.2	Checking speed signal	88
5.3	Checking signal from/to air conditioning system	90
28 - Ignition system	93	
1	Servicing ignition system	93
1.1	Servicing ignition system	93
1.2	General notes on ignition system	93
1.3	Removing and installing parts of the ignition system	94
1.4	Dismantling and assembling distributor	97
1.5	Safety precautions	98
1.6	Adjustment data, Spark plugs	98
1.7	Checking and adjusting ignition timing	98
1.8	Checking Hall sender	100
1.9	Checking ignition transformer and output stage	101
1.10	Checking knock sensor	104