



## Contents

<b>00 - Technical data . . . . .</b>	<b>1</b>
1 <b>Technical data . . . . .</b>	<b>1</b>
1.1   Technical data . . . . .	1
1.2   Engine number . . . . .	1
1.3   Engine data . . . . .	1
<b>10 - Removing and installing engine . . . . .</b>	<b>3</b>
1 <b>Removing and installing engine . . . . .</b>	<b>3</b>
1.1   Removing and installing engine . . . . .	3
1.2   Notes on removing . . . . .	4
1.3   Notes on installing . . . . .	7
1.4   Tightening torques . . . . .	8
1.5   Assembly mountings . . . . .	8
1.6   Additional information and removal instructions for vehicles with air conditioner . . . . .	9
<b>13 - Crankshaft group . . . . .</b>	<b>11</b>
1 <b>Dismantling and assembling engine . . . . .</b>	<b>11</b>
1.1   Dismantling and assembling engine . . . . .	11
1.2   Removing and installing ribbed belt . . . . .	15
2 <b>Dismantling and assembling cylinder block, crankshaft and flywheel . . . . .</b>	<b>22</b>
2.1   Dismantling and assembling cylinder block, crankshaft and flywheel . . . . .	22
2.2   Renewing crankshaft oil seal -belt pulley end . . . . .	27
3 <b>Dismantling and assembling pistons, conrods and cylinder liners . . . . .</b>	<b>30</b>
3.1   Dismantling and assembling pistons, conrods and cylinder liners . . . . .	30
<b>15 - Cylinder head, Valve gear . . . . .</b>	<b>37</b>
1 <b>Removing and installing cylinder head . . . . .</b>	<b>37</b>
1.1   Removing and installing cylinder head . . . . .	37
1.2   Removing and installing cylinder head . . . . .	40
1.3   Servicing cylinder head . . . . .	44
1.4   Checking valve guides . . . . .	45
1.5   Reworking valve seats . . . . .	46
1.6   Basic setting of hydraulic valve clearance compensation . . . . .	47
1.7   Checking compression pressures . . . . .	49
2 <b>Servicing valve gear . . . . .</b>	<b>51</b>
2.1   Servicing valve gear . . . . .	51
2.2   Removing and installing camshaft . . . . .	51
2.3   Removing and installing rocker arms . . . . .	53
2.4   Checking hydraulic cam followers . . . . .	55
<b>17 - Lubrication . . . . .</b>	<b>57</b>
1 <b>Removing and installing parts of the lubrication system . . . . .</b>	<b>57</b>
1.1   Removing and installing parts of the lubrication system . . . . .	57
1.2   Checking oil pressure and oil pressure switch . . . . .	62
<b>19 - Cooling system . . . . .</b>	<b>64</b>
1 <b>Removing and installing parts of cooling system . . . . .</b>	<b>64</b>
1.1   Removing and installing parts of cooling system . . . . .	64
1.2   Parts of cooling system body side . . . . .	65
1.3   Parts of cooling system engine side . . . . .	68
1.4   Draining and filling cooling system . . . . .	73
1.5   Removing and installing radiator . . . . .	76
1.6   Removing and installing coolant pump . . . . .	78



<b>20 - Fuel supply system . . . . .</b>	<b>81</b>
1 <b>Removing and installing parts of fuel supply system . . . . .</b>	<b>81</b>
1.1    Removing and installing parts of fuel supply system . . . . .	81
1.2    Removing and installing fuel tank with its attachments and fuel filter . . . . .	82
1.3    Safety precautions when working on the fuel supply system . . . . .	86
1.4    Rules for cleanliness . . . . .	87
1.5    Removing and installing fuel delivery unit . . . . .	87
1.6    Removing and installing fuel tank . . . . .	88
1.7    Checking fuel pump . . . . .	90
1.8    Servicing parts of the activated charcoal filter system . . . . .	96
1.9    Checking fuel tank breather . . . . .	98
2 <b>Accelerator mechanism . . . . .</b>	<b>100</b>
2.1    Accelerator mechanism . . . . .	100
2.2    Servicing accelerator mechanism . . . . .	100
2.3    Adjusting throttle cable . . . . .	101
<b>26 - Exhaust system . . . . .</b>	<b>102</b>
1 <b>Removing and installing parts of exhaust system . . . . .</b>	<b>102</b>
1.1    Removing and installing parts of exhaust system . . . . .	102
1.2    Exhaust manifold, front exhaust pipe and catalyst with attachments . . . . .	102
1.3    Silencer with mountings . . . . .	104