



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Tools	2
1.2 Notes on removing	3
1.3 Securing engine to assembly stand	5
1.4 Notes on installing	5
1.5 Specified torques	6
1.6 Assembly mountings	7
1.7 Additional notes and assembly work for vehicles with air conditioner	7
13 - Crankshaft group	9
1 Crankshaft drive	9
1.1 Dismantling and assembling engine	10
1.2 Removing and installing poly V-belt	12
1.3 Removing, installing and tensioning toothed belt	14
1.4 Checking semi-automatic toothed belt tensioning roller	16
2 Removing and installing cylinder block, sealing flange and flywheel	19
2.1 Aluminium cylinder block	19
2.2 Renewing crankshaft oil seal on pulley end	21
2.3 Crankshaft dimensions	22
3 Dismantling and assembling pistons and conrods	23
3.1 Dismantling and assembling pistons and conrods	23
3.2 Piston and cylinder dimensions	26
15 - Cylinder head, valve gear	27
1 Removing and installing cylinder head	27
1.1 Assembly overview - cylinder head	27
1.2 Removing and installing cylinder head	28
1.3 Checking compression	31
2 Repairing valve gear	34
2.1 Assembly overview - valve gear	34
2.2 Reworking valve seats	36
2.3 Renewing camshaft oil seal	38
2.4 Checking hydraulic bucket tappets	40
2.5 Removing and installing camshaft	41
2.6 Checking valve guides	42
2.7 Renewing valve guides	43
2.8 Renewing valve stem seals	44
17 - Lubrication	47
1 Lubrication	47
1.1 Removing and installing parts of lubrication system	47
1.2 Removing and installing sump	49
1.3 Removing and installing oil pump	51
1.4 Checking oil pressure and oil pressure switch	54
19 - Cooling	56
1 Removing and installing parts of cooling system	56



1.1	Parts of cooling system, body side	56
1.2	Parts of cooling system - engine side	58
1.3	Coolant hose connection diagram	60
1.4	Draining and filling with coolant	60
1.5	Removing and installing radiator	62
20	- Fuel supply system	65
1	Removing and installing parts of fuel supply system	65
1.1	Removing and installing fuel tank with attachments and fuel filter	65
1.2	Safety precautions when working on fuel supply system	67
1.3	Rules for cleanliness	67
1.4	Removing and installing fuel delivery unit	68
1.5	Removing and installing fuel tank	69
1.6	Crash fuel shut-off	70
1.7	Checking fuel pump	71
2	Accelerator mechanism	77
2.1	Repairing accelerator mechanism	77
2.2	Adjusting accelerator cable	77
3	Activated charcoal filter system	78
3.1	Repairing parts of activated charcoal filter system	78
3.2	Checking fuel tank breather	79
26	- Exhaust system	81
1	Removing and installing parts of exhaust system	81
1.1	Exhaust manifold, front exhaust pipe and catalytic converter with attachments	81
1.2	Silencer with mountings	82