



## Contents

<b>01 - Self-diagnosis</b> . . . . .	<b>1</b>
<b>1 Self-diagnosis</b> . . . . .	<b>1</b>
1.1 Self-diagnosis . . . . .	1
1.2 Features of self-diagnosis . . . . .	1
1.3 Technical data of self-diagnosis . . . . .	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine control unit . . . . .	2
1.5 Connecting Vehicle Diagnosis, Testing and Information system VAS 5051 and selecting engine electronics control unit . . . . .	4
<b>2 Fault memory</b> . . . . .	<b>7</b>
2.1 Fault memory . . . . .	7
2.2 Interrogating fault memory . . . . .	7
2.3 Erasing fault memory . . . . .	8
<b>3 Fault table: Fault codes 00515...01282</b> . . . . .	<b>9</b>
3.1 Fault table: Fault codes 00515...01282 . . . . .	9
<b>4 Fault table: Fault codes 16485...18076</b> . . . . .	<b>11</b>
4.1 Fault table: Fault codes 16485...18076 . . . . .	11
<b>5 Final control diagnosis</b> . . . . .	<b>21</b>
5.1 Final control diagnosis . . . . .	21
5.2 Performing final control diagnosis . . . . .	21
<b>6 Measured value blocks</b> . . . . .	<b>26</b>
6.1 Measured value blocks . . . . .	26
6.2 Safety precautions . . . . .	26
6.3 Reading measured value block . . . . .	27
6.4 Measured values at idling speed . . . . .	28
6.5 Measured values at full throttle . . . . .	36
<b>23 - Mixture preparation, Injection</b> . . . . .	<b>41</b>
<b>1 Servicing Diesel direct injection system</b> . . . . .	<b>41</b>
1.1 Servicing Diesel direct injection system . . . . .	41
1.2 Safety precautions . . . . .	41
1.3 Rules for cleanliness . . . . .	42
1.4 Fitting locations overview . . . . .	42
1.5 Servicing intake manifold flap . . . . .	45
1.6 Servicing unit injector . . . . .	47
1.7 Removing and installing O rings for unit injector . . . . .	50
1.8 Removing and installing unit injector . . . . .	52
<b>2 Checking components and functions</b> . . . . .	<b>56</b>
2.1 Checking components and functions . . . . .	56
2.2 Checking Diesel direct injection system voltage supply . . . . .	56
2.3 Checking engine speed sender . . . . .	57
2.4 Checking intake manifold pressure sender and elevation sender . . . . .	58
2.5 Checking coolant temperature sender . . . . .	60
2.6 Checking brake light switch and brake pedal switch . . . . .	62
2.7 Checking clutch pedal switch . . . . .	63
2.8 Checking intake manifold temperature sender . . . . .	65
2.9 Checking fuel temperature sender . . . . .	67
2.10 Checking air mass meter . . . . .	69
2.11 Checking intake manifold flap change-over . . . . .	72
2.12 Checking intake manifold flap motor . . . . .	74
2.13 Checking unit injector valves . . . . .	76
2.14 Checking camshaft position Hall sender . . . . .	79
<b>3 Checking additional signals</b> . . . . .	<b>80</b>
3.1 Checking additional signals . . . . .	80



3.2	Checking speed signal . . . . .	80
3.3	Checking signals from/to air conditioning system . . . . .	82
3.4	Checking engine speed signal . . . . .	84
3.5	Checking cruise control system (CCS) . . . . .	85
3.6	Checking data bus . . . . .	87
<b>4</b>	<b>Replacing, coding and matching engine control unit . . . . .</b>	<b>92</b>
4.1	Replacing, coding and matching engine control unit . . . . .	92
4.2	Replacing engine control unit . . . . .	92
4.3	Coding engine control unit . . . . .	93
4.4	Matching engine control unit to electronic immobilizer . . . . .	94
<b>28</b>	<b>Glow plug system . . . . .</b>	<b>96</b>
<b>1</b>	<b>Checking glow plug system . . . . .</b>	<b>96</b>
1.1	Checking glow plug system . . . . .	96
1.2	Checking glow plugs . . . . .	97